aiwa SERVICE

XR-MD311 EZ

SERVICE MANUAL

MD/CD STEREO SYSTEM

BASIC CD MECHANISM : DA11T3C
BASIC MD MECHANISM : AZG-H A

aiwa

S/M Code No. 09-007-434-2T1

PARTS LIST

! = ⚠ SAFTY PARTS
C = Components marked
All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.
K NO. = Only use japanese.

!	C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
	O	ACCESSORY		87-006-225-010	1D	ANT,LOOP ANT NC2	EZS	XR-MD311
	O	ACCESSORY		87-A90-118-010	0E	ANT,WIRE FM(Z)	EZS	XR-MD311
	O	ACCESSORY		8A-CJ6-951-010	--	RC UNIT,RC-AAT13 EX	EZS	XR-MD311
	O	APPEARANCE		8A-CJ6-003-010	2A	CABI,CD	EZS	XR-MD311
	O	APPEARANCE		8A-CJ6-004-010	2A	LID,CD	EZS	XR-MD311
	O	APPEARANCE		8A-CJ6-005-010	1H	PANEL,SIDE L	EZS	XR-MD311
	O	APPEARANCE		8A-CJ6-006-010	1H	PANEL,SIDE R	EZS	XR-MD311
	O	APPEARANCE		8A-CJ6-023-010	2M	CABI,FR J6-EX	EZS	XR-MD311
	O	APPEARANCE		8A-CJ6-024-010	1F	CABI,REAR J6-EZ	EZS	XR-MD311
	X	APPEARANCE		8A-CQ0-043-010	0E	CUSH,TOP	EZS	XR-MD311
	O	CD		M8-ZZK-E90-070	2C	DA11T3C	EZS	XR-MD311
	O	CD	C 0700	87-010-154-080	0E	C-CAP,S 10P-50 D CH GRM	EZS	XR-MD311
	O	CD	C 0701	87-010-401-080	0E	CAP,E 1-50 M 11L SME	EZS	XR-MD311
	O	CD	C 0702	87-010-154-080	0E	C-CAP,S 10P-50 D CH GRM	EZS	XR-MD311
	O	CD	C 0704	87-016-369-080	0E	C-CAP,S 0.033-25 K B GRM	EZS	XR-MD311
	O	CD	C 0705	87-010-197-080	0E	C-CAP,S 0.01-25 K B C2012	EZS	XR-MD311
	O	CD	C 0706	87-016-369-080	0E	C-CAP,S 0.033-25 K B GRM	EZS	XR-MD311
	O	CD	C 0707	87-010-197-080	0E	C-CAP,S 0.01-25 K B C2012	EZS	XR-MD311
	O	CD	C 0710	87-016-081-080	0E	C-CAP,S 0.1-16 K R GRM	EZS	XR-MD311
	O	CD	C 0711	87-010-596-080	0E	C-CAP,S 0.047-16 K R C2012	EZS	XR-MD311
	O	CD	C 0712	87-010-596-080	0E	C-CAP,S 0.047-16 K R C2012	EZS	XR-MD311
	O	CD	C 0713	87-012-140-080	0E	C-CAP,S 470P-50 J CH	EZS	XR-MD311
	O	CD	C 0714	87-010-213-080	0E	C-CAP,S 0.015-25 K B GRM	EZS	XR-MD311
	O	CD	C 0715	87-010-596-080	0E	C-CAP,S 0.047-16 K R C2012	EZS	XR-MD311
	O	CD	C 0716	87-016-081-080	0E	C-CAP,S 0.1-16 K R GRM	EZS	XR-MD311
	O	CD	C 0717	87-016-081-080	0E	C-CAP,S 0.1-16 K R GRM	EZS	XR-MD311
	O	CD	C 0718	87-010-198-080	0E	C-CAP,S 0.022-25 K B C2012	EZS	XR-MD311
	O	CD	C 0719	87-010-263-080	0E	CAP,E 100-10 M 11L SME	EZS	XR-MD311
	O	CD	C 0720	87-010-382-080	0E	CAP,E 22-25 M 11L SME	EZS	XR-MD311
	O	CD	C 0721	87-010-263-080	0E	CAP,E 100-10 M 11L SME	EZS	XR-MD311
	O	CD	C 0722	87-016-081-080	0E	C-CAP,S 0.1-16 K R GRM	EZS	XR-MD311
	O	CD	C 0723	87-016-081-080	0E	C-CAP,S 0.1-16 K R GRM	EZS	XR-MD311
	O	CD	C 0724	87-016-081-080	0E	C-CAP,S 0.1-16 K R GRM	EZS	XR-MD311
	O	CD	C 0725	87-016-081-080	0E	C-CAP,S 0.1-16 K R GRM	EZS	XR-MD311
	O	CD	C 0726	87-010-182-080	0E	C-CAP,S 2200P-50 K B C2012	EZS	XR-MD311
	O	CD	C 0727	87-010-546-080	0E	CAP,E 0.33-50 M 11L SME	EZS	XR-MD311
	O	CD	C 0728	87-012-158-080	0E	C-CAP,S 390P-50 J CH GRM	EZS	XR-MD311
	O	CD	C 0729	87-010-263-080	0E	CAP,E 100-10 M 11L SME	EZS	XR-MD311
	O	CD	C 0730	87-010-197-080	0E	C-CAP,S 0.01-25 K B C2012	EZS	XR-MD311
	O	CD	C 0731	87-010-197-080	0E	C-CAP,S 0.01-25 K B C2012	EZS	XR-MD311
	O	CD	C 0732	87-010-178-080	0E	C-CAP,S 1000P-50 K B C2012	EZS	XR-MD311
	O	CD	C 0733	87-010-263-080	0E	CAP,E 100-10 M 11L SME	EZS	XR-MD311
	O	CD	C 0734	87-010-263-080	0E	CAP,E 100-10 M 11L SME	EZS	XR-MD311
	O	CD	C 0735	87-010-403-040	0E	CAP,E 3.3-50 M 11L SME	EZS	XR-MD311
	O	CD	C 0736	87-010-197-080	0E	C-CAP,S 0.01-25 K B C2012	EZS	XR-MD311
	O	CD	C 0737	87-010-263-040	0E	CAP,E 100-10 M 11L SME	EZS	XR-MD311
	O	CD	C 0739	87-010-186-080	0E	C-CAP,S 4700P-50 K B C2012	EZS	XR-MD311
	O	CD	C 0741	87-016-081-080	0E	C-CAP,S 0.1-16 K R GRM	EZS	XR-MD311
	O	CD	C 0742	87-010-186-080	0E	C-CAP,S 4700P-50 K B C2012	EZS	XR-MD311
	O	CD	C 0743	87-010-197-080	0E	C-CAP,S 0.01-25 K B C2012	EZS	XR-MD311
	O	CD	C 0744	87-010-236-080	0E	CAP,E 1000-10 M SME	EZS	XR-MD311
	O	CD	C 0745	87-010-596-080	0E	C-CAP,S 0.047-16 K R C2012	EZS	XR-MD311
	O	CD	C 0746	87-010-197-080	0E	C-CAP,S 0.01-25 K B C2012	EZS	XR-MD311
	O	CD	C 0747	87-016-526-080	0E	C-CAP,S 0.47-16 BK	EZS	XR-MD311
	O	CD	C 0748	87-012-156-080	0E	C-CAP,S 220P-50 J CH GRM	EZS	XR-MD311
	O	CD	C 0749	87-010-188-080	0E	C-CAP,S 6800P-50 K B C2012	EZS	XR-MD311
	O	CD	C 0750	87-A10-826-080	0E	C-CAP,S 1-10 K B	EZS	XR-MD311
	X	CD	C 0753	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	O	CD	C 0754	87-010-197-080	0E	C-CAP,S 0.01-25 K B C2012	EZS	XR-MD311
	O	CD	C 0755	87-010-221-080	0E	CAP,E 470-10 M SME	EZS	XR-MD311
	O	CD	C 0759	87-016-081-080	0E	C-CAP,S 0.1-16 K R GRM	EZS	XR-MD311
	O	CD	C 0760	87-016-088-080	0E	CAP,E 220-6.3 M SR	EZS	XR-MD311
	O	CD	C 0761	87-010-314-080	0E	C-CAP,S 22P-50 J CH GRM	EZS	XR-MD311
	O	CD	C 0762	87-010-260-080	0E	CAP,E 47-25 M 11L SME	EZS	XR-MD311
	O	CD	C 0763	87-010-197-080	0E	C-CAP,S 0.01-25 K B C2012	EZS	XR-MD311
	O	CD	C 0764	87-016-081-080	0E	C-CAP,S 0.1-16 K R GRM	EZS	XR-MD311
	O	CD	C 0765	87-010-382-080	0E	CAP,E 22-25 M 11L SME	EZS	XR-MD311
	O	CD	C 0766	87-016-081-080	0E	C-CAP,S 0.1-16 K R GRM	EZS	XR-MD311
	O	CD	C 0767	87-012-154-080	0E	C-CAP,S 150P-50 J CH GRM	EZS	XR-MD311
	O	CD	C 0768	87-012-154-080	0E	C-CAP,S 150P-50 J CH GRM	EZS	XR-MD311

PARTS LIST

! = ⚠ SAFTY PARTS
C = Components marked
All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.
K NO. = Only use japanese.

!	C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
	O	CD	C 0769	87-010-371-080	0E	CAP,E 470-6.3 M SME	EZS	XR-MD311
	O	CD	C 0770	87-010-197-080	0E	C-CAP,S 0.01-25 K B C2012	EZS	XR-MD311
	O	CD	C 0771	87-010-176-080	0E	C-CAP,S 680P-50 J SL	EZS	XR-MD311
	O	CD	C 0772	87-010-176-080	0E	C-CAP,S 680P-50 J SL	EZS	XR-MD311
	O	CD	C 0773	87-010-154-080	0E	C-CAP,S 10P-50 D CH GRM	EZS	XR-MD311
	O	CD	C 0774	87-010-154-080	0E	C-CAP,S 10P-50 D CH GRM	EZS	XR-MD311
	O	CD	C 0775	87-012-140-080	0E	C-CAP,S 470P-50 J CH	EZS	XR-MD311
	O	CD	C 0776	87-016-081-080	0E	C-CAP,S 0.1-16 K R GRM	EZS	XR-MD311
	O	CD	C 0777	87-010-405-080	0E	CAP,E 10-50 M 11L SME	EZS	XR-MD311
	O	CD	C 0778	87-010-405-080	0E	CAP,E 10-50 M 11L SME	EZS	XR-MD311
	O	CD	C 0779	87-010-178-080	0E	C-CAP,S 1000P-50 K B C2012	EZS	XR-MD311
	O	CD	C 0780	87-010-178-080	0E	C-CAP,S 1000P-50 K B C2012	EZS	XR-MD311
	O	CD	C 0781	87-010-181-080	0E	C-CAP,S 1800P-50 K B GRM	EZS	XR-MD311
	O	CD	C 0782	87-010-181-080	0E	C-CAP,S 1800P-50 K B GRM	EZS	XR-MD311
	O	CD	C 0783	87-016-081-080	0E	C-CAP,S 0.1-16 K R GRM	EZS	XR-MD311
	O	CD	C 0784	87-010-197-080	0E	C-CAP,S 0.01-25 K B C2012	EZS	XR-MD311
	O	CD	C 0785	87-010-322-080	0E	C-CAP,S 100P-50 J CH GRM	EZS	XR-MD311
	O	CD	C 0786	87-010-154-080	0E	C-CAP,S 10P-50 D CH GRM	EZS	XR-MD311
	O	CD	C 0787	87-010-322-080	0E	C-CAP,S 100P-50 J CH GRM	EZS	XR-MD311
	O	CD	C 0788	87-010-154-080	0E	C-CAP,S 10P-50 D CH GRM	EZS	XR-MD311
	O	CD	C 0789	87-010-154-080	0E	C-CAP,S 10P-50 D CH GRM	EZS	XR-MD311
	O	CD	C 0790	87-010-322-080	0E	C-CAP,S 100P-50 J CH GRM	EZS	XR-MD311
	O	CD	C 0791	87-010-318-080	0E	C-CAP,S 47P-50 J CH GRM	EZS	XR-MD311
	O	CD	C 0800	87-018-195-080	0E	CAP,TC U 1200P-16 N X UP050	EZS	XR-MD311
	O	CD	C 0801	87-018-133-080	0E	CAP,TC U 4700P-16 N X UP050	EZS	XR-MD311
	O	CD	C 0802	87-018-209-080	0E	CAP,TC U 0.1-50 Z F UP050	EZS	XR-MD311
	O	CD	C 0803	87-018-209-080	0E	CAP,TC U 0.1-50 Z F UP050	EZS	XR-MD311
	O	CD	C 0810	87-010-596-080	0E	C-CAP,S 0.047-16 K R C2012	EZS	XR-MD311
	O	CD	CN 0702	87-A60-667-010	0E	CONN,3P H 2MM JMT	EZS	XR-MD311
	O	CD	CN 0704	87-A60-619-010	0E	CONN,2P V 2MM JMT	EZS	XR-MD311
	O	CD	CN 0705	87-A60-620-010	0E	CONN,3P V 2MM JMT	EZS	XR-MD311
!	O	CD	CN 0707	87-A60-424-010	0E	CONN,16P V TOC-B	EZS	XR-MD311
	O	CD	CN 0710	87-099-555-010	0E	CONN,7P TUC-P7X-B1	EZS	XR-MD311
!	O	CD	CN 0720	87-099-554-010	0E	CONN,6P H TUC-P6X-B1	EZS	XR-MD311
	O	CD	CNA0700	8A-CJ6-633-010	1A	CONN ASSY,7P H CD-SIG	EZS	XR-MD311
	O	CD	CNA0705	8A-CJ6-639-010	0E	CONN ASSY,3P V CD-SW	EZS	XR-MD311
	O	CD	CNA0706	88-805-061-220	1A	CONN ASSY,6P 120	EZS	XR-MD311
	S	CD	D 0700	87-020-465-080	0E	DIODE,1SS133	EZS	XR-MD311
	X	CD	D 0701	88-100-000-010	0E	PLATING-JW, 0.58 SN95	EZS	XR-MD311
	S	CD	D 0704	87-070-136-080	0E	ZENER,MTZJ5.1B	EZS	XR-MD311
	S	CD	IC 0701	87-A20-547-010	1E	C-IC,CXA1992AR	EZS	XR-MD311
	S	CD	IC 0702	87-A20-546-010	2A	C-IC,CXD2589Q	EZS	XR-MD311
	S	CD	IC 0703	87-A20-445-010	1F	IC,BA5936S	EZS	XR-MD311
	S	CD	IC 0704	87-017-917-080	1A	C-IC,BU4066BCF	EZS	XR-MD311
	S	CD	IC 0705	87-001-792-080	1B	C-IC,NJM2100M	EZS	XR-MD311
	S	CD	IC 0706	87-A20-611-080	0E	IC,M51943BSL-700A	EZS	XR-MD311
	S	CD	IC 0801	87-A21-175-040	1A	C-IC,TC74VHC14FT	EZS	XR-MD311
	X	CD	JR 0701	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	CD	JR 0702	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	CD	JR 0703	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	CD	JR 0704	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	CD	JR 0705	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	CD	JR 0707	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	CD	JR 0708	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	CD	JR 0710	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	CD	JR 0711	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	CD	JR 0712	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	CD	JR 0713	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	CD	JR 0714	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	CD	JR 0715	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	CD	JR 0717	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	CD	JR 0718	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	CD	JR 0719	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	CD	JR 0720	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	CD	JR 0721	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	CD	JR 0722	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	CD	JR 0723	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	CD	JR 0724	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	CD	JR 0729	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	CD	JR 0750	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311

PARTS LIST

! = ⚠ SAFTY PARTS
C = Components marked
All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.
K NO. = Only use japanese.

!	C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
	X	CD	JR 0760	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	CD	JR 0761	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	CD	JR 0802	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	CD	JR 0804	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	O	CD	L 0701	87-003-102-080	0E	COIL,10UH J LAL02	EZS	XR-MD311
	O	CD	L 0710	87-003-102-080	0E	COIL,10UH J LAL02	EZS	XR-MD311
	O	CD	L 0801	87-008-372-010	0E	FLTR,EMIBL01 RN1	EZS	XR-MD311
	O	CD	L 0802	87-008-372-010	0E	FLTR,EMIBL01 RN1	EZS	XR-MD311
	S	CD	Q 0700	87-026-236-080	0E	C-TR,DTC124EK	EZS	XR-MD311
	S	CD	Q 0701	89-110-155-080	0E	TR,2SA1015GR	EZS	XR-MD311
	S	CD	Q 0702	89-113-184-080	0E	TR,2SA1318T	EZS	XR-MD311
	S	CD	Q 0705	87-A30-047-080	0E	TR,CSD655E	EZS	XR-MD311
	S	CD	Q 0706	87-A30-047-080	0E	TR,CSD655E	EZS	XR-MD311
	S	CD	Q 0707	87-A30-047-080	0E	TR,CSD655E	EZS	XR-MD311
	S	CD	Q 0708	87-A30-047-080	0E	TR,CSD655E	EZS	XR-MD311
	S	CD	Q 0709	87-A30-087-080	0E	C-FET,2SK2158	EZS	XR-MD311
	S	CD	Q 0710	87-A30-087-080	0E	C-FET,2SK2158	EZS	XR-MD311
	S	CD	Q 0711	87-A30-074-080	0E	C-TR,RT1P 141C	EZS	XR-MD311
	S	CD	Q 0712	87-A30-073-080	0E	C-TR,RT1N 141C	EZS	XR-MD311
	O	CD	R 0700	87-022-214-080	0E	C-RES,S 100K-1/10W F	EZS	XR-MD311
	O	CD	R 0701	87-022-214-080	0E	C-RES,S 100K-1/10W F	EZS	XR-MD311
	O	CD	R 0702	83-212-863-080	0E	C-RES,S 27K-1/10W F	EZS	XR-MD311
	O	CD	R 0703	83-212-863-080	0E	C-RES,S 27K-1/10W F	EZS	XR-MD311
	X	CD	R 0704	88-118-105-080	0E	C-RES,S 1M-1/10W J	EZS	XR-MD311
	O	CD	R 0705	87-022-350-080	0E	C-RES,S 3.3K-1/10W F	EZS	XR-MD311
	O	CD	R 0706	87-022-350-080	0E	C-RES,S 3.3K-1/10W F	EZS	XR-MD311
	O	CD	R 0707	87-022-350-080	0E	C-RES,S 3.3K-1/10W F	EZS	XR-MD311
	O	CD	R 0708	87-022-350-080	0E	C-RES,S 3.3K-1/10W F	EZS	XR-MD311
	X	CD	R 0709	88-118-152-080	0E	C-RES,S 1.5K-1/10W J	EZS	XR-MD311
	X	CD	R 0710	88-118-333-080	0E	C-RES,S 33K-1/10W J	EZS	XR-MD311
	X	CD	R 0711	88-118-562-080	0E	C-RES,S 5.6K-1/10W J	EZS	XR-MD311
	X	CD	R 0712	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	CD	R 0713	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	O	CD	R 0714	87-022-367-080	0E	C-RES,S 150K-1/10W F	EZS	XR-MD311
	O	CD	R 0715	87-022-367-080	0E	C-RES,S 150K-1/10W F	EZS	XR-MD311
	X	CD	R 0716	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	CD	R 0717	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	CD	R 0718	88-118-104-080	0E	C-RES,S 100K-1/10W J	EZS	XR-MD311
	X	CD	R 0719	88-118-154-080	0E	C-RES,S 150K-1/10W J	EZS	XR-MD311
	X	CD	R 0720	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	CD	R 0721	88-118-473-080	0E	C-RES,S 47K-1/10W J	EZS	XR-MD311
	X	CD	R 0722	88-118-154-080	0E	C-RES,S 150K-1/10W J	EZS	XR-MD311
	X	CD	R 0723	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	CD	R 0724	88-118-473-080	0E	C-RES,S 47K-1/10W J	EZS	XR-MD311
	X	CD	R 0725	88-118-473-080	0E	C-RES,S 47K-1/10W J	EZS	XR-MD311
	X	CD	R 0726	88-118-563-080	0E	C-RES,S 56K-1/10W J	EZS	XR-MD311
	X	CD	R 0727	88-118-153-080	0E	C-RES,S 15K-1/10W J	EZS	XR-MD311
	X	CD	R 0728	88-118-101-080	0E	C-RES,S 100-1/10W J	EZS	XR-MD311
	X	CD	R 0729	88-118-334-080	0E	C-RES,S 330K-1/10W J	EZS	XR-MD311
	X	CD	R 0730	88-118-684-080	0E	C-RES,S 680K-1/10W J	EZS	XR-MD311
	X	CD	R 0731	88-118-183-080	0E	C-RES,S 18K-1/10W J	EZS	XR-MD311
	X	CD	R 0732	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	CD	R 0733	88-118-154-080	0E	C-RES,S 150K-1/10W J	EZS	XR-MD311
	X	CD	R 0734	88-118-823-080	0E	C-RES,S 82K-1/10W J	EZS	XR-MD311
	X	CD	R 0735	88-118-474-080	0E	C-RES,S 470K-1/10W J	EZS	XR-MD311
	X	CD	R 0736	88-118-473-080	0E	C-RES,S 47K-1/10W J	EZS	XR-MD311
	X	CD	R 0737	88-118-183-080	0E	C-RES,S 18K-1/10W J	EZS	XR-MD311
	X	CD	R 0738	88-118-472-080	0E	C-RES,S 4.7K-1/10W J	EZS	XR-MD311
	X	CD	R 0739	88-118-393-080	0E	C-RES,S 39K-1/10W J	EZS	XR-MD311
	X	CD	R 0740	88-118-100-080	0E	C-RES,S 10-1/10W J	EZS	XR-MD311
	X	CD	R 0741	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	CD	R 0743	88-118-471-080	0E	C-RES,S 470-1/10W J	EZS	XR-MD311
	X	CD	R 0744	88-118-563-080	0E	C-RES,S 56K-1/10W J	EZS	XR-MD311
	X	CD	R 0745	88-118-333-080	0E	C-RES,S 33K-1/10W J	EZS	XR-MD311
	X	CD	R 0746	88-118-333-080	0E	C-RES,S 33K-1/10W J	EZS	XR-MD311
	X	CD	R 0747	88-118-104-080	0E	C-RES,S 100K-1/10W J	EZS	XR-MD311
	X	CD	R 0749	88-118-562-080	0E	C-RES,S 5.6K-1/10W J	EZS	XR-MD311
	X	CD	R 0750	88-118-562-080	0E	C-RES,S 5.6K-1/10W J	EZS	XR-MD311
	X	CD	R 0751	88-118-229-080	0E	C-RES,S 2.2-1/10W J	EZS	XR-MD311
	X	CD	R 0752	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311

PARTS LIST

! = ⚠ SAFTY PARTS
C = Components marked
All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.
K NO. = Only use japanese.

!	C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
	X	CD	R 0753	88-118-101-080	0E	C-RES,S 100-1/10W J	EZS	XR-MD311
	X	CD	R 0754	88-118-105-080	0E	C-RES,S 1M-1/10W J	EZS	XR-MD311
	X	CD	R 0755	88-118-101-080	0E	C-RES,S 100-1/10W J	EZS	XR-MD311
	X	CD	R 0756	88-118-332-080	0E	C-RES,S 3.3K-1/10W J	EZS	XR-MD311
	X	CD	R 0757	88-118-392-080	0E	C-RES,S 3.9K-1/10W J	EZS	XR-MD311
	X	CD	R 0758	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	CD	R 0759	88-118-104-080	0E	C-RES,S 100K-1/10W J	EZS	XR-MD311
	X	CD	R 0760	88-118-392-080	0E	C-RES,S 3.9K-1/10W J	EZS	XR-MD311
	X	CD	R 0762	88-118-332-080	0E	C-RES,S 3.3K-1/10W J	EZS	XR-MD311
	X	CD	R 0764	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	CD	R 0767	88-121-562-080	0E	RES,5.6K-1/8W J	EZS	XR-MD311
	X	CD	R 0768	88-121-562-080	0E	RES,5.6K-1/8W J	EZS	XR-MD311
	X	CD	R 0770	88-118-222-080	0E	C-RES,S 2.2K-1/10W J	EZS	XR-MD311
	X	CD	R 0772	88-140-229-080	0E	RES,2.2-1/2W J	EZS	XR-MD311
	X	CD	R 0773	88-118-330-080	0E	C-RES,S 33-1/10W J	EZS	XR-MD311
	X	CD	R 0774	88-121-109-080	0E	RES,1-1/8W J	EZS	XR-MD311
	X	CD	R 0775	88-121-109-080	0E	RES,1-1/8W J	EZS	XR-MD311
	X	CD	R 0776	88-121-109-080	0E	RES,1-1/8W J	EZS	XR-MD311
	X	CD	R 0777	88-121-109-080	0E	RES,1-1/8W J	EZS	XR-MD311
	X	CD	R 0778	88-118-122-080	0E	C-RES,S 1.2K-1/10W J	EZS	XR-MD311
	X	CD	R 0779	88-118-101-080	0E	C-RES,S 100-1/10W J	EZS	XR-MD311
	X	CD	R 0780	88-118-471-080	0E	C-RES,S 470-1/10W J	EZS	XR-MD311
	X	CD	R 0782	88-121-100-080	0E	RES,10-1/8W J	EZS	XR-MD311
	X	CD	R 0784	88-121-100-080	0E	RES,10-1/8W J	EZS	XR-MD311
	X	CD	R 0786	88-121-100-080	0E	RES,10-1/8W J	EZS	XR-MD311
	X	CD	R 0788	88-121-100-080	0E	RES,10-1/8W J	EZS	XR-MD311
	O	CD	R 0789	87-008-372-010	0E	FLTR,EMIBL01 RN1	EZS	XR-MD311
	X	CD	R 0790	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	CD	R 0791	88-118-272-080	0E	C-RES,S 2.7K-1/10W J	EZS	XR-MD311
	X	CD	R 0792	88-118-123-080	0E	C-RES,S 12K-1/10W J	EZS	XR-MD311
	X	CD	R 0793	88-118-123-080	0E	C-RES,S 12K-1/10W J	EZS	XR-MD311
	X	CD	R 0796	88-118-222-080	0E	C-RES,S 2.2K-1/10W J	EZS	XR-MD311
	X	CD	R 0797	88-128-101-080	0E	C-RES, 100-1/8W J	EZS	XR-MD311
	X	CD	R 0798	88-118-123-080	0E	C-RES,S 12K-1/10W J	EZS	XR-MD311
	X	CD	R 0799	88-118-123-080	0E	C-RES,S 12K-1/10W J	EZS	XR-MD311
	X	CD	R 0800	88-118-104-080	0E	C-RES,S 100K-1/10W J	EZS	XR-MD311
	X	CD	R 0801	88-118-123-080	0E	C-RES,S 12K-1/10W J	EZS	XR-MD311
	X	CD	R 0802	88-118-123-080	0E	C-RES,S 12K-1/10W J	EZS	XR-MD311
	X	CD	R 0803	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	CD	R 0804	88-118-391-080	0E	C-RES,S 390-1/10W J	EZS	XR-MD311
	X	CD	R 0805	88-118-821-080	0E	C-RES,S 820-1/10W J	EZS	XR-MD311
	X	CD	R 0806	88-118-471-080	0E	C-RES,S 470-1/10W J	EZS	XR-MD311
	X	CD	R 0807	88-118-221-080	0E	C-RES,S 220-1/10W J	EZS	XR-MD311
	X	CD	R 0808	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	CD	R 0809	88-118-221-080	0E	C-RES,S 220-1/10W J	EZS	XR-MD311
	X	CD	R 0810	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	CD	R 0811	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	CD	R 0812	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	CD	R 0813	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	CD	R 0815	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	CD	R 0816	88-118-101-080	0E	C-RES,S 100-1/10W J	EZS	XR-MD311
	X	CD	R 0817	88-118-101-080	0E	C-RES,S 100-1/10W J	EZS	XR-MD311
	X	CD	R 0818	88-118-101-080	0E	C-RES,S 100-1/10W J	EZS	XR-MD311
	X	CD	R 0819	88-118-101-080	0E	C-RES,S 100-1/10W J	EZS	XR-MD311
	X	CD	R 0820	88-118-101-080	0E	C-RES,S 100-1/10W J	EZS	XR-MD311
	X	CD	R 0821	88-118-101-080	0E	C-RES,S 100-1/10W J	EZS	XR-MD311
	X	CD	R 0822	88-118-272-080	0E	C-RES,S 2.7K-1/10W J	EZS	XR-MD311
	X	CD	R 0823	88-118-104-080	0E	C-RES,S 100K-1/10W J	EZS	XR-MD311
	X	CD	R 0824	88-118-101-080	0E	C-RES,S 100-1/10W J	EZS	XR-MD311
	X	CD	R 0830	88-118-822-080	0E	C-RES,S 8.2K-1/10W J	EZS	XR-MD311
	X	CD	R 0831	88-118-331-080	0E	C-RES,S 330-1/10W J	EZS	XR-MD311
	X	CD	R 0851	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	CD	R 0855	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	CD	R 0856	88-118-473-080	0E	C-RES,S 47K-1/10W J	EZS	XR-MD311
	O	CD	S 0701	87-A90-117-010	1A	SW,PUSH 1-1-1 MPU10371MLB0 MIC	EZS	XR-MD311
	O	CD	S 0702	87-A90-117-010	1A	SW,PUSH 1-1-1 MPU10371MLB0 MIC	EZS	XR-MD311
	X	CD	TM 0700	87-033-220-010	0E	PIN,DIA1 COATING	EZS	XR-MD311
	X	CD	TM 0701	87-033-220-010	0E	PIN,DIA1 COATING	EZS	XR-MD311
	X	CD	W 0701	89-920-030-110	0E	WIRE,UD0-3-3	EZS	XR-MD311
	X	CD	W 0702	89-920-030-110	0E	WIRE,UD0-3-3	EZS	XR-MD311

PARTS LIST

! = ⚠ SAFTY PARTS
C = Components marked
All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.
K NO. = Only use japanese.

!	C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
	X	CD	W 0703	89-920-030-110	0E	WIRE,UD0-3-3	EZS	XR-MD311
	O	CD	X 0701	87-A70-005-080	1C	VIB,XTAL 33.8688MHZ HC-49/U03	EZS	XR-MD311
	O	D-OUT/S-OUT	C 0150	87-010-178-080	0E	C-CAP,S 1000P-50 K B C2012	EZS	XR-MD311
	O	D-OUT/S-OUT	CN 0100	87-A60-619-010	0E	CONN,2P V 2MM JMT	EZS	XR-MD311
	O	D-OUT/S-OUT	CN 0703	87-A60-667-010	0E	CONN,3P H 2MM JMT	EZS	XR-MD311
	O	D-OUT/S-OUT	CNA0703	8A-CJ6-644-010	1D	CONN ASSY,3P D-I/O	EZS	XR-MD311
!	S	D-OUT/S-OUT	IC 0802	87-A20-870-010	1F	IC,GP1F37R	EZS	XR-MD311
!	O	D-OUT/S-OUT	J 0101	87-099-801-010	0E	JACK,PIN 1P BLK W/O SW	EZS	XR-MD311
	X	D-OUT/S-OUT	TM 0100	87-033-220-010	0E	PIN,DIA1 COATING	EZS	XR-MD311
	O	ELECTRICAL		87-003-317-010	1C	F-BEAD,15-25-15 E2515MRT	EZS	XR-MD311
!	X	ELECTRICAL		87-069-033-010	0E	CABLE,TIE	EZS	XR-MD311
!	O	ELECTRICAL		87-085-185-010	0E	BUSHING,AC CORD(E) CM-22B	EZS	XR-MD311
	O	ELECTRICAL		8A-CJ6-640-010	0E	FF-CABLE,12P 140MM TU-SIG	EZS	XR-MD311
	O	ELECTRICAL		8A-CJ6-641-010	0E	FF-CABLE,8P 200MM MD-CTRL	EZS	XR-MD311
	O	ELECTRICAL		8A-CJ6-642-010	1A	FF-CABLE,14P 220MM MD-SIG	EZS	XR-MD311
	O	ELECTRICAL		8A-CJ6-643-010	0E	FF-CABLE,16P 70MM CD-CTRL	EZS	XR-MD311
	O	ELECTRICAL		8A-CJ6-660-010	0E	CONN ASSY,2P V CD DOOR	EZS	XR-MD311
	X	ELECTRICAL		A8-ZZA-19Y-070	--	ZZA-1 YZRDSRPNC	EZS	XR-MD311
	O	ELECTRICAL	C 0310	87-018-134-080	0E	CAP,TC U 0.01-16 N Y UP050	EZS	XR-MD311
	X	ELECTRICAL	C 0311	88-266-910-810	0E	CAP,SC 0.1-25 K SR DD400	EZS	XR-MD311
	O	ELECTRICAL	C 0764	87-012-267-080	0E	C-CAP,U 270P-50 K B GRM	EZS	XR-MD311
	O	ELECTRICAL	LCD0500	8A-CJ6-620-010	2C	LCD ASSY,ACJ-6	EZS	XR-MD311
	O	ELECTRICAL	M 0001	87-A91-069-010	1F	MOT,RF-370CA15370	EZS	XR-MD311
	O	ELECTRICAL	PT 0200	8A-CJ6-671-010	--	PT,EZ ACJ-6	EZS	XR-MD311
!	O	ELECTRICAL	W 0200	87-A80-092-010	1C	AC CORD ASSY,E BLK SUN FAI	EZS	XR-MD311
	X	EQ/FUNCTION	*	8A-CJ6-609-010	1E	PWB,COMB MAIN	EZS	XR-MD311
	X	EQ/FUNCTION	*	8A-CJ6-610-010	--	PWB,MAIN	EZS	XR-MD311
	X	EQ/FUNCTION	*	8A-CJ6-611-010	--	PWB,POWER-SUB	EZS	XR-MD311
	X	EQ/FUNCTION	*	8A-CJ6-612-010	--	PWB,TUNER-SUB	EZS	XR-MD311
	X	EQ/FUNCTION	*	8A-CJ6-613-010	--	PWB,LINE-OUT /PT (SINGLE)	EZS	XR-MD311
	X	EQ/FUNCTION	*	8A-CJ6-614-010	--	PWB,S-OUT /D-OUT	EZS	XR-MD311
	O	EQ/FUNCTION	C 0302	87-A11-132-080	0E	CAP,TC U 0.01-50 K B	EZS	XR-MD311
	O	EQ/FUNCTION	C 0305	87-018-134-080	0E	CAP,TC U 0.01-16 N Y UP050	EZS	XR-MD311
	O	EQ/FUNCTION	C 0600	87-010-196-080	0E	C-CAP,S 0.1-25 Z F C2012	EZS	XR-MD311
	O	EQ/FUNCTION	C 0601	87-010-404-080	0E	CAP,E 4.7-50 M 11L SME	EZS	XR-MD311
	O	EQ/FUNCTION	C 0602	87-010-404-080	0E	CAP,E 4.7-50 M 11L SME	EZS	XR-MD311
	O	EQ/FUNCTION	C 0603	87-010-805-080	0E	C-CAP,S 1-16 Z F	EZS	XR-MD311
	O	EQ/FUNCTION	C 0606	87-010-071-040	0E	CAP,E 1-50 M 5L SRE	EZS	XR-MD311
	O	EQ/FUNCTION	C 0607	87-010-805-080	0E	C-CAP,S 1-16 Z F	EZS	XR-MD311
	O	EQ/FUNCTION	C 0608	87-010-381-080	0E	CAP,E 330-16 M SME	EZS	XR-MD311
	O	EQ/FUNCTION	C 0609	87-010-197-080	0E	C-CAP,S 0.01-25 K B C2012	EZS	XR-MD311
	O	EQ/FUNCTION	C 0610	87-010-197-080	0E	C-CAP,S 0.01-25 K B C2012	EZS	XR-MD311
	O	EQ/FUNCTION	C 0611	87-010-402-080	0E	CAP,E 2.2-50 M 11L SME	EZS	XR-MD311
	O	EQ/FUNCTION	C 0612	87-010-402-080	0E	CAP,E 2.2-50 M 11L SME	EZS	XR-MD311
	O	EQ/FUNCTION	C 0613	87-010-195-080	0E	C-CAP,S 0.068-25 Z F C2012	EZS	XR-MD311
	O	EQ/FUNCTION	C 0614	87-010-318-080	0E	C-CAP,S 47P-50 J CH GRM	EZS	XR-MD311
	O	EQ/FUNCTION	C 0615	87-010-318-080	0E	C-CAP,S 47P-50 J CH GRM	EZS	XR-MD311
	O	EQ/FUNCTION	C 0616	87-010-421-040	0E	CAP,E 4.7-50 M 5L SRE	EZS	XR-MD311
	O	EQ/FUNCTION	C 0617	87-010-195-080	0E	C-CAP,S 0.068-25 Z F C2012	EZS	XR-MD311
	O	EQ/FUNCTION	C 0618	87-012-140-080	0E	C-CAP,S 470P-50 J CH	EZS	XR-MD311
	O	EQ/FUNCTION	C 0619	87-012-140-080	0E	C-CAP,S 470P-50 J CH	EZS	XR-MD311
	O	EQ/FUNCTION	C 0620	87-010-197-080	0E	C-CAP,S 0.01-25 K B C2012	EZS	XR-MD311
	O	EQ/FUNCTION	C 0621	87-010-234-080	0E	CAP,E 47-16 M 5L SRE	EZS	XR-MD311
	O	EQ/FUNCTION	C 0622	87-010-197-080	0E	C-CAP,S 0.01-25 K B C2012	EZS	XR-MD311
	O	EQ/FUNCTION	C 0625	87-010-071-040	0E	CAP,E 1-50 M 5L SRE	EZS	XR-MD311
	O	EQ/FUNCTION	C 0631	87-012-154-080	0E	C-CAP,S 150P-50 J CH GRM	EZS	XR-MD311
	O	EQ/FUNCTION	C 0632	87-012-154-080	0E	C-CAP,S 150P-50 J CH GRM	EZS	XR-MD311
	O	EQ/FUNCTION	C 0633	87-010-421-080	0E	CAP,E 4.7-50 M 5L SRE	EZS	XR-MD311
	O	EQ/FUNCTION	C 0634	87-010-421-080	0E	CAP,E 4.7-50 M 5L SRE	EZS	XR-MD311
	O	EQ/FUNCTION	C 0635	87-010-421-040	0E	CAP,E 4.7-50 M 5L SRE	EZS	XR-MD311
	O	EQ/FUNCTION	C 0636	87-010-421-040	0E	CAP,E 4.7-50 M 5L SRE	EZS	XR-MD311
	O	EQ/FUNCTION	C 0637	87-010-421-080	0E	CAP,E 4.7-50 M 5L SRE	EZS	XR-MD311
	O	EQ/FUNCTION	C 0638	87-012-140-080	0E	C-CAP,S 470P-50 J CH	EZS	XR-MD311
	O	EQ/FUNCTION	C 0639	87-012-140-080	0E	C-CAP,S 470P-50 J CH	EZS	XR-MD311
	O	EQ/FUNCTION	C 0640	87-010-188-080	0E	C-CAP,S 6800P-50 K B C2012	EZS	XR-MD311
	O	EQ/FUNCTION	C 0641	87-010-188-080	0E	C-CAP,S 6800P-50 K B C2012	EZS	XR-MD311
	O	EQ/FUNCTION	C 0642	87-010-213-080	0E	C-CAP,S 0.015-25 K B GRM	EZS	XR-MD311
	O	EQ/FUNCTION	C 0643	87-010-213-080	0E	C-CAP,S 0.015-25 K B GRM	EZS	XR-MD311
	O	EQ/FUNCTION	C 0644	87-010-404-080	0E	CAP,E 4.7-50 M 11L SME	EZS	XR-MD311
	O	EQ/FUNCTION	C 0645	87-010-404-080	0E	CAP,E 4.7-50 M 11L SME	EZS	XR-MD311

PARTS LIST

! = ⚠ SAFTY PARTS
C = Components marked
All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.
K NO. = Only use japanese.

!	C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
	O	EQ/FUNCTION	C 0646	87-010-404-080	0E	CAP,E 4.7-50 M 11L SME	EZS	XR-MD311
	O	EQ/FUNCTION	C 0647	87-010-404-080	0E	CAP,E 4.7-50 M 11L SME	EZS	XR-MD311
	O	EQ/FUNCTION	C 0650	87-010-213-080	0E	C-CAP,S 0.015-25 K B GRM	EZS	XR-MD311
	O	EQ/FUNCTION	C 0651	87-010-182-080	0E	C-CAP,S 2200P-50 K B C2012	EZS	XR-MD311
	O	EQ/FUNCTION	C 0652	87-010-182-080	0E	C-CAP,S 2200P-50 K B C2012	EZS	XR-MD311
	O	EQ/FUNCTION	C 0653	87-010-234-080	0E	CAP,E 47-16 M 5L SRE	EZS	XR-MD311
	O	EQ/FUNCTION	C 0654	87-010-213-080	0E	C-CAP,S 0.015-25 K B GRM	EZS	XR-MD311
	O	EQ/FUNCTION	C 0655	87-010-425-080	0E	C-CAP,0.22-25 Z F	EZS	XR-MD311
	O	EQ/FUNCTION	C 0656	87-010-425-080	0E	C-CAP,0.22-25 Z F	EZS	XR-MD311
	O	EQ/FUNCTION	C 0657	87-010-196-080	0E	C-CAP,S 0.1-25 Z F C2012	EZS	XR-MD311
	O	EQ/FUNCTION	C 0662	87-010-425-080	0E	C-CAP,0.22-25 Z F	EZS	XR-MD311
	O	EQ/FUNCTION	C 0663	87-010-425-080	0E	C-CAP,0.22-25 Z F	EZS	XR-MD311
	O	EQ/FUNCTION	C 0666	87-015-680-080	0E	CAP,E 47-10 M 7L SRA	EZS	XR-MD311
	O	EQ/FUNCTION	C 0667	87-015-680-080	0E	CAP,E 47-10 M 7L SRA	EZS	XR-MD311
	O	EQ/FUNCTION	C 0674	87-010-154-080	0E	C-CAP,S 10P-50 D CH GRM	EZS	XR-MD311
	O	EQ/FUNCTION	C 0675	87-010-112-080	0E	CAP,E 100-16 M 11L SME	EZS	XR-MD311
	O	EQ/FUNCTION	C 0676	87-010-405-080	0E	CAP,E 10-50 M 11L SME	EZS	XR-MD311
	O	EQ/FUNCTION	C 0677	87-010-234-080	0E	CAP,E 47-16 M 5L SRE	EZS	XR-MD311
	O	EQ/FUNCTION	C 0678	87-010-322-080	0E	C-CAP,S 100P-50 J CH GRM	EZS	XR-MD311
	O	EQ/FUNCTION	C 0679	87-010-415-080	0E	CAP,E 10-50 M 5L SRE	EZS	XR-MD311
	O	EQ/FUNCTION	C 0680	87-010-405-080	0E	CAP,E 10-50 M 11L SME	EZS	XR-MD311
	O	EQ/FUNCTION	C 0681	87-010-197-080	0E	C-CAP,S 0.01-25 K B C2012	EZS	XR-MD311
	O	EQ/FUNCTION	C 0682	87-010-197-080	0E	C-CAP,S 0.01-25 K B C2012	EZS	XR-MD311
	O	EQ/FUNCTION	C 0692	87-010-497-040	0E	CAP,E 4.7-35 M 5L SRE	EZS	XR-MD311
!	O	EQ/FUNCTION	CN 0301	87-A60-189-010	0E	CONN,16P V TUC-P16P-B1	EZS	XR-MD311
	O	EQ/FUNCTION	CN 0600	87-A60-770-010	1B	CONN,18P B TMC-D(X)	EZS	XR-MD311
!	O	EQ/FUNCTION	CN 0601	87-A60-423-010	0E	CONN,14P V TOC-B	EZS	XR-MD311
	O	EQ/FUNCTION	CN 0604	87-A60-624-010	0E	CONN,7P V 2MM JMT	EZS	XR-MD311
	O	EQ/FUNCTION	CN 0605	87-A60-901-010	1A	CONN,12P V BLK FMN-BTRK	EZS	XR-MD311
	O	EQ/FUNCTION	CN 0606	87-A60-668-010	0E	CONN,4P H 2MM JMT	EZS	XR-MD311
	O	EQ/FUNCTION	CNA0602	8A-CJ6-632-010	1A	CONN ASSY,6P V LINE-OUT	EZS	XR-MD311
	O	EQ/FUNCTION	CNA0603	88-805-041-230	0E	CONN ASSY,4P 120	EZS	XR-MD311
	S	EQ/FUNCTION	D 0600	87-A40-313-080	0E	C-DIODE,MC2840	EZS	XR-MD311
	S	EQ/FUNCTION	D 0603	87-A40-269-080	0E	C-DIODE,MC2836	EZS	XR-MD311
	S	EQ/FUNCTION	D 0604	87-020-465-080	0E	DIODE,1SS133	EZS	XR-MD311
	S	EQ/FUNCTION	D 0605	87-A40-466-080	0E	ZENER,MTZJ2.7A	EZS	XR-MD311
	S	EQ/FUNCTION	D 0606	87-A40-466-080	0E	ZENER,MTZJ2.7A	EZS	XR-MD311
	S	EQ/FUNCTION	IC 0600	87-A21-111-040	1C	C-IC,M62495FP	EZS	XR-MD311
	S	EQ/FUNCTION	IC 0601	87-A21-022-040	1D	C-IC,BA3880FS	EZS	XR-MD311
	S	EQ/FUNCTION	IC 0602	87-001-607-080	1A	C-IC,NJM4558M	EZS	XR-MD311
	S	EQ/FUNCTION	IC 0603	87-A21-103-040	1E	C-IC,MM1454XFBE	EZS	XR-MD311
	X	EQ/FUNCTION	JR 0602	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	EQ/FUNCTION	JR 0603	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	EQ/FUNCTION	JR 0605	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	EQ/FUNCTION	JR 0611	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	EQ/FUNCTION	JR 0612	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	EQ/FUNCTION	JR 0613	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	EQ/FUNCTION	JR 0614	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	EQ/FUNCTION	JR 0615	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	EQ/FUNCTION	JR 0616	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	EQ/FUNCTION	JR 0617	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	EQ/FUNCTION	JR 0618	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	EQ/FUNCTION	JR 0619	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	EQ/FUNCTION	JR 0620	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	EQ/FUNCTION	JR 0621	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	EQ/FUNCTION	JR 0622	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	EQ/FUNCTION	JR 0623	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	EQ/FUNCTION	JR 0624	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	EQ/FUNCTION	JR 0625	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	EQ/FUNCTION	JR 0626	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	EQ/FUNCTION	JR 0627	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	EQ/FUNCTION	JR 0628	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	EQ/FUNCTION	JR 0629	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	EQ/FUNCTION	JR 0630	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	EQ/FUNCTION	JR 0631	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	EQ/FUNCTION	JR 0632	88-118-561-080	0E	C-RES,S 560-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	JR 0633	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	EQ/FUNCTION	JR 0634	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	EQ/FUNCTION	JR 0635	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	EQ/FUNCTION	JR 0636	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311

PARTS LIST

! = ⚠ SAFTY PARTS
C = Components marked
All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.
K NO. = Only use japanese.

!	C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
	X	EQ/FUNCTION	JR 0637	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	EQ/FUNCTION	JR 0640	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	EQ/FUNCTION	JR 0641	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	S	EQ/FUNCTION	Q 0600	87-A30-076-080	0E	C-TR,2SC3052F	EZS	XR-MD311
	S	EQ/FUNCTION	Q 0602	87-A30-076-080	0E	C-TR,2SC3052F	EZS	XR-MD311
	S	EQ/FUNCTION	Q 0605	87-026-297-080	0E	C-TR,DTA144TK	EZS	XR-MD311
	S	EQ/FUNCTION	Q 0606	87-A30-257-080	0E	C-TR,2SD1306E	EZS	XR-MD311
	S	EQ/FUNCTION	Q 0607	87-A30-257-080	0E	C-TR,2SD1306E	EZS	XR-MD311
	S	EQ/FUNCTION	Q 0608	87-026-236-080	0E	C-TR,DTC124EK	EZS	XR-MD311
	S	EQ/FUNCTION	Q 0609	87-026-236-080	0E	C-TR,DTC124EK	EZS	XR-MD311
	X	EQ/FUNCTION	R 0600	88-118-472-080	0E	C-RES,S 4.7K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0601	88-118-472-080	0E	C-RES,S 4.7K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0602	88-118-474-080	0E	C-RES,S 470K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0603	88-118-472-080	0E	C-RES,S 4.7K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0604	88-118-472-080	0E	C-RES,S 4.7K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0605	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0606	88-118-332-080	0E	C-RES,S 3.3K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0608	88-118-470-080	0E	C-RES,S 47-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0609	88-118-392-080	0E	C-RES,S 3.9K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0611	88-118-274-080	0E	C-RES,S 270K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0613	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0616	88-118-101-080	0E	C-RES,S 100-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0617	88-118-471-080	0E	C-RES,S 470-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0618	88-118-471-080	0E	C-RES,S 470-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0619	88-118-223-080	0E	C-RES,S 22K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0620	88-118-223-080	0E	C-RES,S 22K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0621	88-118-104-080	0E	C-RES,S 100K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0622	88-118-104-080	0E	C-RES,S 100K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0623	88-118-332-080	0E	C-RES,S 3.3K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0624	88-118-332-080	0E	C-RES,S 3.3K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0625	88-118-472-080	0E	C-RES,S 4.7K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0626	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0627	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0628	88-118-472-080	0E	C-RES,S 4.7K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0629	88-118-104-080	0E	C-RES,S 100K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0630	88-118-104-080	0E	C-RES,S 100K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0631	88-118-681-080	0E	C-RES,S 680-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0632	88-118-681-080	0E	C-RES,S 680-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0633	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0634	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0635	88-118-332-080	0E	C-RES,S 3.3K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0636	88-118-332-080	0E	C-RES,S 3.3K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0637	88-118-473-080	0E	C-RES,S 47K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0638	88-118-222-080	0E	C-RES,S 2.2K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0639	88-118-222-080	0E	C-RES,S 2.2K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0640	88-118-473-080	0E	C-RES,S 47K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0641	88-118-474-080	0E	C-RES,S 470K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0642	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0643	88-118-101-080	0E	C-RES,S 100-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0644	88-118-332-080	0E	C-RES,S 3.3K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0645	88-118-332-080	0E	C-RES,S 3.3K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0646	88-118-471-080	0E	C-RES,S 470-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0647	88-118-471-080	0E	C-RES,S 470-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0648	88-118-682-080	0E	C-RES,S 6.8K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0649	88-118-682-080	0E	C-RES,S 6.8K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0651	88-118-473-080	0E	C-RES,S 47K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0652	88-118-682-080	0E	C-RES,S 6.8K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0653	88-118-682-080	0E	C-RES,S 6.8K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0654	88-118-182-080	0E	C-RES,S 1.8K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0655	88-118-182-080	0E	C-RES,S 1.8K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0658	88-118-333-080	0E	C-RES,S 33K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0659	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0662	88-118-123-080	0E	C-RES,S 12K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0665	88-118-183-080	0E	C-RES,S 18K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0666	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0667	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	EQ/FUNCTION	R 0668	88-118-123-080	0E	C-RES,S 12K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0669	88-118-472-080	0E	C-RES,S 4.7K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0670	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0671	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311

PARTS LIST

! = ⚠ SAFTY PARTS
C = Components marked
All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.
K NO. = Only use japanese.

!	C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
	X	EQ/FUNCTION	R 0672	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0673	88-118-562-080	0E	C-RES,S 5.6K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0674	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0675	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0676	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0677	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0678	88-118-562-080	0E	C-RES,S 5.6K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0679	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0680	88-100-000-010	0E	PLATING-JW, 0.58 SN95	EZS	XR-MD311
	X	EQ/FUNCTION	R 0681	88-128-221-080	0E	C-RES, 220-1/8W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0682	88-128-221-080	0E	C-RES, 220-1/8W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0683	88-118-101-080	0E	C-RES,S 100-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0684	88-118-101-080	0E	C-RES,S 100-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0685	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0686	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0687	88-118-183-080	0E	C-RES,S 18K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0688	88-118-223-080	0E	C-RES,S 22K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0689	88-118-222-080	0E	C-RES,S 2.2K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0690	88-118-222-080	0E	C-RES,S 2.2K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0691	88-118-223-080	0E	C-RES,S 22K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0692	88-118-183-080	0E	C-RES,S 18K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0693	88-118-183-080	0E	C-RES,S 18K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	R 0694	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	EQ/FUNCTION	TM 0600	87-033-220-010	0E	PIN,DIA1 COATING	EZS	XR-MD311
	X	EQ/FUNCTION	TM 0601	87-033-220-010	0E	PIN,DIA1 COATING	EZS	XR-MD311
	X	EQ/FUNCTION	W 0305	89-920-050-110	0E	WIRE,UD0-5-3	EZS	XR-MD311
	X	EQ/FUNCTION	W 0605	89-925-100-110	0E	WIRE,UD5-10-3	EZS	XR-MD311
	X	KEY/FRONT	*	8A-CJ6-601-010	1F	PWB,COMB FR/CD	EZS	XR-MD311
	X	KEY/FRONT	*	8A-CJ6-602-010	--	PWB,FRONT	EZS	XR-MD311
	X	KEY/FRONT	*	8A-CJ6-603-010	--	PWB,KEY	EZS	XR-MD311
	X	KEY/FRONT	*	8A-CJ6-604-010	--	PWB,CD	EZS	XR-MD311
	X	KEY/FRONT	*	8A-CJ6-605-010	--	PWB,U-COM	EZS	XR-MD311
	X	KEY/FRONT	*	8A-CJ6-606-010	--	PWB,CD-SW	EZS	XR-MD311
	X	KEY/FRONT	*	8A-CJ6-607-010	--	PWB,CD-SUB	EZS	XR-MD311
	X	KEY/FRONT	*	8A-CJ6-616-010	--	PWB,LED-SUB	EZS	XR-MD311
	O	KEY/FRONT	C 0500	87-010-405-040	0E	CAP,E 10-50 M 11L SME	EZS	XR-MD311
	O	KEY/FRONT	C 0501	87-010-178-080	0E	C-CAP,S 1000P-50 K B C2012	EZS	XR-MD311
	O	KEY/FRONT	C 0502	87-010-197-080	0E	C-CAP,S 0.01-25 K B C2012	EZS	XR-MD311
	O	KEY/FRONT	C 0503	87-010-197-080	0E	C-CAP,S 0.01-25 K B C2012	EZS	XR-MD311
!	O	KEY/FRONT	CN 0410	87-099-564-010	0E	CONN,4P V TUC-P4P-B1	EZS	XR-MD311
	O	KEY/FRONT	CN 0411	87-099-553-010	0E	CONN,4P H TUC-P	EZS	XR-MD311
	O	KEY/FRONT	CN 0500	87-A60-778-010	1B	CONN,18P B TMC-D(P)	EZS	XR-MD311
!	O	KEY/FRONT	CN 0501	87-A60-899-010	0E	CONN,6P V BLK FMN-BTRK	EZS	XR-MD311
	O	KEY/FRONT	CN 0502	87-A60-670-010	0E	CONN,6P H 2MM JMT	EZS	XR-MD311
!	O	KEY/FRONT	CN 0503	87-099-720-010	1B	CONN,30P BLK TYK-B(P)	EZS	XR-MD311
	O	KEY/FRONT	CNA0501	88-805-061-230	1A	CONN ASSY,6P 120	EZS	XR-MD311
	O	KEY/FRONT	D 0500	87-A40-317-080	0E	LED,SLR-342VCT31 RED	EZS	XR-MD311
	S	KEY/FRONT	D 0501	87-020-465-080	0E	DIODE,1SS133	EZS	XR-MD311
	O	KEY/FRONT	D 0502	87-A40-821-080	1E	LED,SMLS1BE16C BLU/UMB	EZS	XR-MD311
	O	KEY/FRONT	D 0503	87-A40-821-080	1E	LED,SMLS1BE16C BLU/UMB	EZS	XR-MD311
	S	KEY/FRONT	D 0510	87-020-465-080	0E	DIODE,1SS133	EZS	XR-MD311
	S	KEY/FRONT	D 0511	87-020-465-080	0E	DIODE,1SS133	EZS	XR-MD311
	S	KEY/FRONT	IC 0500	87-A20-914-010	1B	IC,SPS-442-1-F	EZS	XR-MD311
	X	KEY/FRONT	JR 0500	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	KEY/FRONT	JR 0501	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	KEY/FRONT	JR 0503	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	KEY/FRONT	JR 0504	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	KEY/FRONT	JR 0505	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	KEY/FRONT	JR 0506	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	KEY/FRONT	JR 0510	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	KEY/FRONT	JR 0512	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	KEY/FRONT	JR 0513	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	KEY/FRONT	JR 0514	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	KEY/FRONT	JR 0520	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	KEY/FRONT	JR 0521	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	KEY/FRONT	JR 0522	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	KEY/FRONT	JR 0523	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	KEY/FRONT	JR 0530	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	KEY/FRONT	JR 0580	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	KEY/FRONT	JR 0581	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311

PARTS LIST

! = ⚠ SAFTY PARTS
C = Components marked
All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.
K NO. = Only use japanese.

!	C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
	X	KEY/FRONT	JR 0582	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	KEY/FRONT	JR 0583	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	KEY/FRONT	JR 0584	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	S	KEY/FRONT	Q 0500	87-A30-087-080	0E	C-FET,2SK2158	EZS	XR-MD311
	S	KEY/FRONT	Q 0501	87-026-580-080	0E	C-TR,DTA123JK	EZS	XR-MD311
	S	KEY/FRONT	Q 0502	87-026-580-080	0E	C-TR,DTA123JK	EZS	XR-MD311
	S	KEY/FRONT	Q 0503	87-026-580-080	0E	C-TR,DTA123JK	EZS	XR-MD311
	S	KEY/FRONT	Q 0505	87-026-580-080	0E	C-TR,DTA123JK	EZS	XR-MD311
	S	KEY/FRONT	Q 0513	87-026-236-080	0E	C-TR,DTC124EK	EZS	XR-MD311
	S	KEY/FRONT	Q 0515	87-026-236-080	0E	C-TR,DTC124EK	EZS	XR-MD311
	X	KEY/FRONT	R 0500	88-130-121-080	0E	RES,120-1/4W J	EZS	XR-MD311
	X	KEY/FRONT	R 0501	88-130-121-080	0E	RES,120-1/4W J	EZS	XR-MD311
	X	KEY/FRONT	R 0502	88-130-121-080	0E	RES,120-1/4W J	EZS	XR-MD311
	X	KEY/FRONT	R 0503	88-130-121-080	0E	RES,120-1/4W J	EZS	XR-MD311
	X	KEY/FRONT	R 0505	88-118-181-080	0E	C-RES,S 180-1/10W J	EZS	XR-MD311
	X	KEY/FRONT	R 0507	88-118-563-080	0E	C-RES,S 56K-1/10W J	EZS	XR-MD311
	X	KEY/FRONT	R 0511	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	KEY/FRONT	R 0512	88-118-392-080	0E	C-RES,S 3.9K-1/10W J	EZS	XR-MD311
	X	KEY/FRONT	R 0513	88-118-224-080	0E	C-RES,S 220K-1/10W J	EZS	XR-MD311
	X	KEY/FRONT	R 0514	88-118-682-080	0E	C-RES,S 6.8K-1/10W J	EZS	XR-MD311
	X	KEY/FRONT	R 0515	88-118-472-080	0E	C-RES,S 4.7K-1/10W J	EZS	XR-MD311
	X	KEY/FRONT	R 0516	88-118-332-080	0E	C-RES,S 3.3K-1/10W J	EZS	XR-MD311
	X	KEY/FRONT	R 0517	88-118-222-080	0E	C-RES,S 2.2K-1/10W J	EZS	XR-MD311
	X	KEY/FRONT	R 0518	88-118-222-080	0E	C-RES,S 2.2K-1/10W J	EZS	XR-MD311
	X	KEY/FRONT	R 0519	88-118-222-080	0E	C-RES,S 2.2K-1/10W J	EZS	XR-MD311
	X	KEY/FRONT	R 0520	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	KEY/FRONT	R 0521	88-118-152-080	0E	C-RES,S 1.5K-1/10W J	EZS	XR-MD311
	X	KEY/FRONT	R 0522	88-118-152-080	0E	C-RES,S 1.5K-1/10W J	EZS	XR-MD311
	X	KEY/FRONT	R 0523	88-118-122-080	0E	C-RES,S 1.2K-1/10W J	EZS	XR-MD311
	X	KEY/FRONT	R 0524	88-118-122-080	0E	C-RES,S 1.2K-1/10W J	EZS	XR-MD311
	X	KEY/FRONT	R 0525	88-118-122-080	0E	C-RES,S 1.2K-1/10W J	EZS	XR-MD311
	X	KEY/FRONT	R 0526	88-118-122-080	0E	C-RES,S 1.2K-1/10W J	EZS	XR-MD311
	X	KEY/FRONT	R 0527	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	KEY/FRONT	R 0528	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	KEY/FRONT	R 0529	88-118-821-080	0E	C-RES,S 820-1/10W J	EZS	XR-MD311
	X	KEY/FRONT	R 0530	88-118-821-080	0E	C-RES,S 820-1/10W J	EZS	XR-MD311
	X	KEY/FRONT	R 0531	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	KEY/FRONT	R 0532	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	KEY/FRONT	R 0533	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	KEY/FRONT	R 0534	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	KEY/FRONT	R 0535	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	KEY/FRONT	R 0536	88-118-223-080	0E	C-RES,S 22K-1/10W J	EZS	XR-MD311
	X	KEY/FRONT	R 0537	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	KEY/FRONT	R 0538	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	KEY/FRONT	R 0550	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	KEY/FRONT	R 0551	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	KEY/FRONT	R 0552	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	KEY/FRONT	R 0560	88-118-392-080	0E	C-RES,S 3.9K-1/10W J	EZS	XR-MD311
	X	KEY/FRONT	R 0561	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	KEY/FRONT	R 0562	88-130-101-080	0E	RES,100-1/4W J	EZS	XR-MD311
	X	KEY/FRONT	R 0563	88-130-101-080	0E	RES,100-1/4W J	EZS	XR-MD311
	X	KEY/FRONT	R 0564	88-121-470-080	0E	RES,47-1/8W J	EZS	XR-MD311
	X	KEY/FRONT	R 0565	88-121-820-080	0E	RES,82-1/8W J	EZS	XR-MD311
	O	KEY/FRONT	S 0500	87-A90-095-080	0E	SW,TACT EVQ11G04M	EZS	XR-MD311
	O	KEY/FRONT	S 0501	87-A90-095-080	0E	SW,TACT EVQ11G04M	EZS	XR-MD311
	O	KEY/FRONT	S 0502	87-A90-095-080	0E	SW,TACT EVQ11G04M	EZS	XR-MD311
	O	KEY/FRONT	S 0503	87-A90-095-080	0E	SW,TACT EVQ11G04M	EZS	XR-MD311
	O	KEY/FRONT	S 0504	87-A90-095-080	0E	SW,TACT EVQ11G04M	EZS	XR-MD311
	O	KEY/FRONT	S 0505	87-A90-095-080	0E	SW,TACT EVQ11G04M	EZS	XR-MD311
	O	KEY/FRONT	S 0506	87-A90-095-080	0E	SW,TACT EVQ11G04M	EZS	XR-MD311
	O	KEY/FRONT	S 0507	87-A90-095-080	0E	SW,TACT EVQ11G04M	EZS	XR-MD311
	O	KEY/FRONT	S 0508	87-A90-095-080	0E	SW,TACT EVQ11G04M	EZS	XR-MD311
	O	KEY/FRONT	S 0509	87-A90-095-080	0E	SW,TACT EVQ11G04M	EZS	XR-MD311
	O	KEY/FRONT	S 0510	87-A90-095-080	0E	SW,TACT EVQ11G04M	EZS	XR-MD311
	O	KEY/FRONT	S 0511	87-A90-095-080	0E	SW,TACT EVQ11G04M	EZS	XR-MD311
	O	KEY/FRONT	S 0512	87-A90-095-080	0E	SW,TACT EVQ11G04M	EZS	XR-MD311
	O	KEY/FRONT	S 0513	87-A90-095-080	0E	SW,TACT EVQ11G04M	EZS	XR-MD311
	O	KEY/FRONT	S 0514	87-A90-095-080	0E	SW,TACT EVQ11G04M	EZS	XR-MD311
	O	KEY/FRONT	S 0515	87-A90-095-080	0E	SW,TACT EVQ11G04M	EZS	XR-MD311
	O	KEY/FRONT	S 0516	87-A90-095-080	0E	SW,TACT EVQ11G04M	EZS	XR-MD311

PARTS LIST

! = ⚠ SAFTY PARTS
C = Components marked
All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.
K NO. = Only use japanese.

!	C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
	O	KEY/FRONT	S 0517	87-A90-095-080	0E	SW,TACT EVQ11G04M	EZS	XR-MD311
	O	KEY/FRONT	S 0518	87-A90-095-080	0E	SW,TACT EVQ11G04M	EZS	XR-MD311
	O	KEY/FRONT	S 0519	87-A90-095-080	0E	SW,TACT EVQ11G04M	EZS	XR-MD311
	O	KEY/FRONT	S 0520	87-A91-698-010	1A	SW,RTRY EC12E12403	EZS	XR-MD311
	O	KNOB		8A-CJ6-014-010	1C	KEY,MD EJECT	EZS	XR-MD311
	O	KNOB		8A-CJ6-015-010	1C	KEY,POWER	EZS	XR-MD311
	O	KNOB		8A-CJ6-016-010	1C	KEY,MODE	EZS	XR-MD311
	O	KNOB		8A-CJ6-017-010	1C	KNOB,RTRY VOL	EZS	XR-MD311
	O	KNOB		8A-CJ6-018-010	1C	KEY,OPEN CD	EZS	XR-MD311
	O	KNOB		8A-CJ6-019-010	1C	REFLECTOR,STAND BY	EZS	XR-MD311
	O	KNOB		8A-CJ6-025-010	1C	KEY,PLAY	EZS	XR-MD311
	O	LINE OUT/PT	C 0200	87-010-387-080	1A	CAP,E 470-25 M SME	EZS	XR-MD311
	O	LINE OUT/PT	C 0201	87-010-073-080	0E	CAP,E 3.3-50 M 5L SRE	EZS	XR-MD311
!	O	LINE OUT/PT	C 0202	87-A10-479-080	0E	CAP,CER 2200P-250 M E KH	EZS	XR-MD311
	O	LINE OUT/PT	C 0658	87-018-115-080	0E	CAP,TC U 47P-50 J SL UP050	EZS	XR-MD311
	O	LINE OUT/PT	C 0659	87-018-115-080	0E	CAP,TC U 47P-50 J SL UP050	EZS	XR-MD311
	O	LINE OUT/PT	C 0660	87-010-318-080	0E	C-CAP,S 47P-50 J CH GRM	EZS	XR-MD311
	O	LINE OUT/PT	C 0661	87-010-318-080	0E	C-CAP,S 47P-50 J CH GRM	EZS	XR-MD311
	O	LINE OUT/PT	C 0690	87-018-209-080	0E	CAP,TC U 0.1-50 Z F UP050	EZS	XR-MD311
	O	LINE OUT/PT	C 0691	87-018-209-080	0E	CAP,TC U 0.1-50 Z F UP050	EZS	XR-MD311
	O	LINE OUT/PT	CN 0201	87-A60-620-010	0E	CONN,3P V 2MM JMT	EZS	XR-MD311
	O	LINE OUT/PT	CN 0607	87-A60-623-010	0E	CONN,6P V 2MM JMT	EZS	XR-MD311
	O	LINE OUT/PT	CNA0200	8A-CJ6-635-010	1A	CONN ASSY,8P H POWER	EZS	XR-MD311
	S	LINE OUT/PT	D 0200	87-A40-270-080	0E	C-DIODE,MC2838	EZS	XR-MD311
	S	LINE OUT/PT	D 0201	87-A40-270-080	0E	C-DIODE,MC2838	EZS	XR-MD311
	S	LINE OUT/PT	D 0202	87-A40-269-080	0E	C-DIODE,MC2836	EZS	XR-MD311
	S	LINE OUT/PT	D 0203	87-020-465-080	0E	DIODE,1SS133	EZS	XR-MD311
	O	LINE OUT/PT	J 0602	87-A61-298-010	1A	JACK,PIN 4P WRWR BLUE	EZS	XR-MD311
	X	LINE OUT/PT	JR 0200	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	O	LINE OUT/PT	JR 0606	87-A50-190-080	0E	C-COIL,S BLM21A102S	EZS	XR-MD311
	X	LINE OUT/PT	JR 0607	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	LINE OUT/PT	JR 0608	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	LINE OUT/PT	JR 0609	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	LINE OUT/PT	JR 0610	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	LINE OUT/PT	PR 0200	88-100-000-010	0E	PLATING-JW, 0.58 SN95	EZS	XR-MD311
	X	LINE OUT/PT	PR 0201	88-100-000-010	0E	PLATING-JW, 0.58 SN95	EZS	XR-MD311
	S	LINE OUT/PT	PR 0202	87-A90-092-080	1A	PROTECTOR,2.5A 491SERIES 60V	EZS	XR-MD311
	S	LINE OUT/PT	PR 0203	87-A90-092-080	1A	PROTECTOR,2.5A 491SERIES 60V	EZS	XR-MD311
	S	LINE OUT/PT	PR 0204	87-A90-092-080	1A	PROTECTOR,2.5A 491SERIES 60V	EZS	XR-MD311
	S	LINE OUT/PT	PR 0205	87-A90-092-080	1A	PROTECTOR,2.5A 491SERIES 60V	EZS	XR-MD311
	X	LINE OUT/PT	PR 0206	88-100-000-010	0E	PLATING-JW, 0.58 SN95	EZS	XR-MD311
!	O	LINE OUT/PT	PT 0201	8Z-NF8-659-010	1C	PT,SUB ZNF-8(E)TAM	EZS	XR-MD311
	S	LINE OUT/PT	Q 0200	87-A30-076-080	0E	C-TR,2SC3052F	EZS	XR-MD311
	S	LINE OUT/PT	Q 0201	87-A30-073-080	0E	C-TR,RT1N 141C	EZS	XR-MD311
	X	LINE OUT/PT	R 0200	88-130-101-080	0E	RES,100-1/4W J	EZS	XR-MD311
	X	LINE OUT/PT	R 0201	88-118-333-080	0E	C-RES,S 33K-1/10W J	EZS	XR-MD311
	X	LINE OUT/PT	R 0656	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	LINE OUT/PT	R 0657	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	LINE OUT/PT	R 0660	88-118-473-080	0E	C-RES,S 47K-1/10W J	EZS	XR-MD311
	X	LINE OUT/PT	R 0661	88-118-473-080	0E	C-RES,S 47K-1/10W J	EZS	XR-MD311
	X	LINE OUT/PT	R 0663	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	LINE OUT/PT	R 0664	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
!	O	LINE OUT/PT	RY 0200	87-A90-977-010	1C	RELAY,AC12V DG12D1-O(M)	EZS	XR-MD311
	O	LINE OUT/PT	T 0201	87-A60-317-010	0E	TERMINAL, 1P MSC	EZS	XR-MD311
	O	LINE OUT/PT	T 0202	87-A60-317-010	0E	TERMINAL, 1P MSC	EZS	XR-MD311
	X	LINE OUT/PT	W 0610	89-925-180-110	0E	WIRE,UD5-18-3	EZS	XR-MD311
	X	LINE OUT/PT	W 0620	89-750-064-410	0E	WIRE ASSY,60 LUG	EZS	XR-MD311
	X	MD ASSY		M8-AZG-H90-000	--	AZG-H A	EZS	XR-MD311
	X	MECHANICAL		8A-CJ6-201-010	1F	CHAS,MAIN	EZS	XR-MD311
	O	MICON	C 0400	87-010-196-080	0E	C-CAP,S 0.1-25 Z F C2012	EZS	XR-MD311
	O	MICON	C 0401	87-010-196-080	0E	C-CAP,S 0.1-25 Z F C2012	EZS	XR-MD311
	O	MICON	C 0402	87-010-493-040	0E	CAP,E 0.47-50 M 5L SRE	EZS	XR-MD311
	O	MICON	C 0403	87-A11-146-080	0E	CAP,TC U 0.022-50 Z F	EZS	XR-MD311
	O	MICON	C 0404	87-010-313-080	0E	C-CAP,S 18P-50 J CH GRM	EZS	XR-MD311
	O	MICON	C 0405	87-010-316-080	0E	C-CAP,S 33P-50 J CH GRM	EZS	XR-MD311
	O	MICON	C 0406	87-010-196-080	0E	C-CAP,S 0.1-25 Z F C2012	EZS	XR-MD311
	O	MICON	C 0407	87-010-196-080	0E	C-CAP,S 0.1-25 Z F C2012	EZS	XR-MD311
	O	MICON	C 0408	87-010-221-040	0E	CAP,E 470-10 M SME	EZS	XR-MD311
	O	MICON	C 0409	87-010-196-080	0E	C-CAP,S 0.1-25 Z F C2012	EZS	XR-MD311
	O	MICON	C 0410	87-010-196-080	0E	C-CAP,S 0.1-25 Z F C2012	EZS	XR-MD311

PARTS LIST

! = ⚠ SAFTY PARTS
C = Components marked
All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.
K NO. = Only use japanese.

!	C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
	O	MICON	C 0491	87-010-178-080	0E	C-CAP,S 1000P-50 K B C2012	EZS	XR-MD311
	O	MICON	CN 0305	87-A61-404-010	0E	CONN,12P H BLK FMN-SSTRK	EZS	XR-MD311
!	O	MICON	CN 0400	87-099-719-010	1B	CONN,30P H BLK TYK-B(X)	EZS	XR-MD311
	O	MICON	CN 0402	87-A61-401-010	0E	CONN,8P H BLK FMN-SSTRK	EZS	XR-MD311
!	O	MICON	CN 0420	87-099-554-010	0E	CONN,6P H TUC-P6X-B1	EZS	XR-MD311
!	O	MICON	CN 0421	87-099-565-010	0E	CONN,6P TUC-P6P-B1	EZS	XR-MD311
	O	MICON	CN 0430	87-099-555-010	0E	CONN,7P TUC-P7X-B1	EZS	XR-MD311
!	O	MICON	CN 0431	87-099-566-010	0E	CONN,7P TUC-P7P-B1	EZS	XR-MD311
!	O	MICON	CN 0711	87-099-566-010	0E	CONN,7P TUC-P7P-B1	EZS	XR-MD311
!	O	MICON	CN 0721	87-099-565-010	0E	CONN,6P TUC-P6P-B1	EZS	XR-MD311
	S	MICON	D 0400	87-A40-269-080	0E	C-DIODE,MC2836	EZS	XR-MD311
	S	MICON	D 0401	87-A40-270-080	0E	C-DIODE,MC2838	EZS	XR-MD311
	S	MICON	IC 0400	8A-CJ6-681-030	--	C-IC,LC87F65C8A-R07	EZS	XR-MD311
	X	MICON	JR 0301	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	MICON	JR 0302	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	MICON	JR 0400	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	MICON	JR 0401	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	MICON	JR 0402	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	MICON	JR 0403	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	MICON	JR 0404	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	MICON	JR 0405	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	MICON	JR 0406	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	MICON	JR 0407	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	MICON	JR 0408	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	MICON	JR 0410	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	MICON	JR 0411	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	MICON	JR 0412	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	MICON	JR 0415	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	MICON	JR 0420	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	O	MICON	L 0400	87-A50-333-010	0E	COIL,OSC 9.43MHZ	EZS	XR-MD311
	S	MICON	Q 0400	87-A30-087-080	0E	C-FET,2SK2158	EZS	XR-MD311
	S	MICON	Q 0401	87-A30-087-080	0E	C-FET,2SK2158	EZS	XR-MD311
	X	MICON	R 0302	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	MICON	R 0304	88-128-103-080	0E	C-RES, 10K-1/8W J	EZS	XR-MD311
	X	MICON	R 0306	88-128-103-080	0E	C-RES, 10K-1/8W J	EZS	XR-MD311
	X	MICON	R 0307	88-100-000-010	0E	PLATING-JW, 0.58 SN95	EZS	XR-MD311
	X	MICON	R 0308	88-100-000-010	0E	PLATING-JW, 0.58 SN95	EZS	XR-MD311
	X	MICON	R 0309	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	MICON	R 0400	88-121-562-080	0E	RES,5.6K-1/8W J	EZS	XR-MD311
	X	MICON	R 0402	88-118-562-080	0E	C-RES,S 5.6K-1/10W J	EZS	XR-MD311
	X	MICON	R 0403	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	MICON	R 0404	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	MICON	R 0405	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	MICON	R 0407	88-118-562-080	0E	C-RES,S 5.6K-1/10W J	EZS	XR-MD311
	X	MICON	R 0408	88-121-562-080	0E	RES,5.6K-1/8W J	EZS	XR-MD311
	X	MICON	R 0411	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	MICON	R 0412	88-118-392-080	0E	C-RES,S 3.9K-1/10W J	EZS	XR-MD311
	X	MICON	R 0413	88-118-392-080	0E	C-RES,S 3.9K-1/10W J	EZS	XR-MD311
	X	MICON	R 0414	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	MICON	R 0415	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	MICON	R 0416	88-118-392-080	0E	C-RES,S 3.9K-1/10W J	EZS	XR-MD311
	X	MICON	R 0417	88-118-392-080	0E	C-RES,S 3.9K-1/10W J	EZS	XR-MD311
	X	MICON	R 0418	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	MICON	R 0419	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	MICON	R 0420	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	MICON	R 0421	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	MICON	R 0422	88-128-101-080	0E	C-RES, 100-1/8W J	EZS	XR-MD311
	X	MICON	R 0423	88-121-102-080	0E	RES,1K-1/8W J	EZS	XR-MD311
	X	MICON	R 0424	88-121-102-080	0E	RES,1K-1/8W J	EZS	XR-MD311
	X	MICON	R 0425	88-121-102-080	0E	RES,1K-1/8W J	EZS	XR-MD311
	X	MICON	R 0427	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	MICON	R 0428	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	MICON	R 0429	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	MICON	R 0430	88-118-101-080	0E	C-RES,S 100-1/10W J	EZS	XR-MD311
	X	MICON	R 0431	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	MICON	R 0432	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	MICON	R 0433	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	MICON	R 0434	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	MICON	R 0435	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	MICON	R 0436	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311

PARTS LIST

! = ⚠ SAFTY PARTS
C = Components marked
All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.
K NO. = Only use japanese.

!	C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
	X	MICON	R 0437	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	MICON	R 0438	88-118-104-080	0E	C-RES,S 100K-1/10W J	EZS	XR-MD311
	X	MICON	R 0440	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	MICON	R 0443	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	MICON	R 0444	88-128-224-080	0E	C-RES, 220K-1/8W J	EZS	XR-MD311
	X	MICON	R 0446	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	MICON	R 0447	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	MICON	R 0449	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	MICON	R 0450	88-118-683-080	0E	C-RES,S 68K-1/10W J	EZS	XR-MD311
	X	MICON	R 0452	88-118-472-080	0E	C-RES,S 4.7K-1/10W J	EZS	XR-MD311
	X	MICON	R 0454	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	MICON	R 0456	88-118-473-080	0E	C-RES,S 47K-1/10W J	EZS	XR-MD311
	X	MICON	R 0457	88-118-101-080	0E	C-RES,S 100-1/10W J	EZS	XR-MD311
	X	MICON	R 0458	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	MICON	R 0460	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	MICON	R 0461	88-118-224-080	0E	C-RES,S 220K-1/10W J	EZS	XR-MD311
	X	MICON	R 0463	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	MICON	R 0464	88-118-101-080	0E	C-RES,S 100-1/10W J	EZS	XR-MD311
	X	MICON	R 0465	88-121-274-080	0E	RES,270K-1/8W J	EZS	XR-MD311
	X	MICON	R 0466	88-118-101-080	0E	C-RES,S 100-1/10W J	EZS	XR-MD311
	X	MICON	R 0467	88-118-104-080	0E	C-RES,S 100K-1/10W J	EZS	XR-MD311
	X	MICON	R 0468	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	MICON	R 0469	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	MICON	R 0470	88-118-100-080	0E	C-RES,S 10-1/10W J	EZS	XR-MD311
	X	MICON	R 0471	88-121-223-080	0E	RES,22K-1/8W J	EZS	XR-MD311
	X	MICON	R 0472	88-121-223-080	0E	RES,22K-1/8W J	EZS	XR-MD311
	X	MICON	R 0474	88-118-104-080	0E	C-RES,S 100K-1/10W J	EZS	XR-MD311
	X	MICON	R 0476	88-118-222-080	0E	C-RES,S 2.2K-1/10W J	EZS	XR-MD311
	X	MICON	R 0477	88-118-182-080	0E	C-RES,S 1.8K-1/10W J	EZS	XR-MD311
	X	MICON	R 0478	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	MICON	R 0479	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	MICON	R 0480	88-118-104-080	0E	C-RES,S 100K-1/10W J	EZS	XR-MD311
	X	MICON	R 0481	88-128-683-080	0E	C-RES, 68K-1/8W J	EZS	XR-MD311
	X	MICON	R 0482	88-121-103-080	0E	RES,10K-1/8W J	EZS	XR-MD311
	X	MICON	R 0483	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	MICON	R 0484	88-121-102-080	0E	RES,1K-1/8W J	EZS	XR-MD311
	X	MICON	R 0486	88-100-000-010	0E	PLATING-JW, 0.58 SN95	EZS	XR-MD311
	X	MICON	R 0487	88-118-223-080	0E	C-RES,S 22K-1/10W J	EZS	XR-MD311
	X	MICON	R 0488	88-118-104-080	0E	C-RES,S 100K-1/10W J	EZS	XR-MD311
	X	MICON	R 0489	88-118-104-080	0E	C-RES,S 100K-1/10W J	EZS	XR-MD311
	X	MICON	R 0490	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	MICON	R 0492	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	MICON	R 0494	88-100-000-010	0E	PLATING-JW, 0.58 SN95	EZS	XR-MD311
	X	MICON	R 0495	88-118-223-080	0E	C-RES,S 22K-1/10W J	EZS	XR-MD311
	X	MICON	R 0497	88-128-103-080	0E	C-RES, 10K-1/8W J	EZS	XR-MD311
	X	MICON	R 0498	88-128-103-080	0E	C-RES, 10K-1/8W J	EZS	XR-MD311
	X	MICON	R 0499	88-121-122-080	0E	RES,1.2K-1/8W J	EZS	XR-MD311
	O	OTHERS		83-ZG3-604-010	0E	RING,MAG 2	EZS	XR-MD311
	O	OTHERS		84-CD5-217-010	0E	PLATE,MAGNET	EZS	XR-MD311
	O	OTHERS		88-CE2-209-010	0E	SPR-T,MD	EZS	XR-MD311
	X	OTHERS		88-CH6-220-110	0E	CUSHION,CD A	EZS	XR-MD311
	O	OTHERS		8A-CJ6-203-010	1C	HLDR,MD	EZS	XR-MD311
	O	OTHERS		8A-CJ6-206-010	0E	HLDR,TUNER	EZS	XR-MD311
	X	OTHERS		8A-CJ6-208-010	2A	HT-SINK ASSY,MAIN	EZS	XR-MD311
	X	OTHERS		8A-CJ6-209-010	--	HT-SINK,MAIN	EZS	XR-MD311
	X	OTHERS		8A-CJ6-210-010	--	HT-SINK,FIN	EZS	XR-MD311
	O	OTHERS		8A-CJ6-211-010	1H	HLDR,FUN	EZS	XR-MD311
	O	OTHERS		8A-CJ6-212-010	0E	HLDR,LCD	EZS	XR-MD311
	O	OTHERS		8A-CJ6-213-010	--	HLDR,PWB	EZS	XR-MD311
	X	OTHERS		8A-CJ6-214-010	1A	SH,LCD	EZS	XR-MD311
	X	OTHERS		8A-CJ6-215-010	--	SH,TUNER	EZS	XR-MD311
	X	OTHERS		8A-CJ6-216-010	--	SH,PWB	EZS	XR-MD311
	X	OTHERS		8A-CJ6-217-010	--	SH,PT	EZS	XR-MD311
	X	OTHERS		8A-CJ6-218-010	0E	SH, 23-3.5-0.15 W/ADH	EZS	XR-MD311
	O	OTHERS		8A-CJ6-219-010	0E	CUSH,FOOT DIA 8-3	EZS	XR-MD311
	O	OTHERS		8A-MA3-214-010	0E	W,3.5-6.5-1 W/ADH	EZS	XR-MD311
	O	OTHERS		8Z-CH4-211-010	0E	BASE,CHUCK	EZS	XR-MD311
	O	OTHERS		8Z-CH4-212-010	0E	RING,CHUCK	EZS	XR-MD311
	O	OTHERS		8Z-CH4-225-110	0E	HLDR,CHUCK A(S)	EZS	XR-MD311
	O	OTHERS		8Z-CL5-205-010	0E	PULLEY,GEAR CD	EZS	XR-MD311

PARTS LIST

! = ⚠ SAFTY PARTS
C = Components marked
All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.
K NO. = Only use japanese.

!	C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
	O	OTHERS		8Z-CL5-206-010	0E	GEAR,MID CD	EZS	XR-MD311
	O	OTHERS		8Z-CL5-207-010	0E	GEAR,CD	EZS	XR-MD311
	O	OTHERS		8Z-CL5-208-010	0E	PULLEY,MOTOR	EZS	XR-MD311
	O	OTHERS		8Z-CL5-217-010	--	BELT,PULLEY	EZS	XR-MD311
	O	OTHERS		8Z-NB8-240-010	0E	COVER, PL	EZS	XR-MD311
	O	OTHERS		8Z-NB8-254-010	0E	COVER, PL M3	EZS	XR-MD311
	O	OTHERS	*	8A-CJ6-202-010	0E	GUIDE,LCD	EZS	XR-MD311
	X	PACKING DU		87-051-136-110	0E	BAG,PV 0.03-160-280	EZS	XR-MD311
	X	PACKING DU		87-B40-091-010	0E	BAG,PV 0.04-400-650 PL	EZS	XR-MD311
	X	PACKING DU		8A-CJ6-851-010	1H	CUSHION,FRONT ACJ6	EZS	XR-MD311
	X	PACKING DU		8A-CJ6-852-010	1H	CUSHION,REAR ACJ6	EZS	XR-MD311
	X	PACKING DU		8A-CJ6-853-010	1C	BOX,ACCESS ACJ6	EZS	XR-MD311
	X	PACKING DU		8A-CJ6-860-010	2A	CTN,PRINTED EZS	EZS	XR-MD311
	X	PACKING DU		8A-CJ6-868-010	--	PAD,TOP	EZS	XR-MD311
	X	PACKING DU		93-704-329-010	0E	SH,FOAMED-MAT 0.31-500-350	EZS	XR-MD311
!	X	PLATE		87-057-961-010	0E	LBL,CAUTION TRIANGLE	EZS	XR-MD311
!	X	PLATE		87-057-995-010	0E	LBL,CAUTION EFSD	EZS	XR-MD311
	X	PLATE		87-B40-281-010	0E	LBL,BAR-CODE A 35X8	EZS	XR-MD311
	O	PLATE		8A-CJ6-008-010	1C	PANEL,VOL	EZS	XR-MD311
	O	PLATE		8A-CJ6-009-010	1C	WINDOW,FR	EZS	XR-MD311
	O	PLATE		8A-CJ6-010-010	1B	WINDOW,CD	EZS	XR-MD311
	O	PLATE		8A-CJ6-011-010	2A	HLDR,CHUCK B	EZS	XR-MD311
	O	PLATE		8A-CJ6-020-010	1C	COVER, CD L	EZS	XR-MD311
	O	PLATE		8A-CJ6-021-010	1C	REFLECTOR,LCD	EZS	XR-MD311
	O	PLATE		8A-CJ6-022-010	1C	HLDR,GEAR	EZS	XR-MD311
	O	PLATE		8A-CJ6-027-010	--	PANEL,FUN EZ	EZS	XR-MD311
	O	PLATE		8A-CJ6-028-010	--	PANEL,MD1 EZ	EZS	XR-MD311
	O	PLATE		8A-CJ6-029-010	0E	PANEL,FLAP MD	EZS	XR-MD311
	X	PLATE		8A-CJ6-034-010	1A	LBL,SPEC EZS	EZS	XR-MD311
	X	PLATE		8A-CJ6-038-010	--	LBL,BBE/DOLBY EX	EZS	XR-MD311
	O	PLATE		8Z-CDB-169-010	1D	PANEL,CD SANYO	EZS	XR-MD311
	O	POWER AMP	C 0100	87-010-068-080	0E	CAP,E 0.22-50 M 5L SRE	EZS	XR-MD311
	O	POWER AMP	C 0101	87-010-068-080	0E	CAP,E 0.22-50 M 5L SRE	EZS	XR-MD311
	O	POWER AMP	C 0102	87-010-178-080	0E	C-CAP,S 1000P-50 K B C2012	EZS	XR-MD311
	O	POWER AMP	C 0103	87-010-178-080	0E	C-CAP,S 1000P-50 K B C2012	EZS	XR-MD311
	O	POWER AMP	C 0104	87-010-234-040	0E	CAP,E 47-16 M 5L SRE	EZS	XR-MD311
	O	POWER AMP	C 0106	87-010-405-080	0E	CAP,E 10-50 M 11L SME	EZS	XR-MD311
	O	POWER AMP	C 0108	87-010-069-080	0E	CAP,E 0.33-50 M 5L SRE	EZS	XR-MD311
	O	POWER AMP	C 0109	87-010-069-080	0E	CAP,E 0.33-50 M 5L SRE	EZS	XR-MD311
	O	POWER AMP	C 0110	87-010-260-080	0E	CAP,E 47-25 M 11L SME	EZS	XR-MD311
	O	POWER AMP	C 0111	87-010-385-080	0E	CAP,E 220-25 M SME	EZS	XR-MD311
	O	POWER AMP	C 0112	87-010-195-080	0E	C-CAP,S 0.068-25 Z F C2012	EZS	XR-MD311
	O	POWER AMP	C 0113	87-010-195-080	0E	C-CAP,S 0.068-25 Z F C2012	EZS	XR-MD311
	O	POWER AMP	C 0114	87-010-544-080	0E	CAP,E 0.1-50 M 11L SME	EZS	XR-MD311
	O	POWER AMP	C 0115	87-010-544-080	0E	CAP,E 0.1-50 M 11L SME	EZS	XR-MD311
	O	POWER AMP	C 0116	87-018-132-080	0E	CAP,TC U 2200P-16 N X UP050	EZS	XR-MD311
	O	POWER AMP	C 0117	87-018-132-080	0E	CAP,TC U 2200P-16 N X UP050	EZS	XR-MD311
	X	POWER AMP	C 0120	88-700-910-810	0E	CAP,M 0.1-50 J AMZV	EZS	XR-MD311
	X	POWER AMP	C 0121	88-700-910-810	0E	CAP,M 0.1-50 J AMZV	EZS	XR-MD311
	X	POWER AMP	C 0122	88-700-910-810	0E	CAP,M 0.1-50 J AMZV	EZS	XR-MD311
	X	POWER AMP	C 0123	88-700-910-810	0E	CAP,M 0.1-50 J AMZV	EZS	XR-MD311
	O	POWER AMP	C 0124	87-010-112-080	0E	CAP,E 100-16 M 11L SME	EZS	XR-MD311
	O	POWER AMP	C 0125	87-010-112-080	0E	CAP,E 100-16 M 11L SME	EZS	XR-MD311
	O	POWER AMP	C 0126	87-010-112-080	0E	CAP,E 100-16 M 11L SME	EZS	XR-MD311
	O	POWER AMP	C 0127	87-018-123-080	0E	CAP,TC U 220P-50 K B UP050	EZS	XR-MD311
	O	POWER AMP	C 0128	87-018-123-080	0E	CAP,TC U 220P-50 K B UP050	EZS	XR-MD311
	O	POWER AMP	C 0129	87-010-112-080	0E	CAP,E 100-16 M 11L SME	EZS	XR-MD311
	O	POWER AMP	C 0131	87-010-405-080	0E	CAP,E 10-50 M 11L SME	EZS	XR-MD311
	O	POWER AMP	C 0132	87-010-405-080	0E	CAP,E 10-50 M 11L SME	EZS	XR-MD311
	O	POWER AMP	C 0134	87-010-322-080	0E	C-CAP,S 100P-50 J CH GRM	EZS	XR-MD311
	O	POWER AMP	C 0135	87-018-119-080	0E	CAP,TC U 100P-50 K B UP050	EZS	XR-MD311
	O	POWER AMP	C 0136	87-010-075-080	0E	CAP,E 10-16 M 5L SRE	EZS	XR-MD311
	O	POWER AMP	C 0138	87-018-134-080	0E	CAP,TC U 0.01-16 N Y UP050	EZS	XR-MD311
	O	POWER AMP	C 0139	87-018-209-080	0E	CAP,TC U 0.1-50 Z F UP050	EZS	XR-MD311
	O	POWER AMP	C 0140	87-018-134-080	0E	CAP,TC U 0.01-16 N Y UP050	EZS	XR-MD311
	O	POWER AMP	C 0142	87-018-134-080	0E	CAP,TC U 0.01-16 N Y UP050	EZS	XR-MD311
	O	POWER AMP	CNA0101	88-805-020-890	0E	CONN ASSY,2P 80	EZS	XR-MD311
	S	POWER AMP	D 0100	87-020-465-080	0E	DIODE,1SS133	EZS	XR-MD311
	S	POWER AMP	D 0101	87-020-465-080	0E	DIODE,1SS133	EZS	XR-MD311
	S	POWER AMP	D 0102	87-020-465-080	0E	DIODE,1SS133	EZS	XR-MD311

PARTS LIST

! = ⚠ SAFTY PARTS
C = Components marked
All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.
K NO. = Only use japanese.

!	C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
	S	POWER AMP	IC 0100	87-A21-552-010	1H	IC,LA4663A	EZS	XR-MD311
!	O	POWER AMP	J 0100	87-A60-238-010	1A	TERMINAL,SP 4P (MSC)	EZS	XR-MD311
!	O	POWER AMP	J 0102	87-009-216-010	1A	JACK,3.5 BLK ST W/SW	EZS	XR-MD311
	X	POWER AMP	JR 0101	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	POWER AMP	JR 0102	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	POWER AMP	JR 0103	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	POWER AMP	JR 0104	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	POWER AMP	JR 0105	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	POWER AMP	JR 0106	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	POWER AMP	JR 0107	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	POWER AMP	JR 0109	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	POWER AMP	JR 0130	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	O	POWER AMP	L 0100	87-003-383-010	1A	COIL,1UH K	EZS	XR-MD311
	O	POWER AMP	L 0101	87-003-383-010	1A	COIL,1UH K	EZS	XR-MD311
	X	POWER AMP	L 0102	88-100-000-010	0E	PLATING-JW, 0.58 SN95	EZS	XR-MD311
	O	POWER AMP	L 0103	87-008-372-010	0E	FLTR,EMIBL01 RN1	EZS	XR-MD311
	X	POWER AMP	L 0105	88-100-000-010	0E	PLATING-JW, 0.58 SN95	EZS	XR-MD311
	S	POWER AMP	Q 0100	87-A30-105-080	0E	C-TR,RT1P 441C	EZS	XR-MD311
	S	POWER AMP	Q 0101	87-026-228-080	0E	C-TR,DTA124EK	EZS	XR-MD311
	S	POWER AMP	Q 0102	87-A30-257-080	0E	C-TR,2SD1306E	EZS	XR-MD311
	S	POWER AMP	Q 0103	87-A30-257-080	0E	C-TR,2SD1306E	EZS	XR-MD311
	X	POWER AMP	R 0100	88-118-101-080	0E	C-RES,S 100-1/10W J	EZS	XR-MD311
	X	POWER AMP	R 0101	88-118-682-080	0E	C-RES,S 6.8K-1/10W J	EZS	XR-MD311
	X	POWER AMP	R 0102	88-118-682-080	0E	C-RES,S 6.8K-1/10W J	EZS	XR-MD311
	X	POWER AMP	R 0103	88-118-223-080	0E	C-RES,S 22K-1/10W J	EZS	XR-MD311
	X	POWER AMP	R 0104	88-118-223-080	0E	C-RES,S 22K-1/10W J	EZS	XR-MD311
	X	POWER AMP	R 0105	88-118-272-080	0E	C-RES,S 2.7K-1/10W J	EZS	XR-MD311
	X	POWER AMP	R 0106	88-118-272-080	0E	C-RES,S 2.7K-1/10W J	EZS	XR-MD311
	X	POWER AMP	R 0107	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	POWER AMP	R 0108	88-118-152-080	0E	C-RES,S 1.5K-1/10W J	EZS	XR-MD311
	X	POWER AMP	R 0109	88-118-273-080	0E	C-RES,S 27K-1/10W J	EZS	XR-MD311
	X	POWER AMP	R 0111	88-118-152-080	0E	C-RES,S 1.5K-1/10W J	EZS	XR-MD311
	X	POWER AMP	R 0112	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	POWER AMP	R 0113	88-118-224-080	0E	C-RES,S 220K-1/10W J	EZS	XR-MD311
	X	POWER AMP	R 0114	88-118-224-080	0E	C-RES,S 220K-1/10W J	EZS	XR-MD311
	X	POWER AMP	R 0115	88-118-223-080	0E	C-RES,S 22K-1/10W J	EZS	XR-MD311
	X	POWER AMP	R 0117	88-130-100-080	0E	RES,10-1/4W J	EZS	XR-MD311
	X	POWER AMP	R 0118	88-130-100-080	0E	RES,10-1/4W J	EZS	XR-MD311
	X	POWER AMP	R 0119	88-130-100-080	0E	RES,10-1/4W J	EZS	XR-MD311
	X	POWER AMP	R 0120	88-130-100-080	0E	RES,10-1/4W J	EZS	XR-MD311
	X	POWER AMP	R 0121	88-130-121-080	0E	RES,120-1/4W J	EZS	XR-MD311
	X	POWER AMP	R 0122	88-130-121-080	0E	RES,120-1/4W J	EZS	XR-MD311
	X	POWER AMP	R 0123	88-130-121-080	0E	RES,120-1/4W J	EZS	XR-MD311
	X	POWER AMP	R 0124	88-128-229-080	0E	C-RES, 2.2-1/8W J	EZS	XR-MD311
	X	POWER AMP	R 0125	88-128-229-080	0E	C-RES, 2.2-1/8W J	EZS	XR-MD311
	X	POWER AMP	R 0126	88-128-229-080	0E	C-RES, 2.2-1/8W J	EZS	XR-MD311
	X	POWER AMP	R 0127	88-128-229-080	0E	C-RES, 2.2-1/8W J	EZS	XR-MD311
	X	POWER AMP	R 0128	88-130-121-080	0E	RES,120-1/4W J	EZS	XR-MD311
	X	POWER AMP	R 0129	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	POWER AMP	R 0130	88-118-223-080	0E	C-RES,S 22K-1/10W J	EZS	XR-MD311
	X	POWER AMP	R 0131	88-118-223-080	0E	C-RES,S 22K-1/10W J	EZS	XR-MD311
	X	POWER AMP	R 0132	88-121-222-080	0E	RES,2.2K-1/8W J	EZS	XR-MD311
	X	POWER AMP	R 0133	88-121-222-080	0E	RES,2.2K-1/8W J	EZS	XR-MD311
	X	POWER AMP	R 0134	88-121-222-080	0E	RES,2.2K-1/8W J	EZS	XR-MD311
	X	POWER AMP	R 0135	88-121-222-080	0E	RES,2.2K-1/8W J	EZS	XR-MD311
	X	POWER AMP	W 0310	89-750-044-610	0E	WIRE ASSY,40 LUG	EZS	XR-MD311
	X	POWER SUPPLY		87-033-220-010	0E	PIN,DIA1 COATING	EZS	XR-MD311
	O	POWER SUPPLY	C 0001	87-010-264-040	0E	CAP,E 100-10 M 5L SRE	EZS	XR-MD311
	O	POWER SUPPLY	C 0002	87-010-194-080	0E	C-CAP,S 0.047-25 Z F	EZS	XR-MD311
	O	POWER SUPPLY	C 0003	87-010-075-040	0E	CAP,E 10-16 M 5L SRE	EZS	XR-MD311
	O	POWER SUPPLY	C 0004	87-010-194-080	0E	C-CAP,S 0.047-25 Z F	EZS	XR-MD311
	O	POWER SUPPLY	C 0006	87-010-235-080	0E	CAP,E 470-16 M SME	EZS	XR-MD311
	O	POWER SUPPLY	C 0007	87-010-112-080	0E	CAP,E 100-16 M 11L SME	EZS	XR-MD311
	O	POWER SUPPLY	C 0008	87-010-408-080	0E	CAP,E 47-50 M 11L SME	EZS	XR-MD311
	O	POWER SUPPLY	C 0010	87-010-197-080	0E	C-CAP,S 0.01-25 K B C2012	EZS	XR-MD311
	O	POWER SUPPLY	C 0011	87-010-408-080	0E	CAP,E 47-50 M 11L SME	EZS	XR-MD311
	O	POWER SUPPLY	C 0012	87-010-928-000	1B	CAP,E 4700-25 M SMG	EZS	XR-MD311
	O	POWER SUPPLY	C 0013	87-010-928-000	1B	CAP,E 4700-25 M SMG	EZS	XR-MD311
!	O	POWER SUPPLY	C 0014	87-010-780-490	1C	CAP,E 6800-25 M SMG	EZS	XR-MD311
	O	POWER SUPPLY	C 0015	87-010-196-080	0E	C-CAP,S 0.1-25 Z F C2012	EZS	XR-MD311

PARTS LIST

! = ⚠ SAFTY PARTS
C = Components marked
All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.
K NO. = Only use japanese.

!	C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
	O	POWER SUPPLY	C 0016	87-010-196-080	0E	C-CAP,S 0.1-25 Z F C2012	EZS	XR-MD311
	O	POWER SUPPLY	C 0017	87-010-196-080	0E	C-CAP,S 0.1-25 Z F C2012	EZS	XR-MD311
	O	POWER SUPPLY	C 0018	87-010-196-080	0E	C-CAP,S 0.1-25 Z F C2012	EZS	XR-MD311
	O	POWER SUPPLY	C 0019	87-010-252-010	0E	CAP,E 1000-6.3 M SME	EZS	XR-MD311
	O	POWER SUPPLY	C 0020	87-010-387-080	1A	CAP,E 470-25 M SME	EZS	XR-MD311
	O	POWER SUPPLY	C 0021	87-010-196-080	0E	C-CAP,S 0.1-25 Z F C2012	EZS	XR-MD311
	O	POWER SUPPLY	C 0022	87-012-368-080	0E	C-CAP,S 0.1-50 Z F	EZS	XR-MD311
	O	POWER SUPPLY	C 0023	87-012-368-080	0E	C-CAP,S 0.1-50 Z F	EZS	XR-MD311
	O	POWER SUPPLY	C 0024	87-010-196-080	0E	C-CAP,S 0.1-25 Z F C2012	EZS	XR-MD311
	O	POWER SUPPLY	C 0025	87-010-196-080	0E	C-CAP,S 0.1-25 Z F C2012	EZS	XR-MD311
	O	POWER SUPPLY	C 0026	87-010-196-080	0E	C-CAP,S 0.1-25 Z F C2012	EZS	XR-MD311
	O	POWER SUPPLY	C 0027	87-010-196-080	0E	C-CAP,S 0.1-25 Z F C2012	EZS	XR-MD311
	O	POWER SUPPLY	C 0028	87-010-196-080	0E	C-CAP,S 0.1-25 Z F C2012	EZS	XR-MD311
	O	POWER SUPPLY	CN 0003	87-099-556-010	0E	CONN,10P H TUC-P10X-B1	EZS	XR-MD311
	O	POWER SUPPLY	CN 0005	87-099-567-010	0E	CONN,10P V TUC-P10P-B1	EZS	XR-MD311
	O	POWER SUPPLY	CN 0006	84-722-634-010	--	CONN,8P EH-H	EZS	XR-MD311
	O	POWER SUPPLY	CNA0001	88-805-033-030	0E	CONN ASSY,3P 300	EZS	XR-MD311
	X	POWER SUPPLY	D 0001	88-100-000-010	0E	PLATING-JW, 0.58 SN95	EZS	XR-MD311
	S	POWER SUPPLY	D 0002	87-A40-509-080	0E	ZENER,MTZJ6.8C	EZS	XR-MD311
	S	POWER SUPPLY	D 0003	87-070-274-080	0E	DIODE,1N4003 SEM	EZS	XR-MD311
	S	POWER SUPPLY	D 0004	87-070-274-080	0E	DIODE,1N4003 SEM	EZS	XR-MD311
	S	POWER SUPPLY	D 0005	87-A40-345-080	0E	ZENER,MTZJ10C	EZS	XR-MD311
	S	POWER SUPPLY	D 0006	87-020-465-080	0E	DIODE,1SS133	EZS	XR-MD311
	S	POWER SUPPLY	D 0007	87-020-465-080	0E	DIODE,1SS133	EZS	XR-MD311
	S	POWER SUPPLY	D 0008	87-A40-270-080	0E	C-DIODE,MC2838	EZS	XR-MD311
	S	POWER SUPPLY	D 0009	87-A40-269-080	0E	C-DIODE,MC2836	EZS	XR-MD311
	S	POWER SUPPLY	D 0010	87-070-274-080	0E	DIODE,1N4003 SEM	EZS	XR-MD311
	S	POWER SUPPLY	D 0011	87-070-274-080	0E	DIODE,1N4003 SEM	EZS	XR-MD311
	S	POWER SUPPLY	D 0012	87-A40-003-080	0E	ZENER,MTZJ4.3A	EZS	XR-MD311
	S	POWER SUPPLY	D 0013	87-070-274-080	0E	DIODE,1N4003 SEM	EZS	XR-MD311
	S	POWER SUPPLY	D 0014	87-070-274-080	0E	DIODE,1N4003 SEM	EZS	XR-MD311
	S	POWER SUPPLY	D 0015	87-070-178-090	0E	DIODE,1N5402-BD54	EZS	XR-MD311
	S	POWER SUPPLY	D 0016	87-070-178-090	0E	DIODE,1N5402-BD54	EZS	XR-MD311
	S	POWER SUPPLY	D 0017	87-070-274-080	0E	DIODE,1N4003 SEM	EZS	XR-MD311
	S	POWER SUPPLY	D 0018	87-070-274-080	0E	DIODE,1N4003 SEM	EZS	XR-MD311
	S	POWER SUPPLY	D 0019	87-070-274-080	0E	DIODE,1N4003 SEM	EZS	XR-MD311
	S	POWER SUPPLY	D 0020	87-070-274-080	0E	DIODE,1N4003 SEM	EZS	XR-MD311
	X	POWER SUPPLY	JR 0001	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	POWER SUPPLY	JR 0002	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	POWER SUPPLY	JR 0005	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	POWER SUPPLY	JR 0007	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	POWER SUPPLY	JR 0008	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	POWER SUPPLY	JR 0009	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	POWER SUPPLY	JR 0010	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	POWER SUPPLY	JR 0011	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	POWER SUPPLY	JR 0012	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	X	POWER SUPPLY	JR 0013	88-118-000-080	0E	C-JUMPER,S	EZS	XR-MD311
	X	POWER SUPPLY	JR 0014	88-129-000-080	0E	C-JUMPER,3216	EZS	XR-MD311
	S	POWER SUPPLY	Q 0001	87-026-610-080	0E	TR,KTC3198GR	EZS	XR-MD311
	S	POWER SUPPLY	Q 0002	87-A30-234-080	0E	TR,CSC4115BC	EZS	XR-MD311
	S	POWER SUPPLY	Q 0003	87-A30-075-080	0E	C-TR,2SA1235F	EZS	XR-MD311
	S	POWER SUPPLY	Q 0005	87-A30-076-080	0E	C-TR,2SC3052F	EZS	XR-MD311
	S	POWER SUPPLY	Q 0006	87-026-610-080	0E	TR,KTC3198GR	EZS	XR-MD311
	S	POWER SUPPLY	Q 0007	89-213-702-010	1A	TR,2SB1370E	EZS	XR-MD311
	S	POWER SUPPLY	Q 0008	87-A30-076-080	0E	C-TR,2SC3052F	EZS	XR-MD311
	S	POWER SUPPLY	Q 0009	87-A30-075-080	0E	C-TR,2SA1235F	EZS	XR-MD311
	S	POWER SUPPLY	Q 0010	87-A30-076-080	0E	C-TR,2SC3052F	EZS	XR-MD311
	S	POWER SUPPLY	Q 0011	87-A30-076-080	0E	C-TR,2SC3052F	EZS	XR-MD311
	S	POWER SUPPLY	Q 0012	87-A30-076-080	0E	C-TR,2SC3052F	EZS	XR-MD311
	S	POWER SUPPLY	Q 0013	89-213-702-010	1A	TR,2SB1370E	EZS	XR-MD311
	X	POWER SUPPLY	R 0001	88-121-109-080	0E	RES,1-1/8W J	EZS	XR-MD311
	X	POWER SUPPLY	R 0002	88-118-101-080	0E	C-RES,S 100-1/10W J	EZS	XR-MD311
	X	POWER SUPPLY	R 0003	88-100-000-010	0E	PLATING-JW, 0.58 SN95	EZS	XR-MD311
	X	POWER SUPPLY	R 0004	88-121-100-080	0E	RES,10-1/8W J	EZS	XR-MD311
	X	POWER SUPPLY	R 0005	88-118-561-080	0E	C-RES,S 560-1/10W J	EZS	XR-MD311
	X	POWER SUPPLY	R 0006	88-100-000-010	0E	PLATING-JW, 0.58 SN95	EZS	XR-MD311
	X	POWER SUPPLY	R 0007	88-118-101-080	0E	C-RES,S 100-1/10W J	EZS	XR-MD311
	X	POWER SUPPLY	R 0008	88-118-471-080	0E	C-RES,S 470-1/10W J	EZS	XR-MD311
	X	POWER SUPPLY	R 0009	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	POWER SUPPLY	R 0010	88-118-222-080	0E	C-RES,S 2.2K-1/10W J	EZS	XR-MD311

PARTS LIST

! = ⚠ SAFTY PARTS
C = Components marked
All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.
K NO. = Only use japanese.

!	C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
	X	POWER SUPPLY	R 0012	88-118-471-080	0E	C-RES,S 470-1/10W J	EZS	XR-MD311
	X	POWER SUPPLY	R 0013	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	POWER SUPPLY	R 0015	88-118-221-080	0E	C-RES,S 220-1/10W J	EZS	XR-MD311
	X	POWER SUPPLY	R 0016	88-118-103-080	0E	C-RES,S 10K-1/10W J	EZS	XR-MD311
	X	POWER SUPPLY	R 0017	88-118-333-080	0E	C-RES,S 33K-1/10W J	EZS	XR-MD311
	X	POWER SUPPLY	R 0018	88-118-472-080	0E	C-RES,S 4.7K-1/10W J	EZS	XR-MD311
	X	POWER SUPPLY	R 0019	88-118-471-080	0E	C-RES,S 470-1/10W J	EZS	XR-MD311
	X	POWER SUPPLY	R 0020	88-118-680-080	0E	C-RES,S 68-1/10W J	EZS	XR-MD311
	X	POWER SUPPLY	R 0021	88-118-224-080	0E	C-RES,S 220K-1/10W J	EZS	XR-MD311
	X	POWER SUPPLY	R 0022	88-118-102-080	0E	C-RES,S 1K-1/10W J	EZS	XR-MD311
	X	POWER SUPPLY	R 0023	88-118-333-080	0E	C-RES,S 33K-1/10W J	EZS	XR-MD311
	X	POWER SUPPLY	R 0025	88-140-471-080	0E	RES,470-1/2W J	EZS	XR-MD311
	X	POWER SUPPLY	R 0026	88-140-471-080	0E	RES,470-1/2W J	EZS	XR-MD311
	X	POWER SUPPLY	R 0027	88-140-471-080	0E	RES,470-1/2W J	EZS	XR-MD311
	X	POWER SUPPLY	R 0028	88-140-471-080	0E	RES,470-1/2W J	EZS	XR-MD311
	X	POWER SUPPLY	R 0029	88-118-123-080	0E	C-RES,S 12K-1/10W J	EZS	XR-MD311
	X	POWER SUPPLY	R 0032	88-118-393-080	0E	C-RES,S 39K-1/10W J	EZS	XR-MD311
	X	POWER SUPPLY	R 0033	88-118-393-080	0E	C-RES,S 39K-1/10W J	EZS	XR-MD311
	X	POWER SUPPLY	R 0034	88-118-151-080	0E	C-RES,S 150-1/10W J	EZS	XR-MD311
	X	POWER SUPPLY	R 0035	88-118-101-080	0E	C-RES,S 100-1/10W J	EZS	XR-MD311
	X	POWER SUPPLY	R 0036	88-118-471-080	0E	C-RES,S 470-1/10W J	EZS	XR-MD311
	X	POWER SUPPLY	R 0037	88-118-473-080	0E	C-RES,S 47K-1/10W J	EZS	XR-MD311
	X	POWER SUPPLY	R 0038	88-118-473-080	0E	C-RES,S 47K-1/10W J	EZS	XR-MD311
	X	PRINTED DU		87-056-168-010	0E	SH,CAUTION INF-WARR(EC)	EZS	XR-MD311
	X	PRINTED DU		87-B40-088-010	0E	BAG,PV 0.04-300-400 PL	EZS	XR-MD311
	X	PRINTED DU		87-B50-066-010	0E	LIST,FACILITY(B)-TOKYO	EZS	XR-MD311
	O	PRINTED DU		8A-CJ6-906-010	2Y	IB,EZ(9L)I	EZS	XR-MD311
	O	SCREW		87-067-579-010	0E	BVT2+3-8 W/0 SL0T	EZS	XR-MD311
	O	SCREW		87-067-586-010	0E	BVTT+4-8	EZS	XR-MD311
	O	SCREW		87-067-703-010	0E	BVT2+3-10 W/0 SL0T	EZS	XR-MD311
	O	SCREW		87-067-758-010	0E	BVT2+3-12 W/0 SL0T	EZS	XR-MD311
	O	SCREW		87-261-092-410	0E	V+3-4	EZS	XR-MD311
	O	SCREW		87-264-529-310	0E	V+1.7-4	EZS	XR-MD311
	O	SCREW		87-721-096-410	0E	QT2+3-10 W/O SLOT	EZS	XR-MD311
	O	SCREW		87-723-096-410	0E	QT2+3-10 W/O SLOT BLK	EZS	XR-MD311
	O	SCREW		87-761-096-410	0E	VFT2+3-10 W/O SLOT	EZS	XR-MD311
	O	SCREW		87-NF4-224-010	0E	S-SCREW,IT3B+3-8 CU	EZS	XR-MD311
	O	SCREW		8Z-CK5-222-010	0E	S-SCREW,CD+2.6-6 F9	EZS	XR-MD311
	X	SPKR ASSY		88-CL3-947-010	--	TUBE,SX-M35	EZS	XR-MD311
	X	SPKR ASSY		8A-CJ5-409-010	1A	FASTENER,	EZS	XR-MD311
	O	SPKR ASSY		8A-CJ5-415-010	1A	TERMINAL,	EZS	XR-MD311
	O	SPKR ASSY		8A-CJ6-402-010	--	PANEL,FR	EZS	XR-MD311
	O	SPKR ASSY		8A-CJ6-403-010	--	PANEL,SP	EZS	XR-MD311
	O	SPKR ASSY		8A-CJ6-404-010	--	PANEL,TW	EZS	XR-MD311
	X	SPKR ASSY		8A-CJ6-405-010	--	PANEL,BA	EZS	XR-MD311
	O	SPKR ASSY		8A-CJ6-406-010	--	GRILLE,FRAME ASSY	EZS	XR-MD311
	X	SPKR ASSY		8A-CJ6-407-010	--	GRILLE,FRAME	EZS	XR-MD311
	X	SPKR ASSY		8A-CJ6-408-010	--	NET,	EZS	XR-MD311
	X	SPKR ASSY		8A-CJ6-409-010	--	PLATE,NAME	EZS	XR-MD311
	X	SPKR ASSY		8A-CJ6-410-010	--	PWB, ASSY	EZS	XR-MD311
	X	SPKR ASSY		8A-CJ6-411-010	--	LBL,SPEC S	EZS	XR-MD311
	X	SPKR ASSY		8A-CJ6-412-010	--	CABI,M	EZS	XR-MD311
	O	SPKR ASSY		8A-CJ6-416-010	--	SPKR, TW 20	EZS	XR-MD311
	O	SPKR ASSY		8A-CJ6-417-010	--	SPKR, W 100 L	EZS	XR-MD311
	X	SPKR ASSY		8A-CJ6-423-010	2F	SPKR, ASSY SX-M310YL	EZS	XR-MD311
	X	SPKR ASSY		8A-CJ6-424-010	--	CUSHION,ASSY YL	EZS	XR-MD311
	X	SPKR ASSY		8A-CJ6-430-010	--	SLEEVE,YL	EZS	XR-MD311
	X	SPKR ASSY		8Z-SSM-005-010	0E	BOSS,CATCHER	EZS	XR-MD311

PARTS LIST (TUNER : ZZA-1) <YZRDSRPNC>

! = ⚠ SAFTY PARTS
C = Components marked
All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.
K NO. = Only use japanese.

!	C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
	X	ASSY CODE		A8-ZZA-19Y-070	--	ZZA-1 YZRDSRPNC	YZRDSRPNC	ZZA-1
	X	ELECTRICAL		84-426-949-010	0E	LBL,SERIAL NO	YZRDSRPNC	ZZA-1
	X	PACKING		87-B40-303-010	--	BAG,PV 0.025-590-730 PL	YZRDSRPNC	ZZA-1
	X	PACKING		8Z-ZA1-859-010	--	CTN,OUTER YDST RTNC	YZRDSRPNC	ZZA-1
	X	PACKING		8Z-ZA1-860-010	--	BD,ASSY YNC	YZRDSRPNC	ZZA-1
	X	PACKING		8Z-ZA1-861-010	--	BD,SECTION ANC	YZRDSRPNC	ZZA-1
	X	PACKING		8Z-ZA1-862-010	--	BD,SECTION BNC	YZRDSRPNC	ZZA-1
	X	PACKING		8Z-ZA1-863-010	--	PAD,ANC	YZRDSRPNC	ZZA-1
	X	PACKING		8Z-ZA1-864-010	--	PAD,BNC	YZRDSRPNC	ZZA-1
	X	PACKING		8Z-ZA1-865-010	--	BD,BASE NC	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0731	87-012-286-080	0E	C-CAP,U 0.01-25 K B	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0733	87-012-280-080	0E	C-CAP,U 3300P-50 K B	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0734	87-012-280-080	0E	C-CAP,U 3300P-50 K B	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0752	87-012-282-080	0E	C-CAP,U 4700P-50 K B	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0753	87-012-195-080	0E	C-CAP,U 100P-50 J CH	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0755	87-012-286-080	0E	C-CAP,U 0.01-25 K B	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0756	87-012-286-080	0E	C-CAP,U 0.01-25 K B	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0757	87-012-188-080	0E	C-CAP,U 47P-50 J CH	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0758	87-012-167-080	0E	C-CAP,U 5P-50 C CH	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0761	87-010-196-080	0E	C-CAP,S 0.1-25 Z F C2012	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0762	87-012-286-080	0E	C-CAP,U 0.01-25 K B	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0763	87-010-829-080	0E	C-CAP,U 0.047-16 Z F	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0765	87-012-286-080	0E	C-CAP,U 0.01-25 K B	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0766	87-010-197-080	0E	C-CAP,S 0.01-25 K B C2012	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0768	87-012-286-080	0E	C-CAP,U 0.01-25 K B	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0769	87-010-260-080	0E	CAP,E 47-25 M 11L SME	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0770	87-010-829-080	0E	C-CAP,U 0.047-16 Z F	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0771	87-010-383-080	0E	CAP,E 33-25 M 11L SME	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0772	87-010-829-080	0E	C-CAP,U 0.047-16 Z F	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0773	87-010-196-080	0E	C-CAP,S 0.1-25 Z F C2012	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0774	87-010-263-080	0E	CAP,E 100-10 M 11L SME	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0775	87-010-404-080	0E	CAP,E 4.7-50 M 11L SME	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0776	87-012-286-080	0E	C-CAP,U 0.01-25 K B	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0777	87-010-493-080	0E	CAP,E 0.47-50 M 5L SRE	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0778	87-010-401-080	0E	CAP,E 1-50 M 11L SME	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0779	87-010-401-080	0E	CAP,E 1-50 M 11L SME	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0780	87-010-196-080	0E	C-CAP,S 0.1-25 Z F C2012	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0781	87-010-405-080	0E	CAP,E 10-50 M 11L SME	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0782	87-010-405-080	0E	CAP,E 10-50 M 11L SME	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0783	87-012-286-080	0E	C-CAP,U 0.01-25 K B	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0784	87-012-286-080	0E	C-CAP,U 0.01-25 K B	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0785	87-010-402-080	0E	CAP,E 2.2-50 M 11L SME	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0786	87-010-402-080	0E	CAP,E 2.2-50 M 11L SME	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0787	87-012-275-080	0E	C-CAP,U 1200P-50 K B GRM	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0788	87-012-275-080	0E	C-CAP,U 1200P-50 K B GRM	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0789	87-012-275-080	0E	C-CAP,U 1200P-50 K B GRM	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0790	87-012-275-080	0E	C-CAP,U 1200P-50 K B GRM	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0791	87-010-405-080	0E	CAP,E 10-50 M 11L SME	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0793	87-012-273-080	0E	C-CAP,U 820P-50 K B	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0794	87-010-406-080	0E	CAP,E 22-50 M 11L SME	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0795	87-010-596-080	0E	C-CAP,S 0.047-16 K R C2012	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0796	87-010-403-080	0E	CAP,E 3.3-50 M 11L SME	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0797	87-012-276-080	0E	C-CAP,U 1500P-50 K B	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0798	87-012-276-080	0E	C-CAP,U 1500P-50 K B	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	C 0799	87-010-829-080	0E	C-CAP,U 0.047-16 Z F	YZRDSRPNC	ZZA-1
	S	TUNER(IF)	D 0771	87-020-465-080	0E	DIODE,1SS133	YZRDSRPNC	ZZA-1
	S	TUNER(IF)	D 0773	87-020-465-080	0E	DIODE,1SS133	YZRDSRPNC	ZZA-1
	S	TUNER(IF)	IC 0771	87-A20-913-010	1D	IC,LA1837NL	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	JR 0761	88-129-000-080	0E	C-JUMPER,3216	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	JR 0762	88-129-000-080	0E	C-JUMPER,3216	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	JR 0765	88-129-000-080	0E	C-JUMPER,3216	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	JR 0766	88-129-000-080	0E	C-JUMPER,3216	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	JR 0767	88-129-000-080	0E	C-JUMPER,3216	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	JR 0768	88-129-000-080	0E	C-JUMPER,3216	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	JR 0771	88-118-000-080	0E	C-JUMPER,S	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	JR 0772	88-118-000-080	0E	C-JUMPER,S	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	JR 0785	88-118-000-080	0E	C-JUMPER,S	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	JR 0786	88-118-000-080	0E	C-JUMPER,S	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	JR 0793	88-118-000-080	0E	C-JUMPER,S	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	JR 0794	88-118-000-080	0E	C-JUMPER,S	YZRDSRPNC	ZZA-1

PARTS LIST (TUNER : ZZA-1) <YZRDSRPNC>

! = ⚠ SAFTY PARTS
C = Components marked
All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.
K NO. = Only use japanese.

!	C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
	O	TUNER(IF)	L 0771	87-A50-266-010	1A	COIL,FM DET-2N(TOK)	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	L 0772	87-A91-110-010	1B	FLTR,PCFJZH-450 (TOK)	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	L 0781	87-005-847-080	0E	COIL,2.2UH K CECS	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	L 0791	87-A50-027-010	1A	COIL,1 POLE MPX(TOK)	YZRDSRPNC	ZZA-1
	O	TUNER(IF)	L 0792	87-A50-027-010	1A	COIL,1 POLE MPX(TOK)	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	R 0733	88-108-000-080	0E	C-JUMPER,U	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	R 0734	88-108-000-080	0E	C-JUMPER,U	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	R 0735	88-108-562-080	0E	C-RES,U 5.6K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	R 0736	88-128-562-080	0E	C-RES, 5.6K-1/8W J	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	R 0743	88-121-822-080	0E	RES,8.2K-1/8W J	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	R 0760	88-108-271-080	0E	C-RES,U 270-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	R 0761	88-118-102-080	0E	C-RES,S 1K-1/10W J	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	R 0763	88-108-221-080	0E	C-RES,U 220-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	R 0765	88-108-151-080	0E	C-RES,U 150-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	R 0771	88-108-154-080	0E	C-RES,U 150K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	R 0772	88-108-822-080	0E	C-RES,U 8.2K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	R 0773	88-108-183-080	0E	C-RES,U 18K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	R 0774	88-108-220-080	0E	C-RES,U 22-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	R 0775	88-118-332-080	0E	C-RES,S 3.3K-1/10W J	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	R 0776	88-118-472-080	0E	C-RES,S 4.7K-1/10W J	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	R 0779	88-108-102-080	0E	C-RES,U 1K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	R 0780	88-108-102-080	0E	C-RES,U 1K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	R 0781	88-108-222-080	0E	C-RES,U 2.2K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	R 0782	88-108-222-080	0E	C-RES,U 2.2K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	R 0783	88-108-822-080	0E	C-RES,U 8.2K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	R 0784	88-108-472-080	0E	C-RES,U 4.7K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	R 0785	88-121-332-080	0E	RES,3.3K-1/8W J	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	R 0787	88-108-472-080	0E	C-RES,U 4.7K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	R 0788	88-108-153-080	0E	C-RES,U 15K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	R 0790	88-108-183-080	0E	C-RES,U 18K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	R 0791	88-108-102-080	0E	C-RES,U 1K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	R 0792	88-108-183-080	0E	C-RES,U 18K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	R 0793	88-108-153-080	0E	C-RES,U 15K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	R 0794	88-108-682-080	0E	C-RES,U 6.8K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	R 0795	88-108-102-080	0E	C-RES,U 1K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	R 0797	88-108-562-080	0E	C-RES,U 5.6K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(IF)	R 0798	88-108-562-080	0E	C-RES,U 5.6K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(PLL)	*	8Z-ZA1-623-010	1A	PWB,TUNER 4M EZKG C	YZRDSRPNC	ZZA-1
	O	TUNER(PLL)	C 0701	87-010-381-080	0E	CAP,E 330-16 M SME	YZRDSRPNC	ZZA-1
	O	TUNER(PLL)	C 0702	87-010-404-080	0E	CAP,E 4.7-50 M 11L SME	YZRDSRPNC	ZZA-1
	O	TUNER(PLL)	C 0703	87-012-286-080	0E	C-CAP,U 0.01-25 K B	YZRDSRPNC	ZZA-1
	O	TUNER(PLL)	C 0704	87-012-286-080	0E	C-CAP,U 0.01-25 K B	YZRDSRPNC	ZZA-1
	O	TUNER(PLL)	C 0709	87-012-195-080	0E	C-CAP,U 100P-50 J CH	YZRDSRPNC	ZZA-1
	O	TUNER(PLL)	C 0711	87-010-260-080	0E	CAP,E 47-25 M 11L SME	YZRDSRPNC	ZZA-1
	O	TUNER(PLL)	C 0712	87-010-831-080	0E	C-CAP,U 0.1-16 Z F	YZRDSRPNC	ZZA-1
	O	TUNER(PLL)	C 0713	87-012-286-080	0E	C-CAP,U 0.01-25 K B	YZRDSRPNC	ZZA-1
	O	TUNER(PLL)	C 0714	87-012-286-080	0E	C-CAP,U 0.01-25 K B	YZRDSRPNC	ZZA-1
	O	TUNER(PLL)	C 0715	87-012-195-080	0E	C-CAP,U 100P-50 J CH	YZRDSRPNC	ZZA-1
	O	TUNER(PLL)	C 0717	87-012-286-080	0E	C-CAP,U 0.01-25 K B	YZRDSRPNC	ZZA-1
	O	TUNER(PLL)	C 0719	87-012-286-080	0E	C-CAP,U 0.01-25 K B	YZRDSRPNC	ZZA-1
	O	TUNER(PLL)	C 0720	87-012-195-080	0E	C-CAP,U 100P-50 J CH	YZRDSRPNC	ZZA-1
	O	TUNER(PLL)	C 0721	87-012-176-080	0E	C-CAP,U 15P-50 J CH	YZRDSRPNC	ZZA-1
	O	TUNER(PLL)	C 0722	87-012-176-080	0E	C-CAP,U 15P-50 J CH	YZRDSRPNC	ZZA-1
	O	TUNER(PLL)	C 0723	87-012-274-080	0E	C-CAP,U 1000P-50 K B	YZRDSRPNC	ZZA-1
	O	TUNER(PLL)	C 0725	87-018-131-080	0E	CAP,TC U 1000P-50 K B UP050	YZRDSRPNC	ZZA-1
	O	TUNER(PLL)	C 0727	87-010-196-080	0E	C-CAP,S 0.1-25 Z F C2012	YZRDSRPNC	ZZA-1
	O	TUNER(PLL)	C 0728	87-010-248-080	0E	CAP,E 220-10 M 11L SME	YZRDSRPNC	ZZA-1
	O	TUNER(PLL)	C 0729	87-012-274-080	0E	C-CAP,U 1000P-50 K B	YZRDSRPNC	ZZA-1
	O	TUNER(PLL)	CN 0701	87-A60-650-010	1A	CONN,16P H GRY TUC-P16X-C1	YZRDSRPNC	ZZA-1
	S	TUNER(PLL)	D 0721	87-017-149-080	0E	ZENER,HZS6A2L	YZRDSRPNC	ZZA-1
	S	TUNER(PLL)	D 0722	87-020-465-080	0E	DIODE,1SS133	YZRDSRPNC	ZZA-1
	S	TUNER(PLL)	IC 0721	87-070-127-110	1C	IC,LC72131D	YZRDSRPNC	ZZA-1
	X	TUNER(PLL)	JR 0701	88-118-000-080	0E	C-JUMPER,S	YZRDSRPNC	ZZA-1
	X	TUNER(PLL)	JR 0704	88-129-000-080	0E	C-JUMPER,3216	YZRDSRPNC	ZZA-1
	X	TUNER(PLL)	JR 0711	88-129-000-080	0E	C-JUMPER,3216	YZRDSRPNC	ZZA-1
	X	TUNER(PLL)	JR 0712	88-129-000-080	0E	C-JUMPER,3216	YZRDSRPNC	ZZA-1
	S	TUNER(PLL)	Q 0711	87-A30-234-080	0E	TR,CSC4115BC	YZRDSRPNC	ZZA-1
	X	TUNER(PLL)	R 0701	88-108-000-080	0E	C-JUMPER,U	YZRDSRPNC	ZZA-1
	X	TUNER(PLL)	R 0703	88-121-102-080	0E	RES,1K-1/8W J	YZRDSRPNC	ZZA-1
	X	TUNER(PLL)	R 0705	88-108-562-080	0E	C-RES,U 5.6K-1/16W J	YZRDSRPNC	ZZA-1

PARTS LIST (TUNER : ZZA-1) <YZRDSRPNC>

! = ⚠ SAFTY PARTS
C = Components marked
All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.
K NO. = Only use japanese.

!	C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
	X	TUNER(PLL)	R 0706	88-108-102-080	0E	C-RES,U 1K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(PLL)	R 0707	88-108-102-080	0E	C-RES,U 1K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(PLL)	R 0708	88-108-681-080	0E	C-RES,U 680-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(PLL)	R 0711	88-121-471-080	0E	RES,470-1/8W J	YZRDSRPNC	ZZA-1
	X	TUNER(PLL)	R 0713	88-108-101-080	0E	C-RES,U 100-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(PLL)	R 0714	88-121-181-080	0E	RES,180-1/8W J	YZRDSRPNC	ZZA-1
	X	TUNER(PLL)	R 0715	88-121-471-080	0E	RES,470-1/8W J	YZRDSRPNC	ZZA-1
	X	TUNER(PLL)	R 0718	88-108-103-080	0E	C-RES,U 10K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(PLL)	R 0719	88-121-102-080	0E	RES,1K-1/8W J	YZRDSRPNC	ZZA-1
	X	TUNER(PLL)	R 0720	88-108-222-080	0E	C-RES,U 2.2K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(PLL)	R 0722	88-121-103-080	0E	RES,10K-1/8W J	YZRDSRPNC	ZZA-1
	X	TUNER(PLL)	R 0724	88-108-103-080	0E	C-RES,U 10K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(PLL)	R 0726	88-108-103-080	0E	C-RES,U 10K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(PLL)	R 0727	88-108-154-080	0E	C-RES,U 150K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(PLL)	R 0728	88-128-102-080	0E	C-RES, 1K-1/8W J	YZRDSRPNC	ZZA-1
	X	TUNER(PLL)	R 0729	88-108-103-080	0E	C-RES,U 10K-1/16W J	YZRDSRPNC	ZZA-1
	O	TUNER(PLL)	X 0721	87-A70-061-010	1A	VIB,XTAL 4.500MHZ CSA-309	YZRDSRPNC	ZZA-1
	O	TUNER(RDS)	C 0859	87-012-286-080	0E	C-CAP,U 0.01-25 K B	YZRDSRPNC	ZZA-1
	O	TUNER(RDS)	C 0861	87-012-199-080	0E	C-CAP,U 220P-50 J CH	YZRDSRPNC	ZZA-1
	O	TUNER(RDS)	C 0862	87-012-199-080	0E	C-CAP,U 220P-50 J CH	YZRDSRPNC	ZZA-1
	O	TUNER(RDS)	C 0863	87-012-270-080	0E	C-CAP,U 470P-50 K B	YZRDSRPNC	ZZA-1
	O	TUNER(RDS)	C 0864	87-010-405-080	0E	CAP,E 10-50 M 11L SME	YZRDSRPNC	ZZA-1
	O	TUNER(RDS)	C 0865	87-010-196-080	0E	C-CAP,S 0.1-25 Z F C2012	YZRDSRPNC	ZZA-1
	O	TUNER(RDS)	C 0866	87-010-405-080	0E	CAP,E 10-50 M 11L SME	YZRDSRPNC	ZZA-1
	O	TUNER(RDS)	C 0867	87-012-286-080	0E	C-CAP,U 0.01-25 K B	YZRDSRPNC	ZZA-1
	O	TUNER(RDS)	C 0868	87-012-184-080	0E	C-CAP,U 33P-50 J CH	YZRDSRPNC	ZZA-1
	O	TUNER(RDS)	C 0869	87-012-180-080	0E	C-CAP,U 22P-50 J CH	YZRDSRPNC	ZZA-1
	S	TUNER(RDS)	IC 0851	87-A20-440-040	1H	C-IC,BU1920FS	YZRDSRPNC	ZZA-1
	X	TUNER(RDS)	JR 0853	88-129-000-080	0E	C-JUMPER,3216	YZRDSRPNC	ZZA-1
	X	TUNER(RDS)	JR 0854	88-129-000-080	0E	C-JUMPER,3216	YZRDSRPNC	ZZA-1
	X	TUNER(RDS)	JR 0855	88-129-000-080	0E	C-JUMPER,3216	YZRDSRPNC	ZZA-1
	O	TUNER(RDS)	L 0851	87-005-847-080	0E	COIL,2.2UH K CECS	YZRDSRPNC	ZZA-1
	S	TUNER(RDS)	Q 0853	87-A30-076-080	0E	C-TR,2SC3052F	YZRDSRPNC	ZZA-1
	X	TUNER(RDS)	R 0851	88-108-471-080	0E	C-RES,U 470-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(RDS)	R 0852	88-108-272-080	0E	C-RES,U 2.7K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(RDS)	R 0853	88-108-104-080	0E	C-RES,U 100K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(RDS)	R 0854	88-108-123-080	0E	C-RES,U 12K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(RDS)	R 0855	88-108-471-080	0E	C-RES,U 470-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(RDS)	R 0857	88-128-104-080	0E	C-RES, 100K-1/8W J	YZRDSRPNC	ZZA-1
	X	TUNER(RDS)	R 0859	88-108-102-080	0E	C-RES,U 1K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(RDS)	R 0860	88-108-102-080	0E	C-RES,U 1K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(RDS)	R 0861	88-108-102-080	0E	C-RES,U 1K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(RDS)	R 0866	88-108-000-080	0E	C-JUMPER,U	YZRDSRPNC	ZZA-1
	O	TUNER(RDS)	X 0851	87-A70-091-010	1B	VIB,XTAL 4.332MHZ CSA-309	YZRDSRPNC	ZZA-1
	O	TUNER(RF)	C 0812	87-012-286-080	0E	C-CAP,U 0.01-25 K B	YZRDSRPNC	ZZA-1
	O	TUNER(RF)	C 0814	87-012-286-080	0E	C-CAP,U 0.01-25 K B	YZRDSRPNC	ZZA-1
	O	TUNER(RF)	C 0820	87-010-260-080	0E	CAP,E 47-25 M 11L SME	YZRDSRPNC	ZZA-1
	O	TUNER(RF)	C 0821	87-012-286-080	0E	C-CAP,U 0.01-25 K B	YZRDSRPNC	ZZA-1
	O	TUNER(RF)	C 0822	87-012-286-080	0E	C-CAP,U 0.01-25 K B	YZRDSRPNC	ZZA-1
	O	TUNER(RF)	C 0823	87-012-286-080	0E	C-CAP,U 0.01-25 K B	YZRDSRPNC	ZZA-1
	O	TUNER(RF)	C 0828	87-010-196-080	0E	C-CAP,S 0.1-25 Z F C2012	YZRDSRPNC	ZZA-1
	O	TUNER(RF)	C 0829	87-010-196-080	0E	C-CAP,S 0.1-25 Z F C2012	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	C 0909	88-108-000-080	0E	C-JUMPER,U	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	C 0910	88-108-000-080	0E	C-JUMPER,U	YZRDSRPNC	ZZA-1
	O	TUNER(RF)	C 0940	87-012-286-080	0E	C-CAP,U 0.01-25 K B	YZRDSRPNC	ZZA-1
	O	TUNER(RF)	C 0942	87-012-168-080	0E	C-CAP,U 6P-50 D CH	YZRDSRPNC	ZZA-1
	O	TUNER(RF)	C 0947	87-012-286-080	0E	C-CAP,U 0.01-25 K B	YZRDSRPNC	ZZA-1
	O	TUNER(RF)	C 0949	87-A10-039-080	0E	C-CAP,U 470P-50 J CH	YZRDSRPNC	ZZA-1
	O	TUNER(RF)	C 0952	87-012-286-080	0E	C-CAP,U 0.01-25 K B	YZRDSRPNC	ZZA-1
	O	TUNER(RF)	C 0958	87-010-197-080	0E	C-CAP,S 0.01-25 K B C2012	YZRDSRPNC	ZZA-1
	O	TUNER(RF)	C 0959	87-010-831-080	0E	C-CAP,U 0.1-16 Z F	YZRDSRPNC	ZZA-1
	O	TUNER(RF)	C 0960	87-010-196-080	0E	C-CAP,S 0.1-25 Z F C2012	YZRDSRPNC	ZZA-1
	O	TUNER(RF)	C 0962	87-010-401-080	0E	CAP,E 1-50 M 11L SME	YZRDSRPNC	ZZA-1
	O	TUNER(RF)	CF 0801	87-008-423-010	1A	FLTR,CF SFE10.7MS3G-A	YZRDSRPNC	ZZA-1
	O	TUNER(RF)	CF 0802	82-785-747-010	1A	CF,MS2 GHY,R	YZRDSRPNC	ZZA-1
	S	TUNER(RF)	D 0942	87-A40-270-080	0E	C-DIODE,MC2838	YZRDSRPNC	ZZA-1
	S	TUNER(RF)	D 0944	87-020-465-080	0E	DIODE,1SS133	YZRDSRPNC	ZZA-1
	O	TUNER(RF)	FFE0801	A8-6ZA-199-170	2A	6ZA-1 FEENC	YZRDSRPNC	ZZA-1
	O	TUNER(RF)	J 0801	87-033-241-010	1B	TERMINAL,ANT 2P AJ-2039	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	JR 0801	88-129-000-080	0E	C-JUMPER,3216	YZRDSRPNC	ZZA-1

PARTS LIST (TUNER : ZZA-1) <YZRDSRPNC>

! = ⚠ SAFTY PARTS
C = Components marked
All components used on this model at the production line are shown in this service manual.
However, please note that not all components will be available as spare parts for after-sales service.
Components marked S and O are designated as spare parts for service and will be stocked at the spare parts centers.
Components marked X and R are not designated as spare parts for after sales service, and will not be stocked at the spare parts centers.
K NO. = Only use japanese.

!	C	UNIT NAME	REF NO.	PARTS CODE	K NO.	DESCRIPTION	SUFFIX	MODEL NAME
	X	TUNER(RF)	JR 0802	88-129-000-080	0E	C-JUMPER,3216	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	JR 0803	88-129-000-080	0E	C-JUMPER,3216	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	JR 0804	88-129-000-080	0E	C-JUMPER,3216	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	JR 0805	88-129-000-080	0E	C-JUMPER,3216	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	JR 0811	88-118-000-080	0E	C-JUMPER,S	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	JR 0812	88-118-000-080	0E	C-JUMPER,S	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	JR 0813	88-118-000-080	0E	C-JUMPER,S	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	JR 0814	88-118-000-080	0E	C-JUMPER,S	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	JR 0815	88-118-000-080	0E	C-JUMPER,S	YZRDSRPNC	ZZA-1
	O	TUNER(RF)	L 0832	87-005-847-080	0E	COIL,2.2UH K CECS	YZRDSRPNC	ZZA-1
	O	TUNER(RF)	L 0941	87-A50-020-010	0E	COIL,ANT LW (COI) 252KHZ	YZRDSRPNC	ZZA-1
	O	TUNER(RF)	L 0942	87-A50-019-010	0E	COIL,OSC LW (COI) 856KHZ	YZRDSRPNC	ZZA-1
	O	TUNER(RF)	L 0981	8Z-ZA1-665-010	1E	COIL,AM PACK 2(TOK)	YZRDSRPNC	ZZA-1
	S	TUNER(RF)	Q 0712	87-A30-072-080	0E	C-TR,RT1P 144C	YZRDSRPNC	ZZA-1
	S	TUNER(RF)	Q 0805	89-327-143-080	0E	C-TR,2SC2714O	YZRDSRPNC	ZZA-1
	S	TUNER(RF)	Q 0947	89-505-434-540	0E	C-FET,2SK543(4/5)	YZRDSRPNC	ZZA-1
	S	TUNER(RF)	Q 0948	87-A30-086-070	0E	C-TR,CSD1306E	YZRDSRPNC	ZZA-1
	S	TUNER(RF)	Q 0951	87-A30-074-080	0E	C-TR,RT1P 141C	YZRDSRPNC	ZZA-1
	S	TUNER(RF)	Q 0952	87-A30-086-070	0E	C-TR,CSD1306E	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	R 0820	88-108-103-080	0E	C-RES,U 10K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	R 0821	88-121-151-080	0E	RES,150-1/8W J	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	R 0823	88-108-102-080	0E	C-RES,U 1K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	R 0824	88-108-331-080	0E	C-RES,U 330-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	R 0825	88-108-183-080	0E	C-RES,U 18K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	R 0826	88-108-103-080	0E	C-RES,U 10K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	R 0827	88-108-181-080	0E	C-RES,U 180-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	R 0828	88-108-101-080	0E	C-RES,U 100-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	R 0830	88-121-101-080	0E	RES,100-1/8W J	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	R 0832	88-108-391-080	0E	C-RES,U 390-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	R 0836	88-108-102-080	0E	C-RES,U 1K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	R 0839	88-108-151-080	0E	C-RES,U 150-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	R 0840	88-108-221-080	0E	C-RES,U 220-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	R 0944	88-108-101-080	0E	C-RES,U 100-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	R 0945	88-108-104-080	0E	C-RES,U 100K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	R 0947	88-118-183-080	0E	C-RES,S 18K-1/10W J	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	R 0948	88-108-103-080	0E	C-RES,U 10K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	R 0952	88-108-562-080	0E	C-RES,U 5.6K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	R 0954	88-128-222-080	0E	C-RES, 2.2K-1/8W J	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	R 0956	88-108-102-080	0E	C-RES,U 1K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	R 0958	88-108-472-080	0E	C-RES,U 4.7K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	R 0959	88-118-103-080	0E	C-RES,S 10K-1/10W J	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	R 0962	88-108-221-080	0E	C-RES,U 220-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	R 0964	88-108-330-080	0E	C-RES,U 33-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	R 0970	88-108-102-080	0E	C-RES,U 1K-1/16W J	YZRDSRPNC	ZZA-1
	X	TUNER(RF)	SH 0701	87-A90-974-310	0E	SHLD-PLATE,ANT HOLDER	YZRDSRPNC	ZZA-1
	O	TUNER(RF)	TC 0942	87-A91-658-010	0E	TRIMMER,30P 4.0X4.5 ECRL	YZRDSRPNC	ZZA-1

SCHEMATIC DIAGRAM – 1 (MAIN)

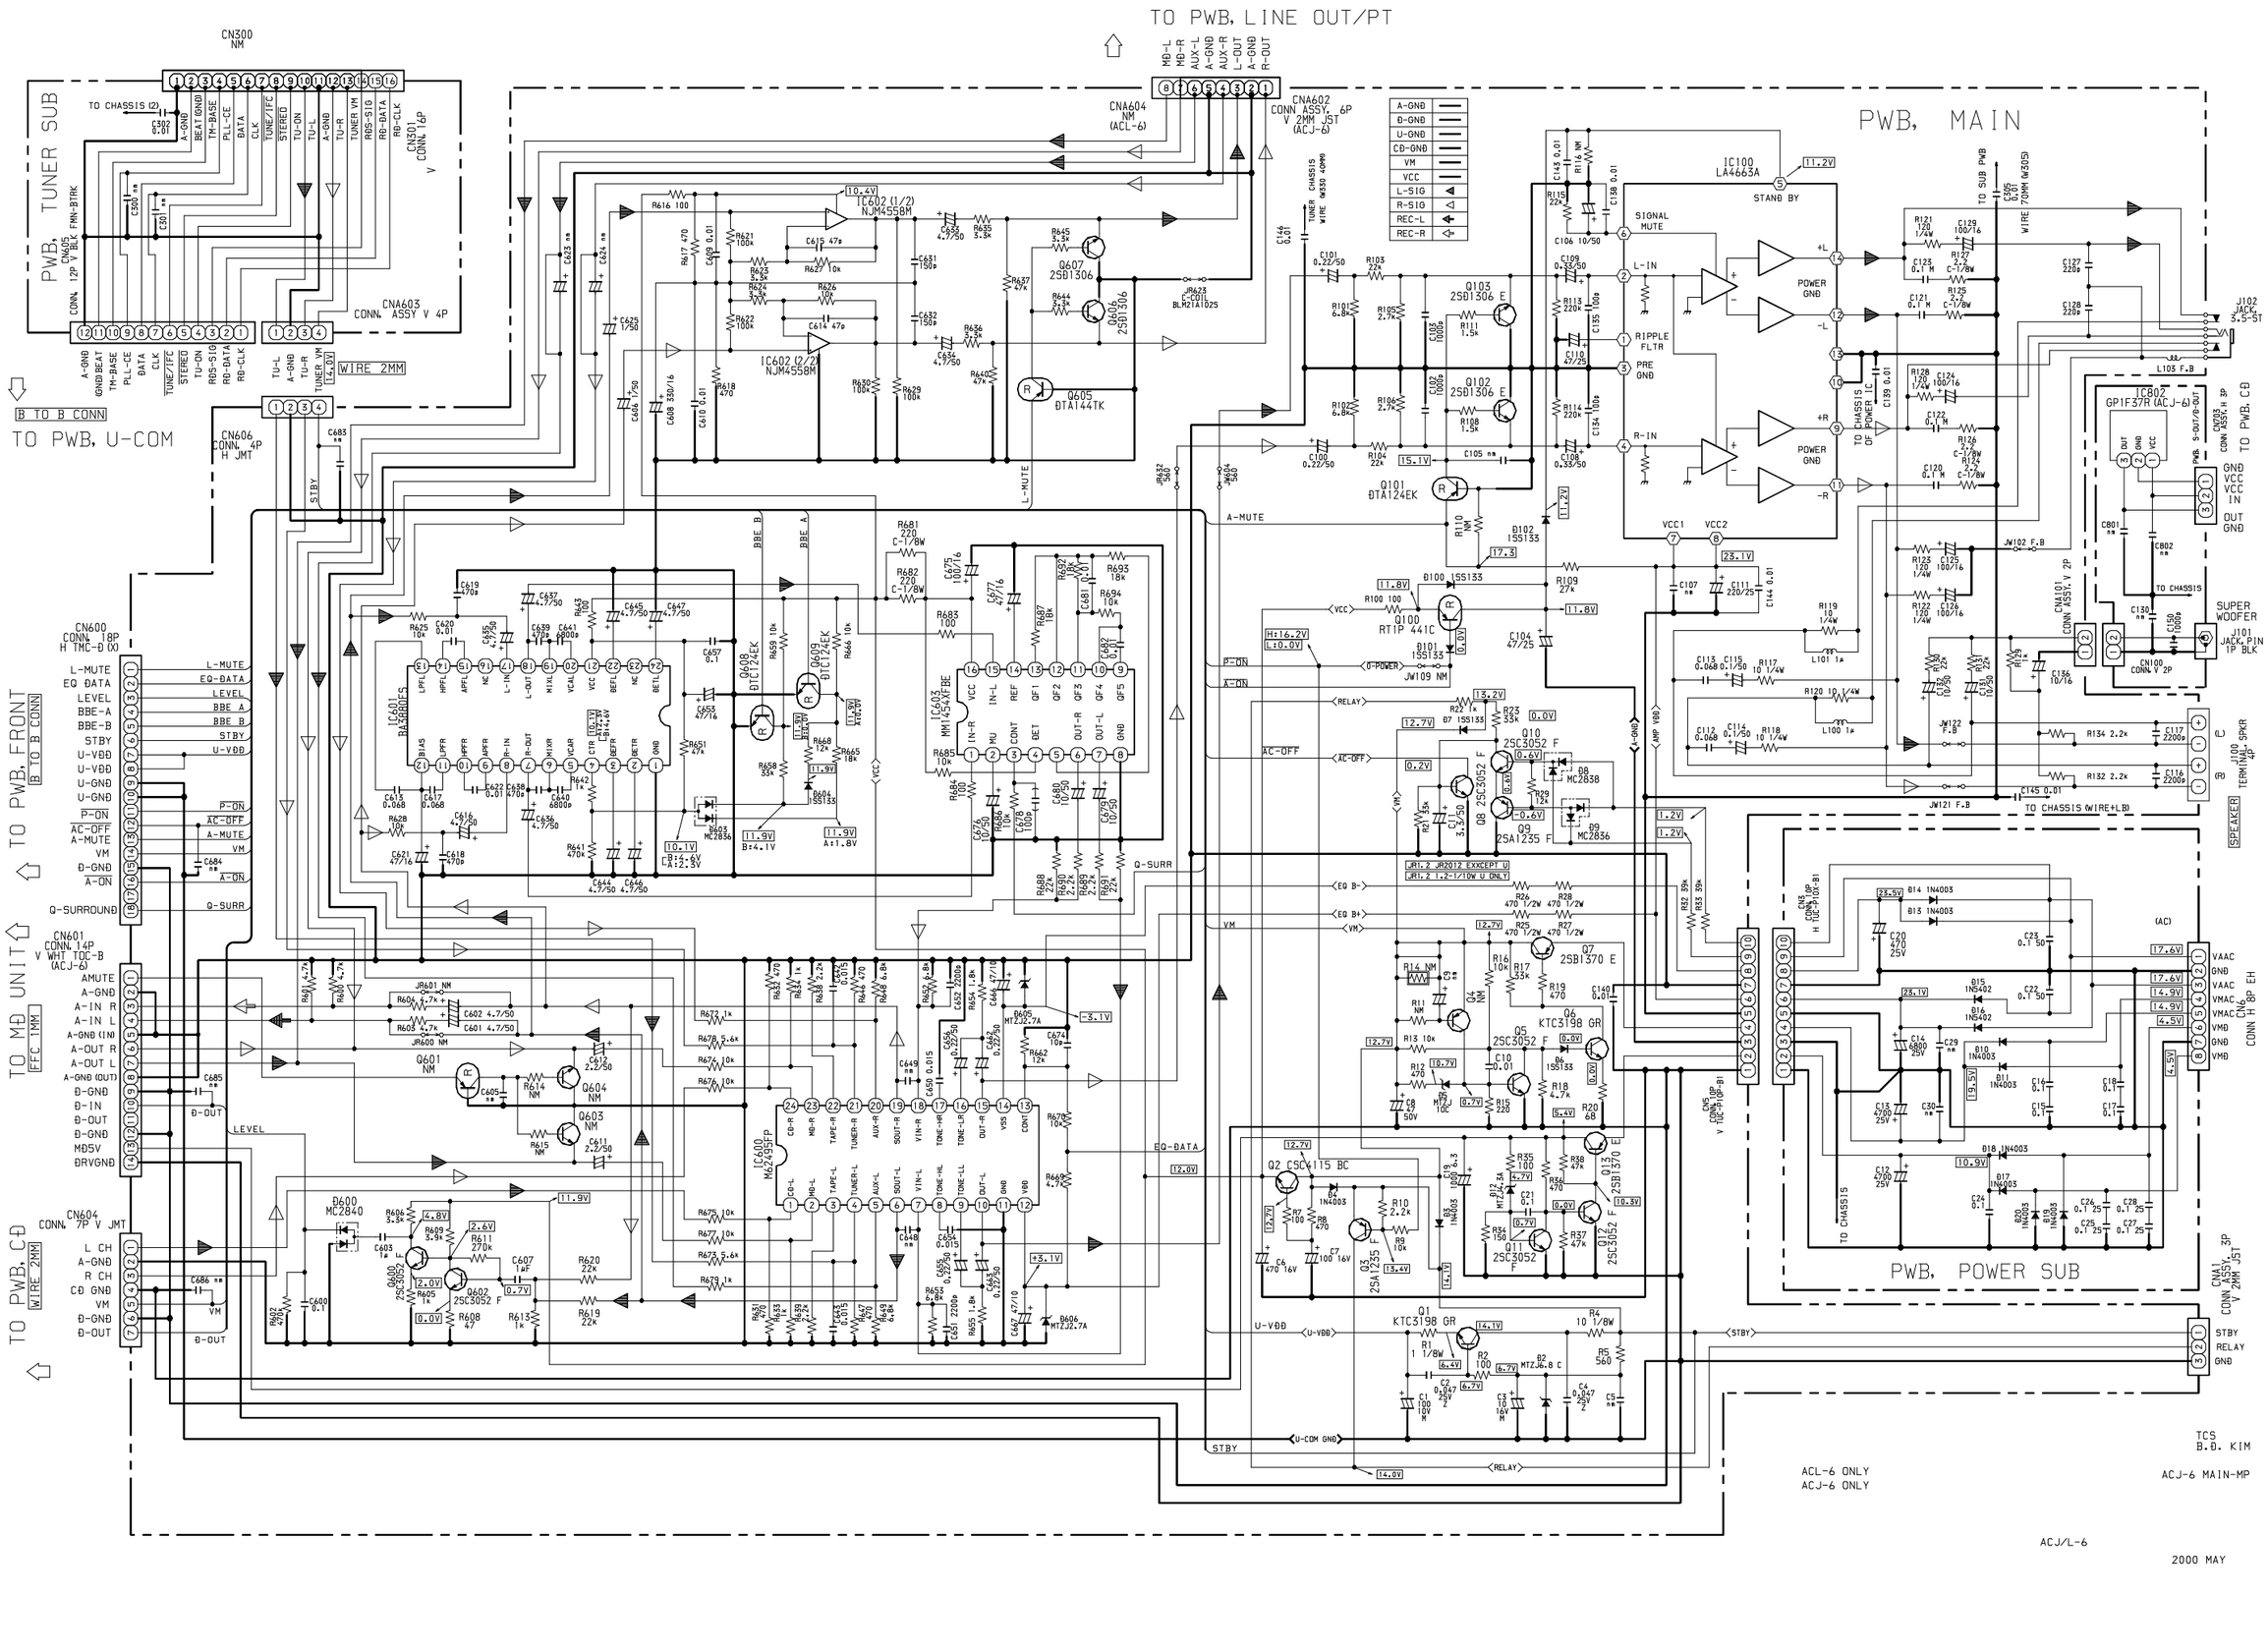

SCHEMATIC DIAGRAM – 2 (FRONT / UCOM / KEY)

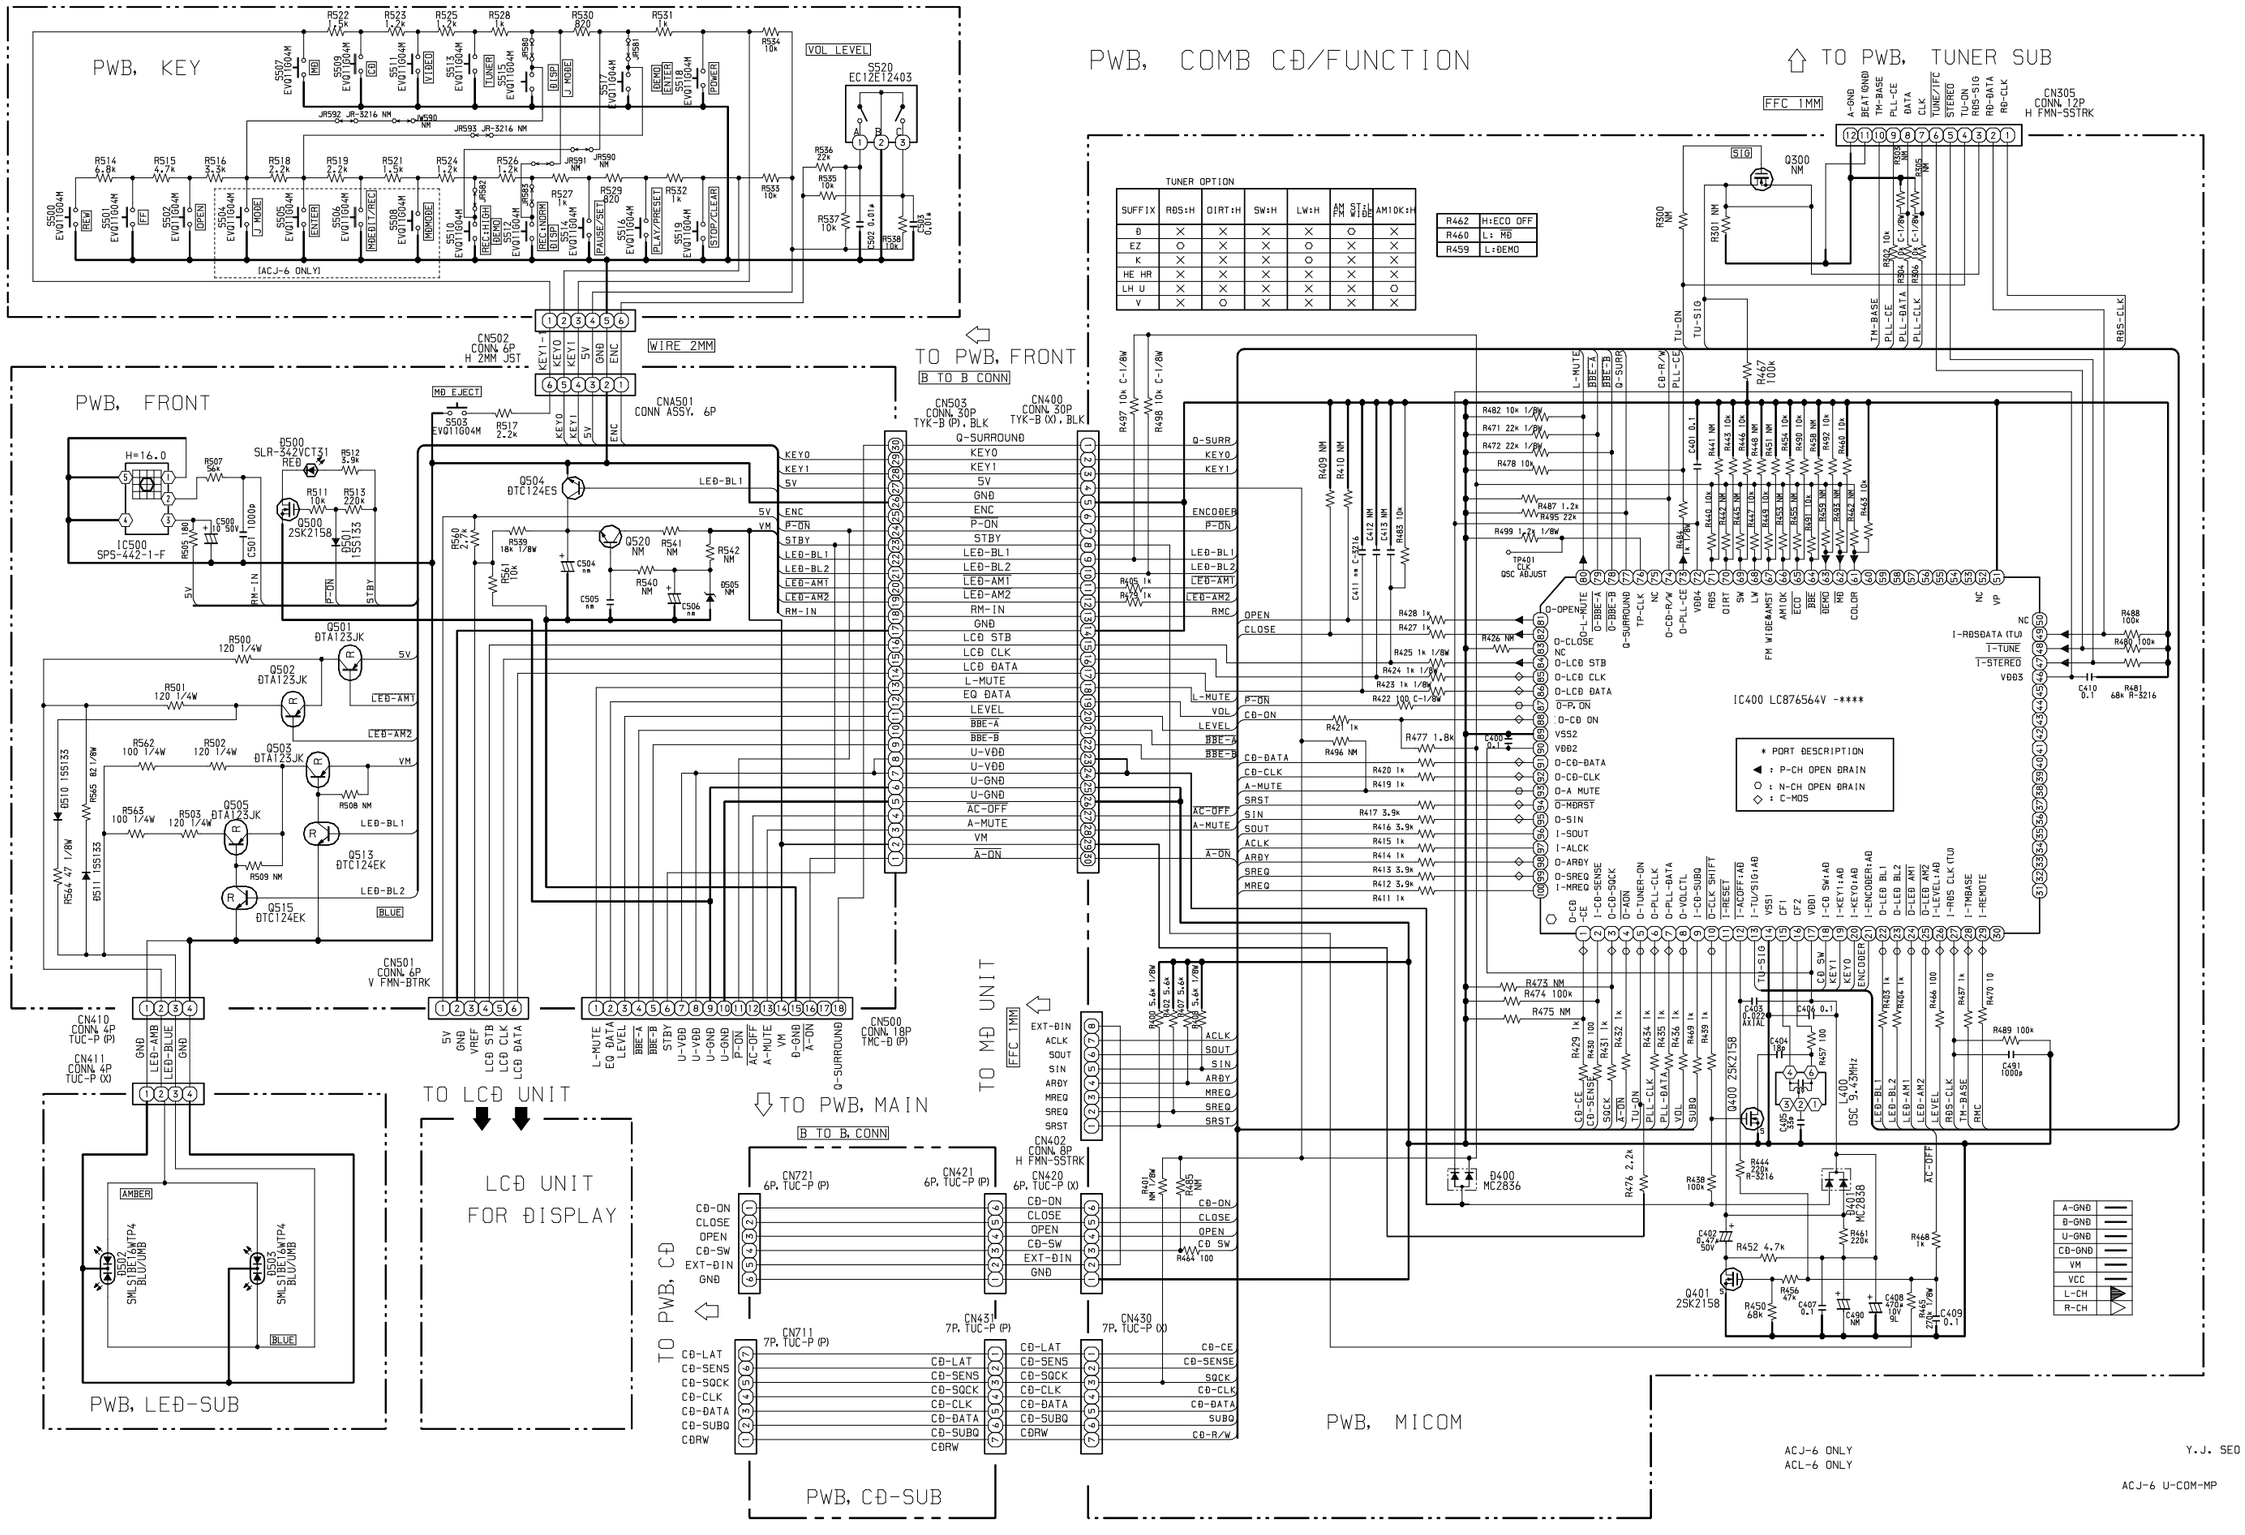

SCHEMATIC DIAGRAM – 3 (CD)

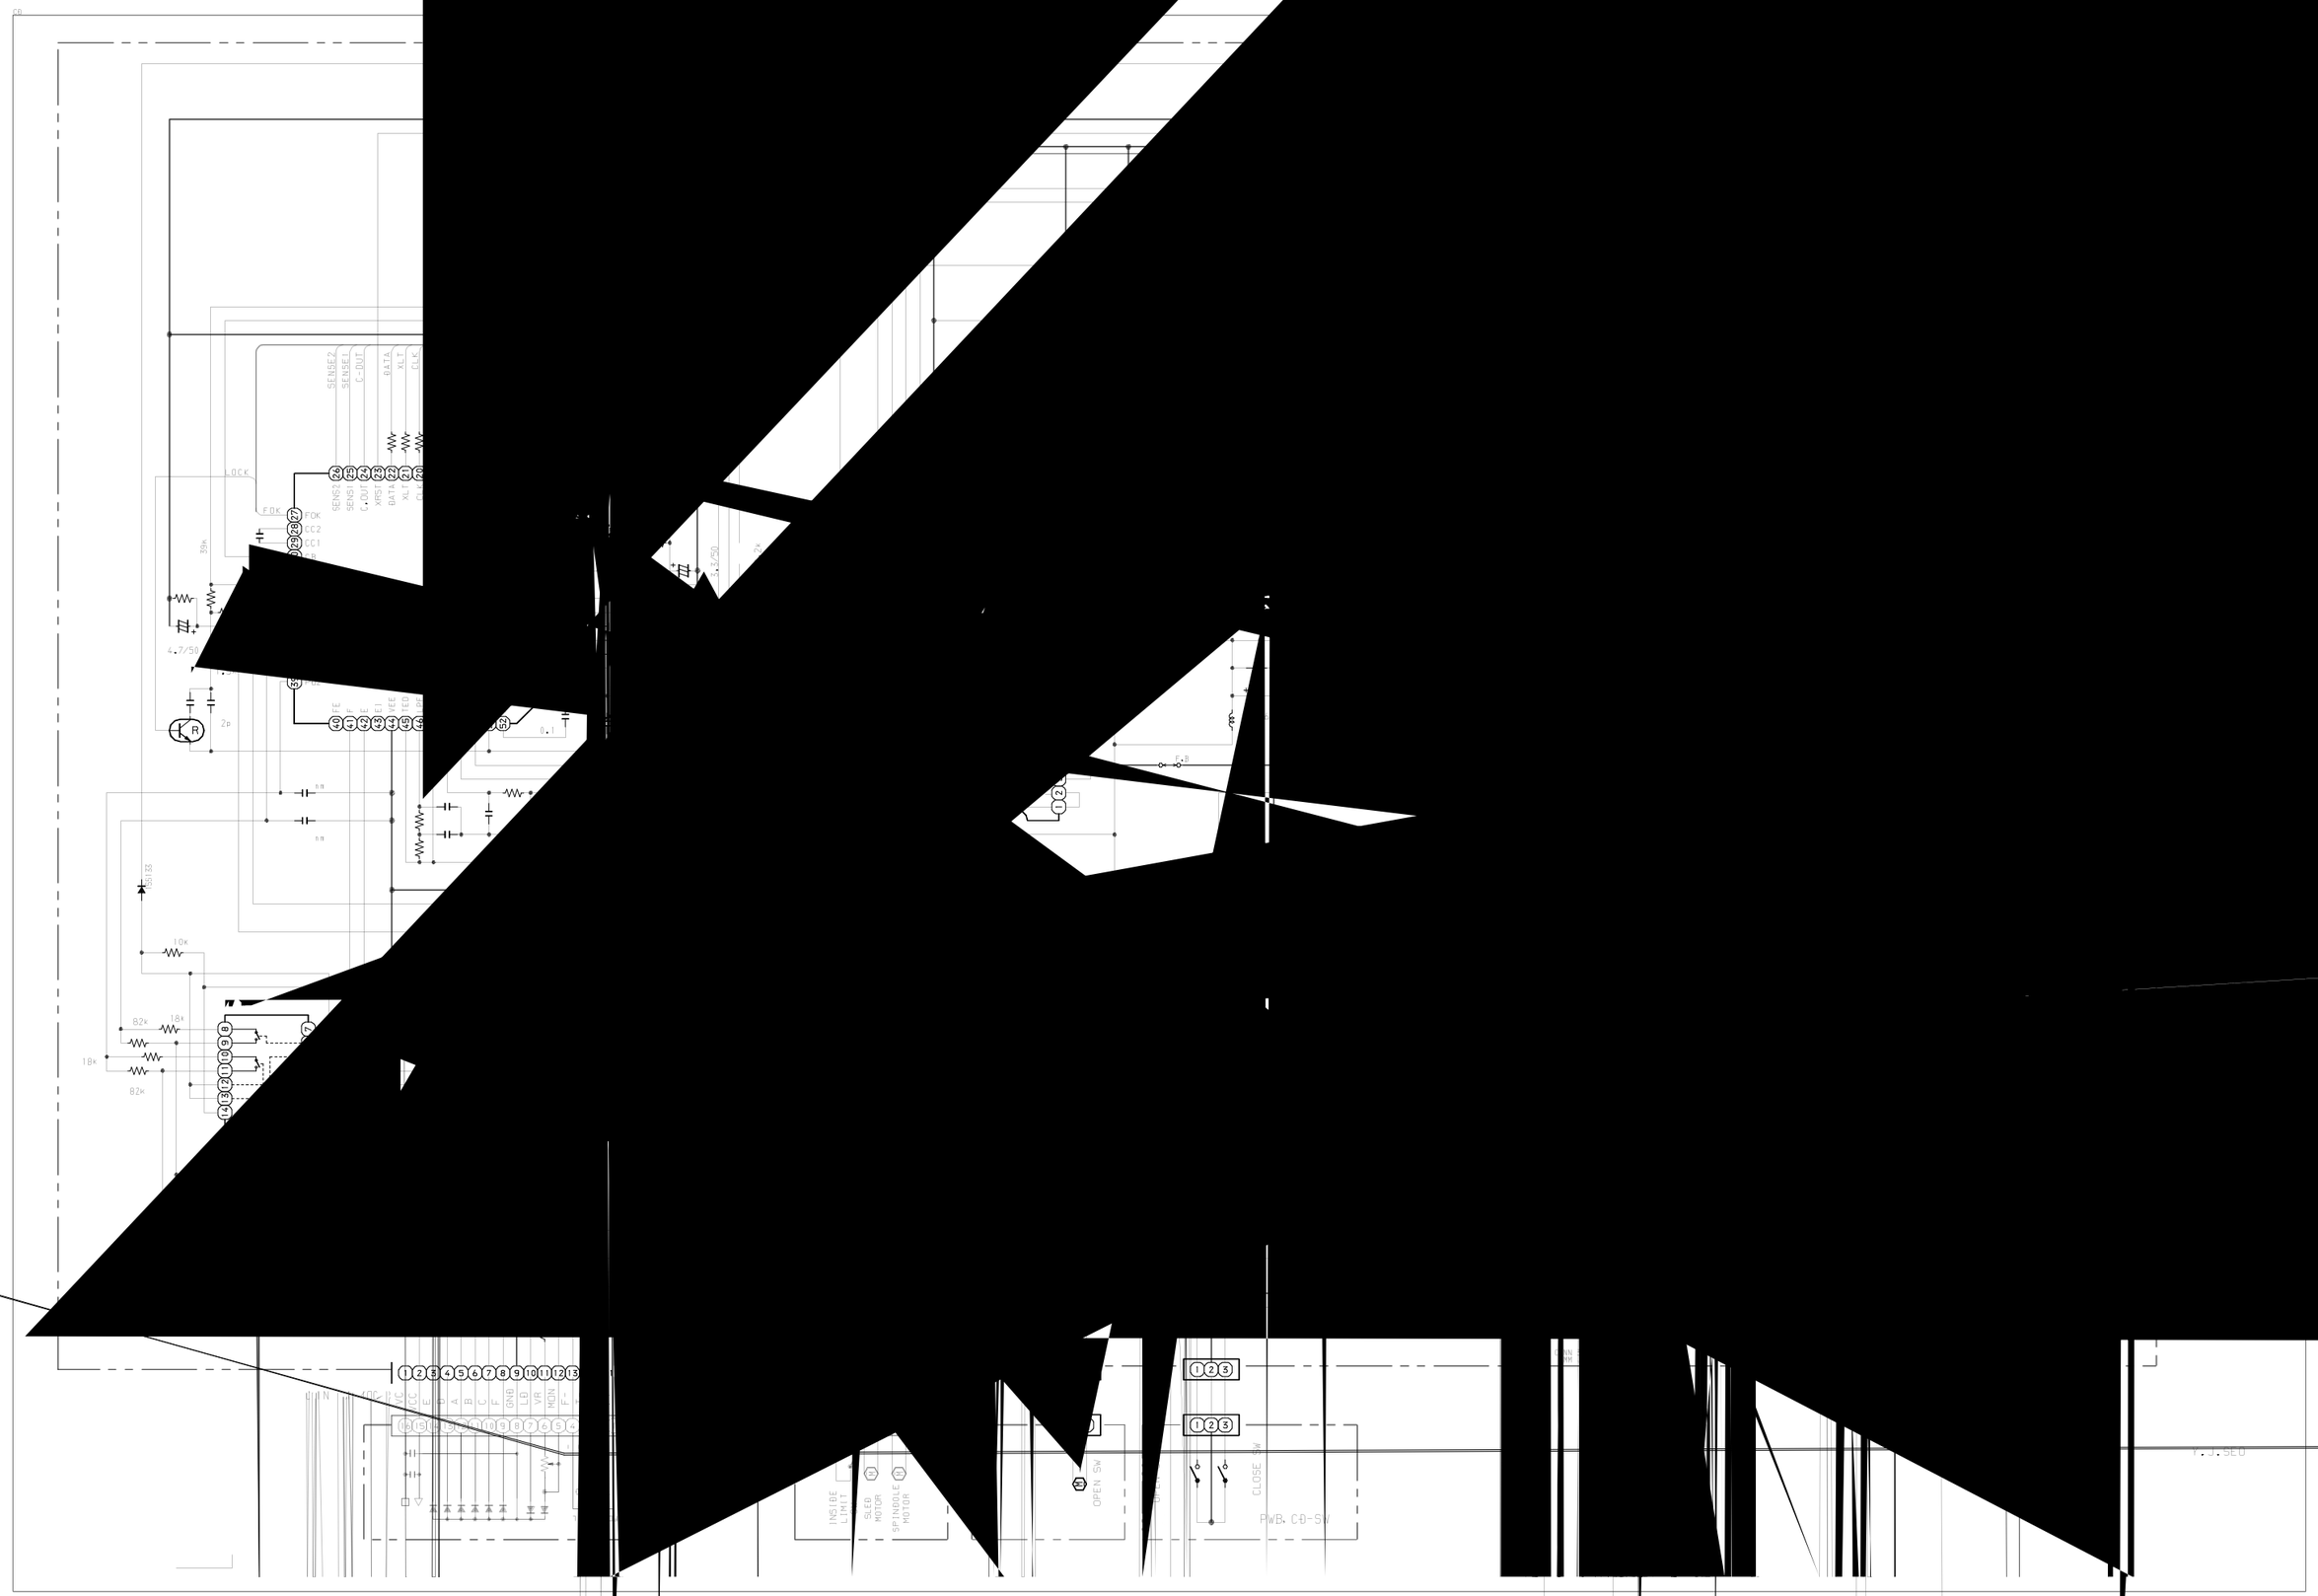

SCHEMATIC DIAGRAM – 4 (TUNER : ZZA-1) <YZRDSRPNC>

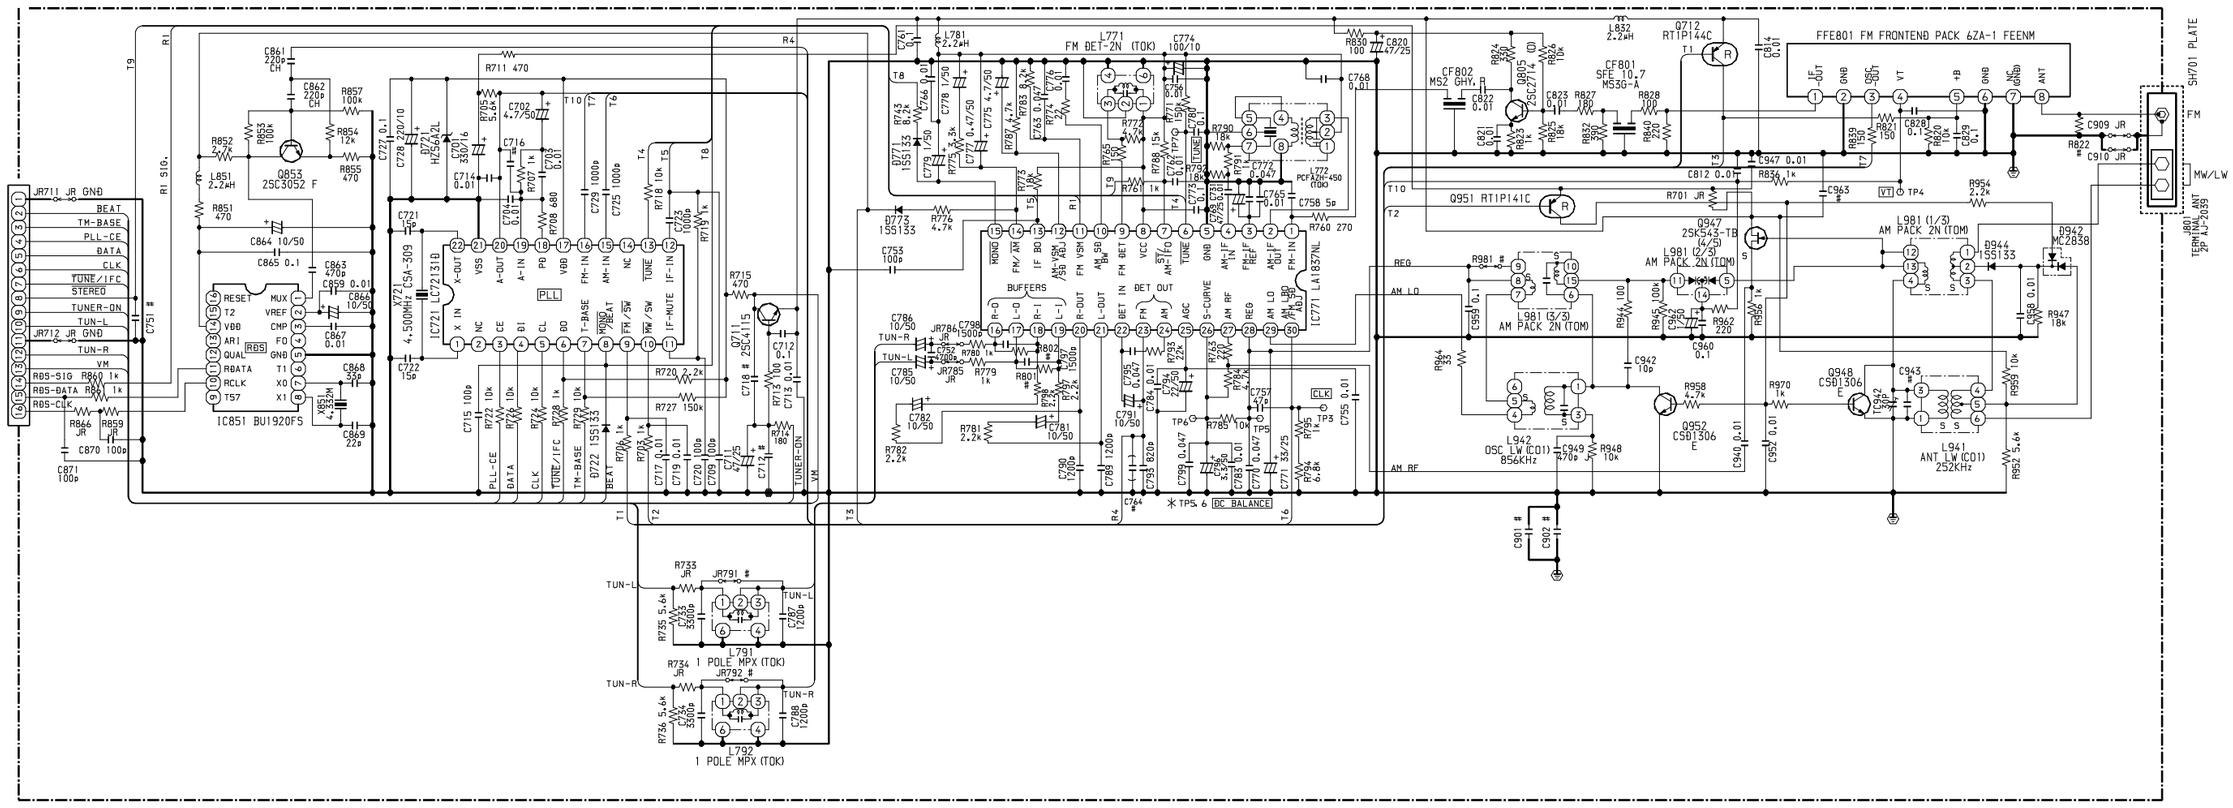

G.
TAKEZAWA

94V0 t=1.6

HALOGEN FREE 130℃

8Z ZA1 613 01

QC-8ZZA1- 04-1

21 10 98

B-ZZA-1-EZRDS

SCHEMATIC DIAGRAM – 5 (PT)

	Đ (S)	EZ/K
PT200	8A-CJ6-670-01	8A-CJ6-671-01
PT201	8Z-NF8-660-01	8Z-NF8-659-01
RY200	87-A90-976-01	87-A90-977-01
W200	87-050-098-01	87-A80-092-01
PR206	125MA, 125V	JW
R202	NM	NM
JW200	NM	NM
JW201	NM	NM
JW202	NM	NM

A-GNĐ	—
Đ-GNĐ	—
U-GNĐ	—
CĐ-GNĐ	—
VM	—
VCC	—
L-SIG	◀
R-SIG	◁
REC-L	◀
REC-R	◁

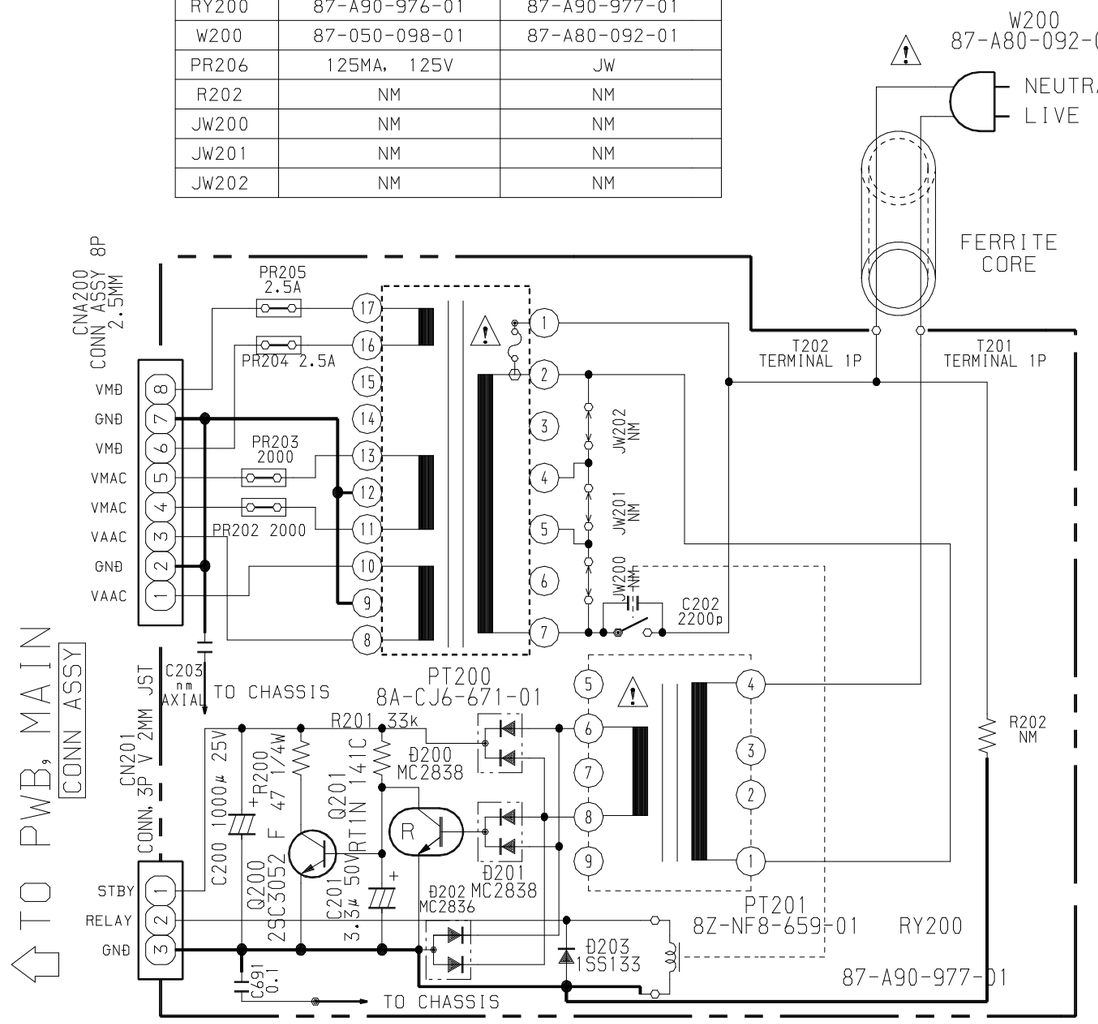

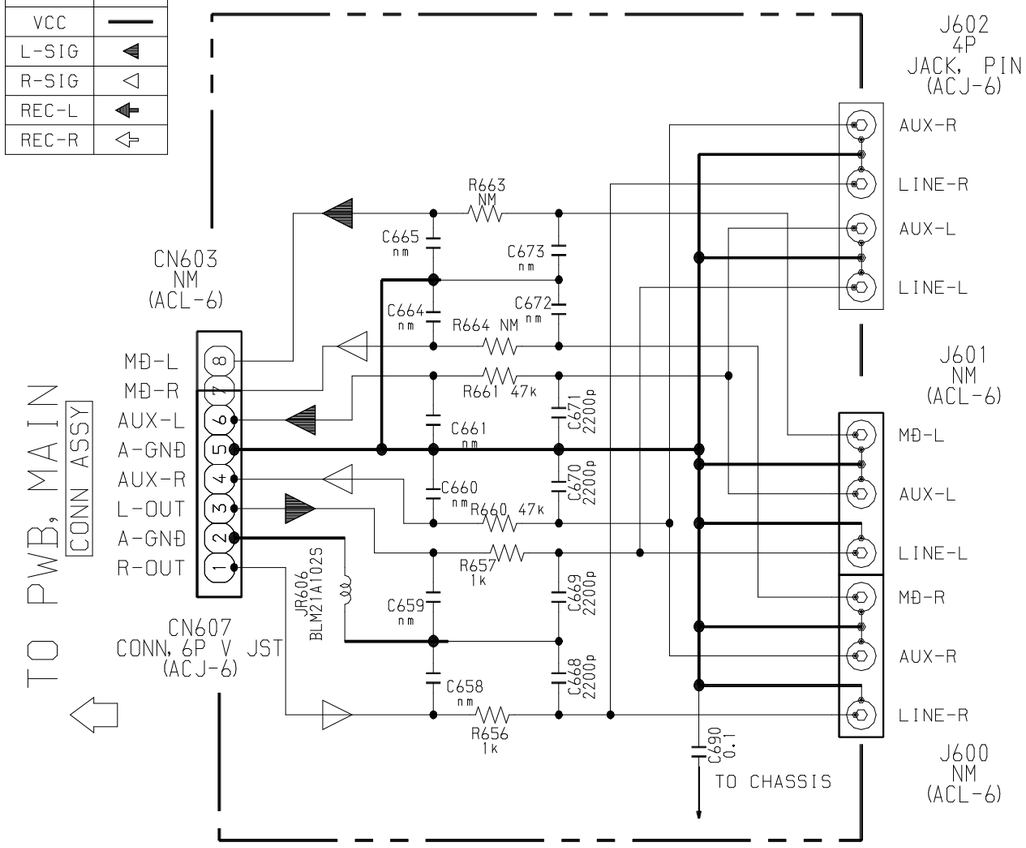

PWB LINE-OUT/PT (SINGLE)

TCS
B.Đ. KIM

ACL-6 ONLY
ACJ-6 ONLY

ACJ-6PT-MP

ACJ/L-6

2000 MAY

アイワ株式会社 〒110-8710 東京都台東区池之端1-2-11 ☎03(3827)3111 (代表)
AIWA CO.,LTD. 2-11, IKENOHATA 1-CHOME, TAITO-KU, TOKYO 110, JAPAN TEL:03 (3827) 3111

9420025 Printed in Singapore

aiwa SERVICE

AZG-H

English

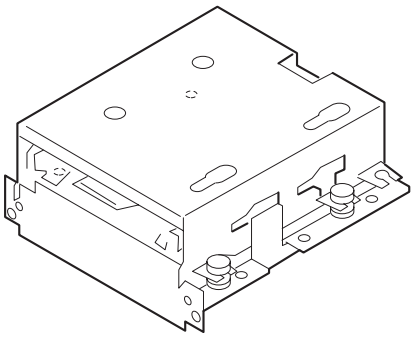

SERVICE MANUAL

MD MECHANISM

BASIC MD MECHANISM : 7ZG-8 B2
ZZG-D A1

TYPE
A
YA

aiwa

S/M Code No. 09-005-346-5N2

DATA

PROTECTION OF EYES FROM LASER BEAM DURING SERVICING

This set employs laser. Therefore, be sure to follow carefully the instructions below when servicing.

WARNING!

WHEN SERVICING, DO NOT APPROACH THE LASER EXIT WITH THE EYE TOO CLOSELY. IN CASE IT IS NECESSARY TO CONFIRM LASER BEAM EMISSION. BE SURE TO OBSERVE FROM A DISTANCE OF MORE THAN 30cm FROM THE SURFACE OF THE OBJECTIVE LENS ON THE OPTICAL PICK-UP BLOCK.

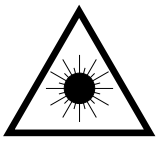

- Caution: Invisible laser radiation when open and interlocks defeated avoid exposure to beam.
- Advarsel: Usynling laserstråling ved åbning, når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

VAROITUS!

Laiteen Käyttäminen muulla kuin tässä käyttöohjeessa mainitulla tavalla saattaa altistaa käyt-täjän turvallisuusluokan 1 ylittävälle näkymättömälle lasersäteilylle.

VARNING!

Om apparaten används på annat sätt än vad som specificeras i denna bruksanvising, kan användaren utsättas för osynling laserstrålning, som överskrider gränsen för laserklass 1.

CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

ATTENTION

L'utilisation de commandes, réglages ou procédures autres que ceux spécifiés peut entraîner une dangereuse exposition aux radiations.

ADVARSEL!

Usynlig laserstråling ved åbning, når sikkerhedsafbrydereer ude af funktion. Undgå udsættelse for stråling.

This Compact Disc player is classified as a CLASS 1 LASER product.
The CLASS 1 LASER PRODUCT label is located on the rear exterior.

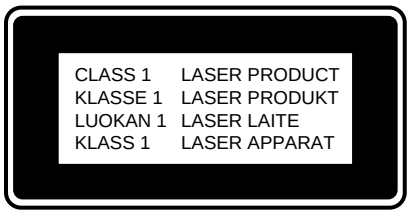

Precaution to replace Optical block (KMS-260B)

Body or clothes electrostatic potential could ruin laser diode in the optical block. Be sure ground body and workbench, and use care the clothes do not touch the diode.

1) After the connection, remove solder shown in the right figure.

MD PICKUP Assy P.C.B.

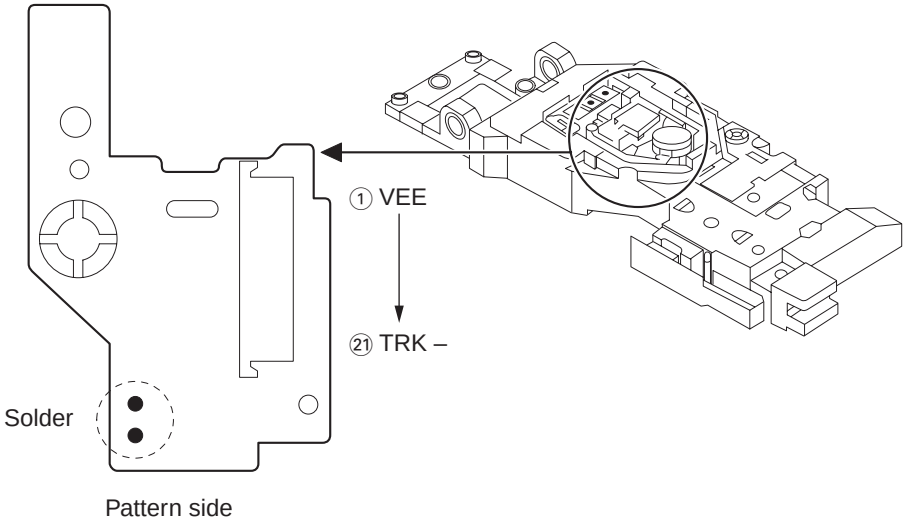

ELECTRICAL MAIN PARTS LIST

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
IC			
	87-A20-707-010		C-IC,CXA2523AR
	87-A21-610-030		C-IC,CXD2654R
	87-A20-709-040		C-IC,BD7910FV
	8A-ZGH-601-030		C-IC,CXP81952M-557R
	87-A21-526-010		C-IC,GM71VLS17403CTL-1
	87-A20-755-080		C-IC,AK93C45AF
	87-A20-710-040		C-IC,S-8110AMP
	87-A20-711-040		C-IC,BA5970FP
	87-A21-110-040		C-IC,AK4519VF
	87-017-853-040		IC,NJM2100V
	87-A21-340-040		C-IC,LA5638H
TRANSISTOR			
	87-026-423-080		C-TR RN2305
	89-115-884-080		CHIP -TRANSISTER 2SA1588Y
	89-341-164-080		CHIP-TRANSISTOR,2SC4116 Y
	87-026-412-080		C-TR RN1305
DIODE			
	87-001-166-080		DIODE,1SS301
	87-A40-412-040		C-DIODE,SB05-05CP
MD C.B			
C100	87-016-296-080		C-CAP,TN 22-4SV(A)
C101	87-016-296-080		C-CAP,TN 22-4SV(A)
C102	87-012-286-080		CAP, U 0.01-25
C103	87-010-787-080		CAP, U 0.022-25
C104	87-010-662-080		C-CAP,E 22-6.3
C105	87-010-831-080		C-CAP,U,0.1-16F
C106	87-016-462-080		C-CAP,S 1-16 F
C107	87-012-195-080		C-CAP,U 100P-50CH
C108	87-012-274-080		CHIP CAP,U 1000P-50B
C109	87-A11-033-080		C-CAP,TN 47U-4
C111	87-016-296-080		C-CAP,TN 22-4SV(A)
C112	87-012-286-080		CAP, U 0.01-25
C113	87-012-284-080		CAP, U 6800P-50
C114	87-010-828-080		CHIP CAPACITOR,U 0.033-25F
C115	87-A10-369-080		C-CAP,S 0.47-16 K B
C116	87-012-282-080		CAP, U 4700P-50
C117	87-016-462-080		C-CAP,S 1-16 F
C118	87-012-282-080		CAP, U 4700P-50
C119	87-016-491-080		C-CAP,S 0.22-16 FZ
C120	87-010-787-080		CAP, U 0.022-25
C121	87-012-286-080		CAP, U 0.01-25
C122	87-010-829-080		CAP, U 0.047-16
C123	87-012-286-080		CAP, U 0.01-25
C124	87-010-662-080		C-CAP,E 22-6.3
C125	87-010-662-080		C-CAP,E 22-6.3
C126	87-010-831-080		C-CAP,U,0.1-16F
C201	87-010-831-080		C-CAP,U,0.1-16F
C202	87-010-831-080		C-CAP,U,0.1-16F
C203	87-010-785-080		C-CAP,U0.015-25BK
C204	87-016-461-080		C-CAP,S 0.47-16F
C205	87-010-831-080		C-CAP,U,0.1-16F
C206	87-012-270-080		CAP, U 470P-50
C207	87-016-461-080		C-CAP,S 0.47-16F
C208	87-012-286-080		CAP, U 0.01-25
C209	87-010-831-080		C-CAP,U,0.1-16F
C210	87-012-176-080		C-CAP,U 15P-50 J CH
C211	87-012-176-080		C-CAP,U 15P-50 J CH
C212	87-012-195-080		C-CAP,U 100P-50CH
C213	87-010-662-080		C-CAP,E 22-6.3
C214	87-012-274-080		CHIP CAP,U 1000P-50B
C217	87-012-188-080		C-CAP,U 47P-50 CH
C218	87-012-172-080		CAPACITOR CHIP U 10P CH
C219	87-016-296-080		C-CAP,TN 22-4SV(A)
C220	87-010-662-080		C-CAP,E 22-6.3
C221	87-010-831-080		C-CAP,U,0.1-16F
C222	87-016-444-080		C-CAP,TN 47-10 F95E
C223	87-010-831-080		C-CAP,U,0.1-16F
C224	87-A10-685-080		C-CAP,S 470P-100 J CH
C225	87-010-831-080		C-CAP,U,0.1-16F
C226	87-010-831-080		C-CAP,U,0.1-16F
C227	87-012-274-080		CHIP CAP,U 1000P-50B
C228	87-012-274-080		CHIP CAP,U 1000P-50B
C229	87-012-274-080		CHIP CAP,U 1000P-50B
C232	87-012-274-080		CHIP CAP,U 1000P-50B
C233	87-012-274-080		CHIP CAP,U 1000P-50B
C236	87-010-831-080		C-CAP,U,0.1-16F
C237	87-012-274-080		CHIP CAP,U 1000P-50B
C300	87-010-831-080		C-CAP,U,0.1-16F
C301	87-010-831-080		C-CAP,U,0.1-16F
C302	87-010-831-080		C-CAP,U,0.1-16F
C305	87-016-462-080		C-CAP,S 1-16 F
C307	87-010-831-080		C-CAP,U,0.1-16F
C308	87-010-831-080		C-CAP,U,0.1-16F
C311	87-010-662-080		C-CAP,E 22-6.3
C312	87-012-195-080		C-CAP,U 100P-50CH
C321	87-012-274-080		CHIP CAP,U 1000P-50B
C322	87-012-274-080		CHIP CAP,U 1000P-50B
C323	87-012-274-080		CHIP CAP,U 1000P-50B
C324	87-012-274-080		CHIP CAP,U 1000P-50B
C325	87-012-274-080		CHIP CAP,U 1000P-50B
C400	87-010-831-080		C-CAP,U,0.1-16F
C401	87-010-831-080		C-CAP,U,0.1-16F
C402	87-010-831-080		C-CAP,U,0.1-16F
C403	87-010-831-080		C-CAP,U,0.1-16F
C404	87-010-831-080		C-CAP,U,0.1-16F
C405	87-010-661-080		C-CAP,E 10-16
C406	87-010-779-080		C-CAP,E 100-6.3
C407	87-012-197-080		C-CAP,U 150P-50 CH
C408	87-012-197-080		C-CAP,U 150P-50 CH
C411	87-012-271-080		CAP, U 560P-50
C412	87-012-271-080		CAP, U 560P-50
C413	87-012-197-080		C-CAP,U 150P-50 CH
C414	87-012-197-080		C-CAP,U 150P-50 CH
C415	87-012-286-080		CAP, U 0.01-25
C416	87-012-286-080		CAP, U 0.01-25
C417	87-012-268-080		C-CAP,U 330P-50 B
C418	87-012-268-080		C-CAP,U 330P-50 B
C423	87-012-286-080		CAP, U 0.01-25
C424	87-012-286-080		CAP, U 0.01-25
C429	87-012-286-080		CAP, U 0.01-25
C430	87-012-286-080		CAP, U 0.01-25
C431	87-010-779-080		C-CAP,E 100-6.3
C434	87-010-831-080		C-CAP,U,0.1-16F
C501	87-010-831-080		C-CAP,U,0.1-16F
C502	87-010-831-080		C-CAP,U,0.1-16F
C503	87-010-662-080		C-CAP,E 22-6.3
C504	87-010-831-080		C-CAP,U,0.1-16F
C505	87-010-662-080		C-CAP,E 22-6.3
C506	87-010-831-080		C-CAP,U,0.1-16F
C507	87-010-661-080		C-CAP,E 10-16
C508	87-010-831-080		C-CAP,U,0.1-16F
C509	87-010-662-080		C-CAP,E 22-6.3
C510	87-010-831-080		C-CAP,U,0.1-16F
C511	87-010-661-080		C-CAP,E 10-16
C513	87-010-661-080		C-CAP,E 10-16
C514	87-010-661-080		C-CAP,E 10-16
C515	87-012-337-080		C-CAP,U 56P-50 CH
C516	87-012-337-080		C-CAP,U 56P-50 CH
C517	87-012-278-080		C-CAP,U 2200P-50 B
C518	87-012-278-080		C-CAP,U 2200P-50 B
C519	87-010-831-080		C-CAP,U,0.1-16F
C520	87-010-661-080		C-CAP,E 10-16

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
C521	87-010-831-080		C-CAP,U,0.1-16F
C522	87-010-661-080		C-CAP,E 10-16
C523	87-010-662-080		C-CAP,E 22-6.3
C524	87-010-662-080		C-CAP,E 22-6.3
C525	87-012-274-080		CHIP CAP,U 1000P-50B
C526	87-012-274-080		CHIP CAP,U 1000P-50B
C527	87-010-661-080		C-CAP,E 10-16
C528	87-010-661-080		C-CAP,E 10-16
C530	87-010-831-080		C-CAP,U,0.1-16F
C531	87-010-831-080		C-CAP,U,0.1-16F
C600	87-010-662-080		C-CAP,E 22-6.3
C601	87-010-779-080		C-CAP,E 100-6.3
C602	87-010-779-080		C-CAP,E 100-6.3
C603	87-010-662-080		C-CAP,E 22-6.3
C604	87-010-779-080		C-CAP,E 100-6.3
C607	87-010-831-080		C-CAP,U,0.1-16F
C608	87-010-831-080		C-CAP,U,0.1-16F
CN100	87-A60-537-080		C-CONN,21P H CFP55
CN201	87-A60-467-080		C-CONN,4P V FMN-BMTR
CN300	87-A60-518-080		C-CONN,8P H 6232
CN400	87-A60-027-080		C-CONN,8P H WHT
CN401	87-A60-062-010		CONN,05P V 9604S-05C
CN600	87-A60-519-080		C-CONN,14P H 6232
FB501	87-A90-828-080		C-F-BEAD, BK1608LM182
L100	87-A50-117-080		C-COIL,10UHLQH3C
L101	87-A50-012-080		C-COIL,100UH LQH3C
L102	87-A50-117-080		C-COIL,10UHLQH3C
L103	87-A50-117-080		C-COIL,10UHLQH3C
L201	87-A50-117-080		C-COIL,10UHLQH3C
L202	87-A50-117-080		C-COIL,10UHLQH3C
L203	87-A50-116-080		C-COIL,4.7UHLQH3C
L204	87-003-367-080		C-COIL,U 2.2UHK
L301	87-A50-117-080		C-COIL,10UHLQH3C
L501	87-A50-116-080		C-COIL,4.7UHLQH3C
L502	87-A50-116-080		C-COIL,4.7UHLQH3C
L503	87-A50-116-080		C-COIL,4.7UHLQH3C
L504	87-005-774-080		C-COIL,4BLH
L505	87-005-774-080		C-COIL,4BLH
L611	87-A50-163-080		C-COIL,ZBFS5101-PT
L612	87-005-512-080		C-COIL,BLM21A05
L613	87-005-512-080		C-COIL,BLM21A05
L614	87-A50-163-080		C-COIL,ZBFS5101-PT
L615	87-A90-034-080		C-FLTR,EMI BLM41P750
L616	87-A50-163-080		C-COIL,ZBFS5101-PT
R423	87-025-564-080		C-RES,U M/F 47K D
R424	87-025-564-080		C-RES,U M/F 47K D
R425	87-022-583-080		C-RES,U M/F 12K D
R426	87-022-583-080		C-RES,U M/F 12K D
X200	87-A70-270-080		C-VIB,XTAL 45.1584MHZ SMD-49
X301	87-A70-100-080		C-VIB,CER 12.0MHZ PBRC-BR-A
MECHA C.B			
CON1	87-A61-058-080		C-CONN,8P H 6232BOT
M400	87-A91-490-010		MOT,BCD3B04
M401	87-A91-489-010		MOT,BCD3B93
SW1	87-A91-419-080		C-SW,PUSH MPU11121MLB1
SW2	87-A91-445-080		C-SW,PUSH MPU20420MLB1
LOAD C.B			
CON451	86-NFZ-675-010		CONN,5P H 6216-11H
M450	87-A90-672-010		MOT,M25E-4
SW451	87-A90-673-010		SW,MICRO ESE11SH1C
SW452	87-A90-117-010		SW,PUSH 1-1-1 MPU103

- Regarding connectors, they are not stocked as they are not the initial order items.
  The connectors are available after they are supplied from connector manufacturers upon the order is received.

○チップ抵抗部品コード／CHIP RESISTOR PART CODE

チップ抵抗部品コードの成り立ち
Chip Resistor Part Coding

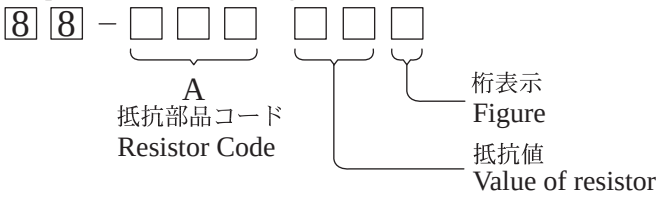

チップ抵抗
Chip resistor

容量 Wattage	種類 Type	許容誤差 Tolerance	記号 Symbol	寸法／Dimensions (mm)				抵抗コード　：A Resistor Code：A
				外形／Form	L	W	t	
1/16W	1005	± 5%	CJ		1.0	0.5	0.35	104
1/16W	1608	± 5%	CJ		1.6	0.8	0.45	108
1/10W	2125	± 5%	CJ		2	1.25	0.45	118
1/8W	3216	± 5%	CJ		3.2	1.6	0.55	128

TRANSISTOR ILLUSTRATION

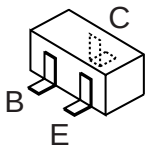

2SA1588
2SC4116
RN1305
RN2305

IC BLOCK DIAGRAM

IC, BD7910FV

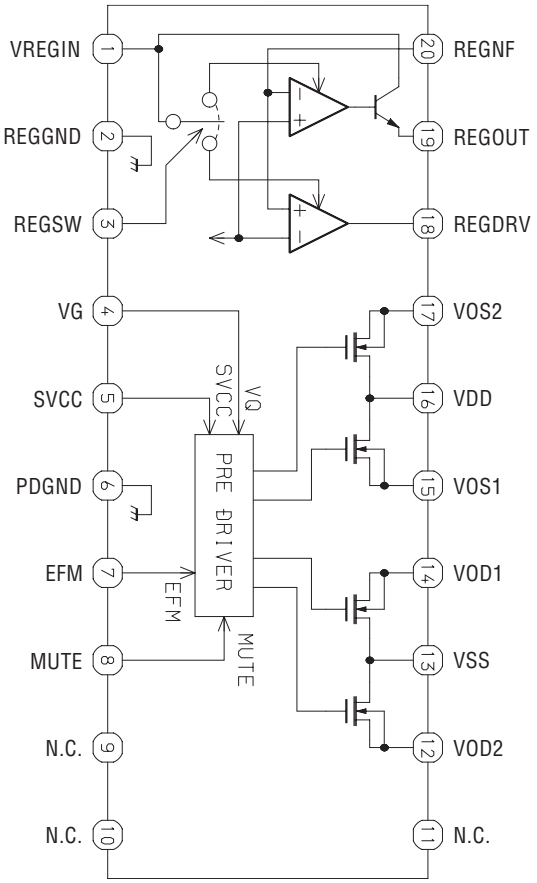

IC, BA5970FP

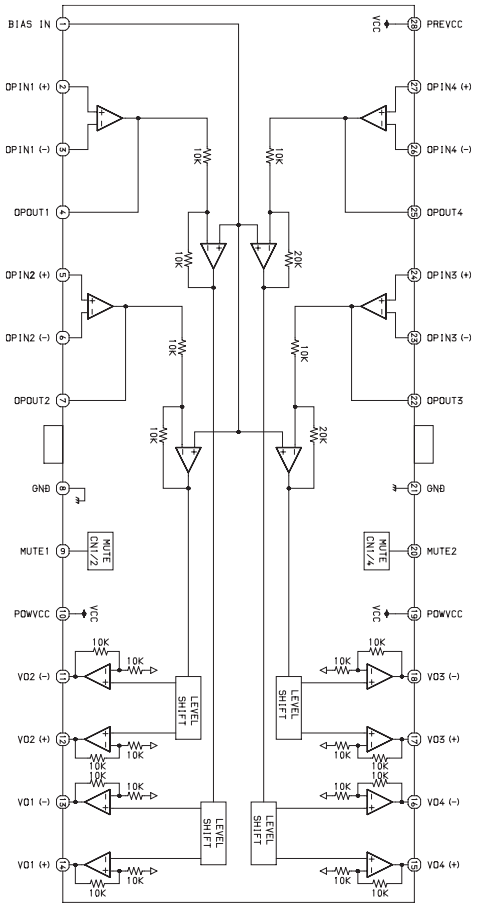

IC, LA5638H

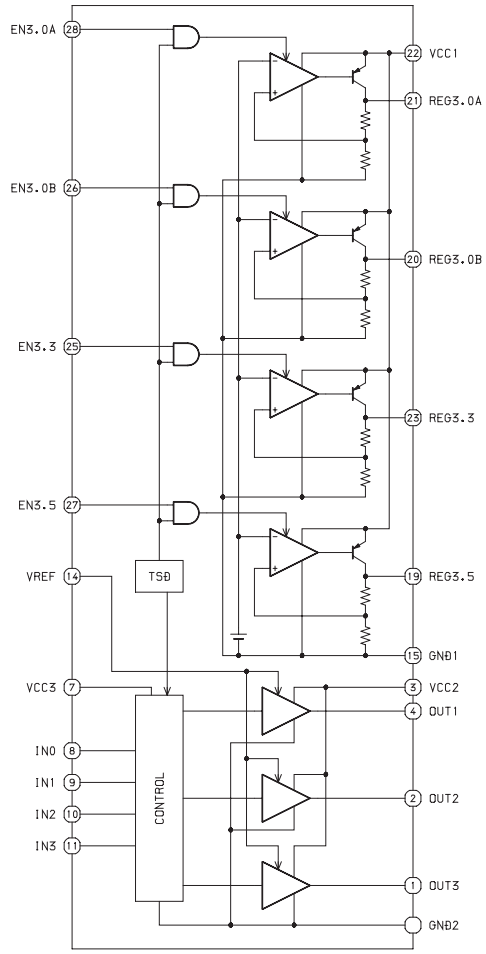

IC, AK4519VF

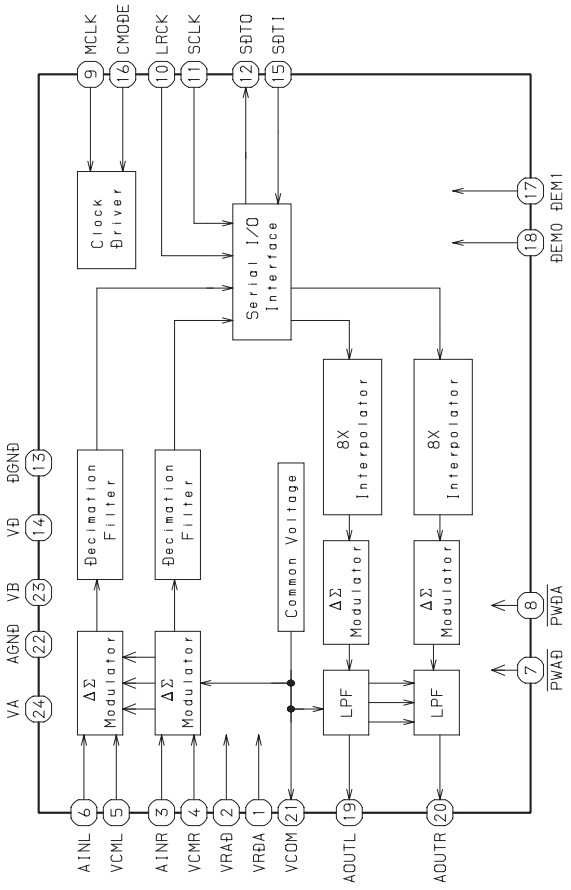

BLOCK DIAGRAM

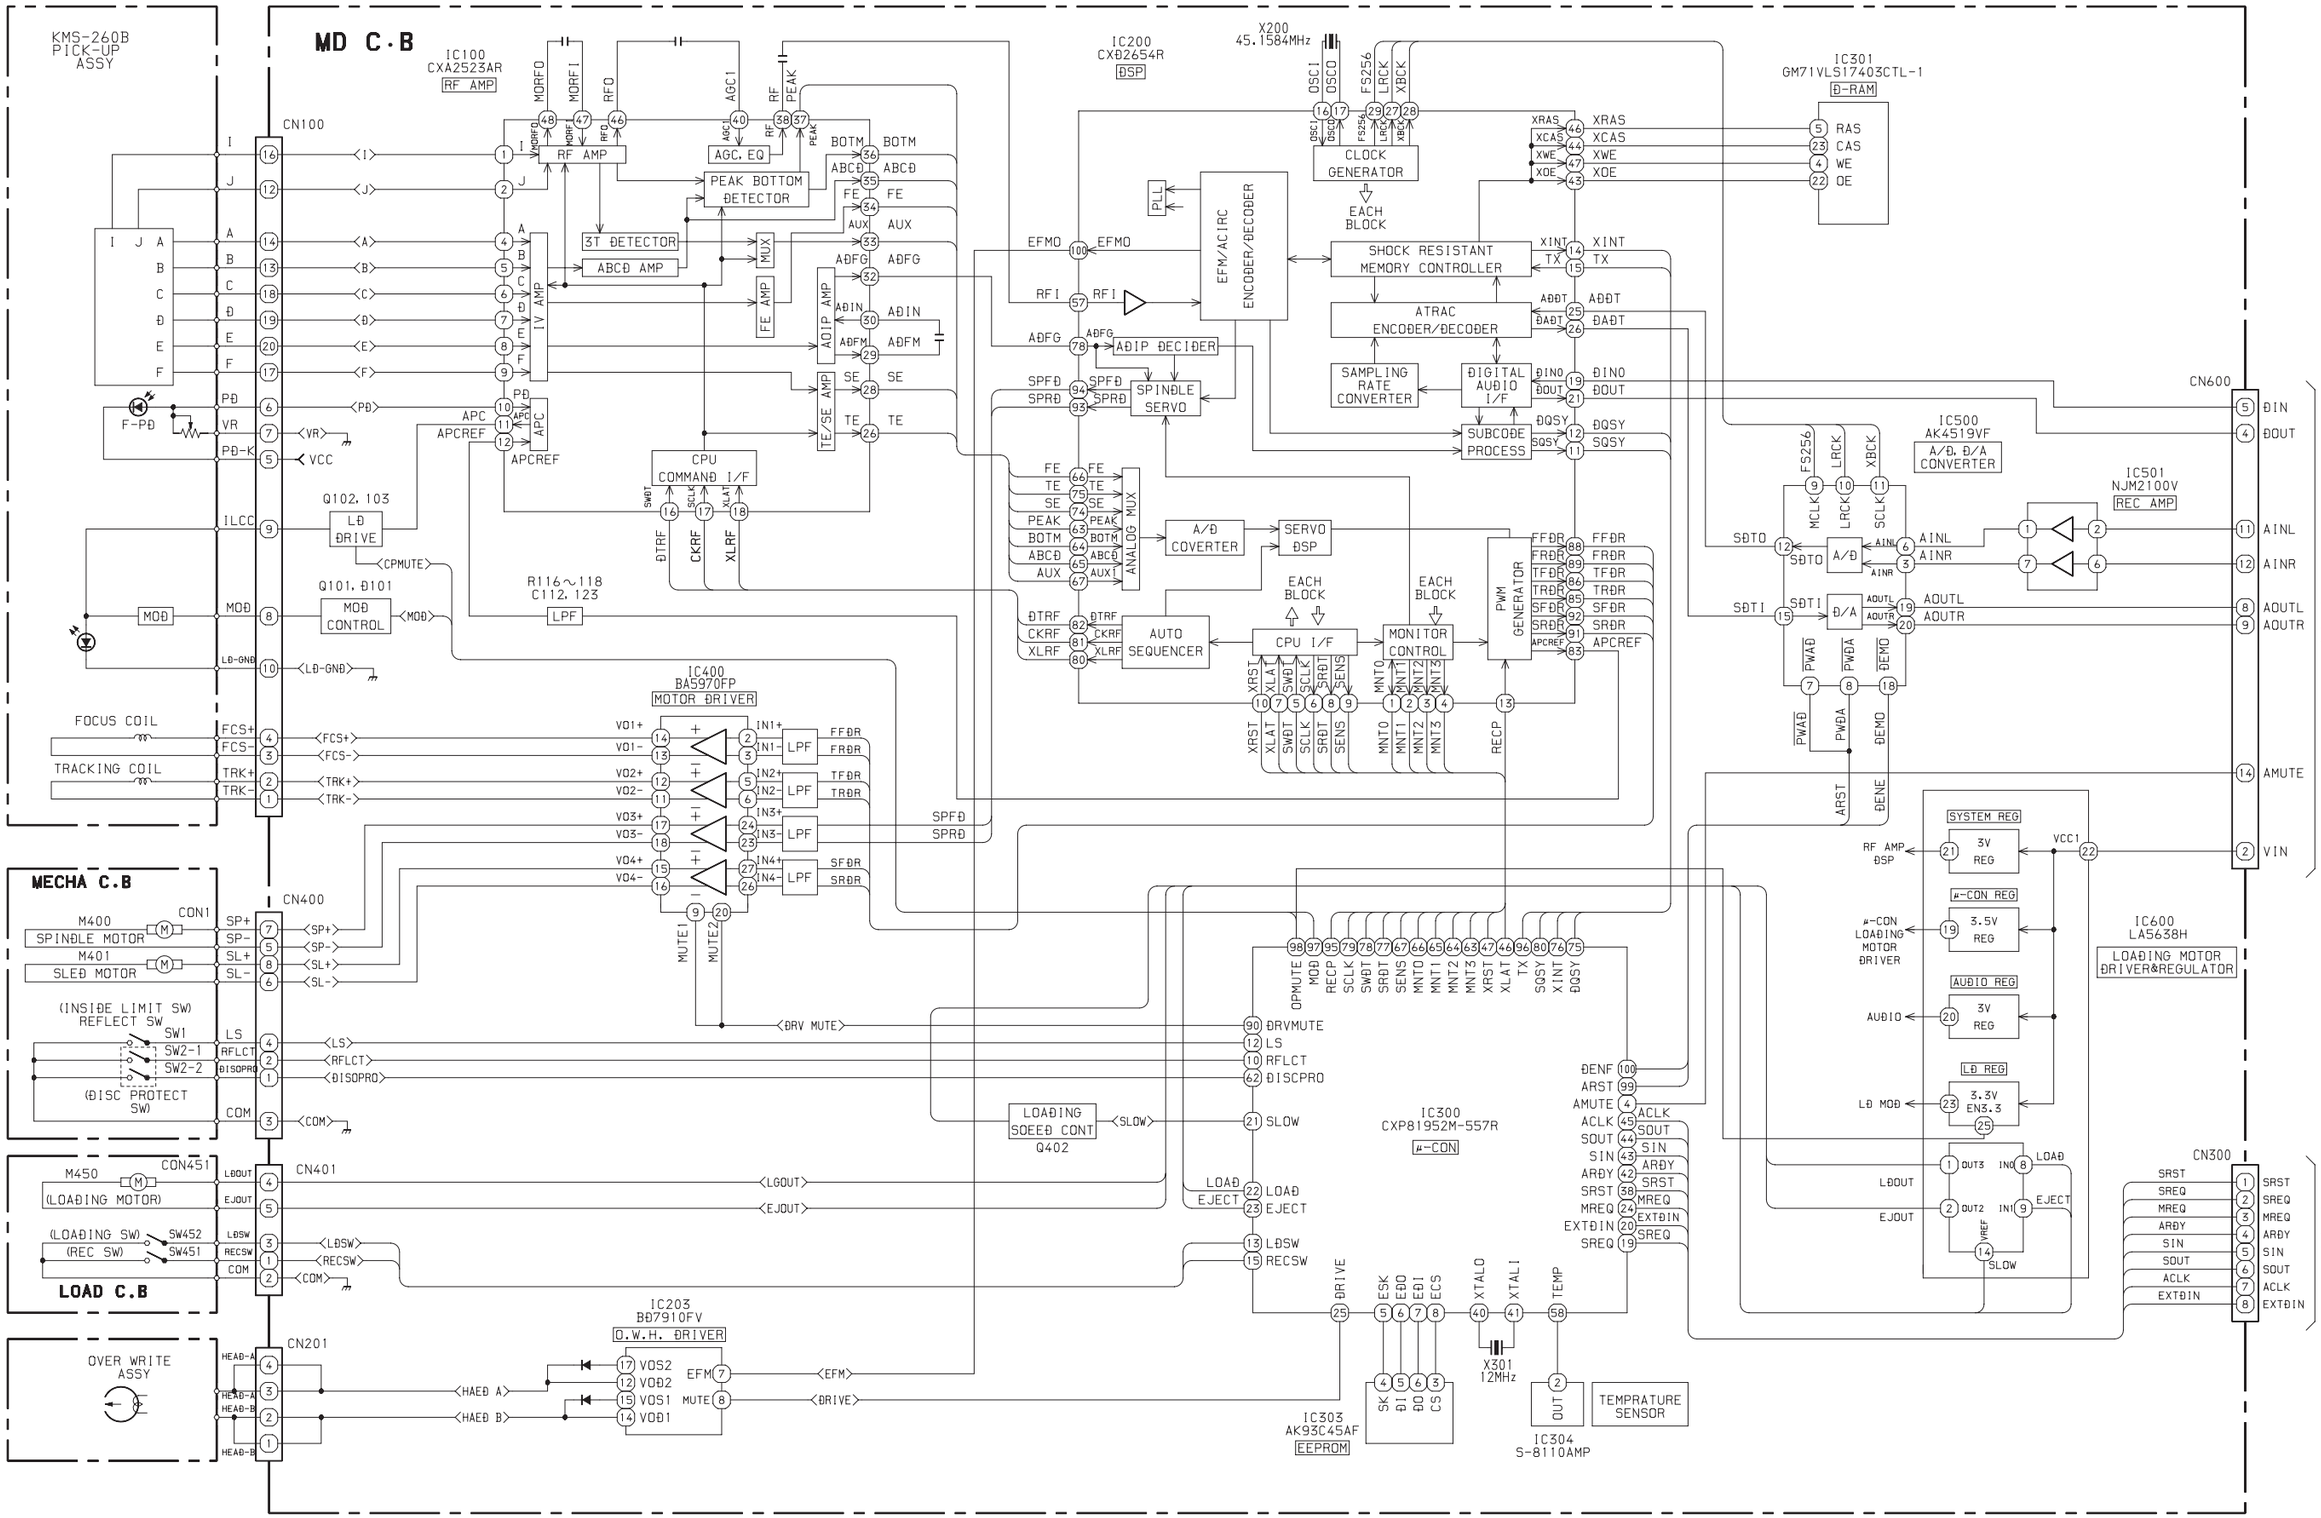

MD C.B (COMPONENT SIDE)

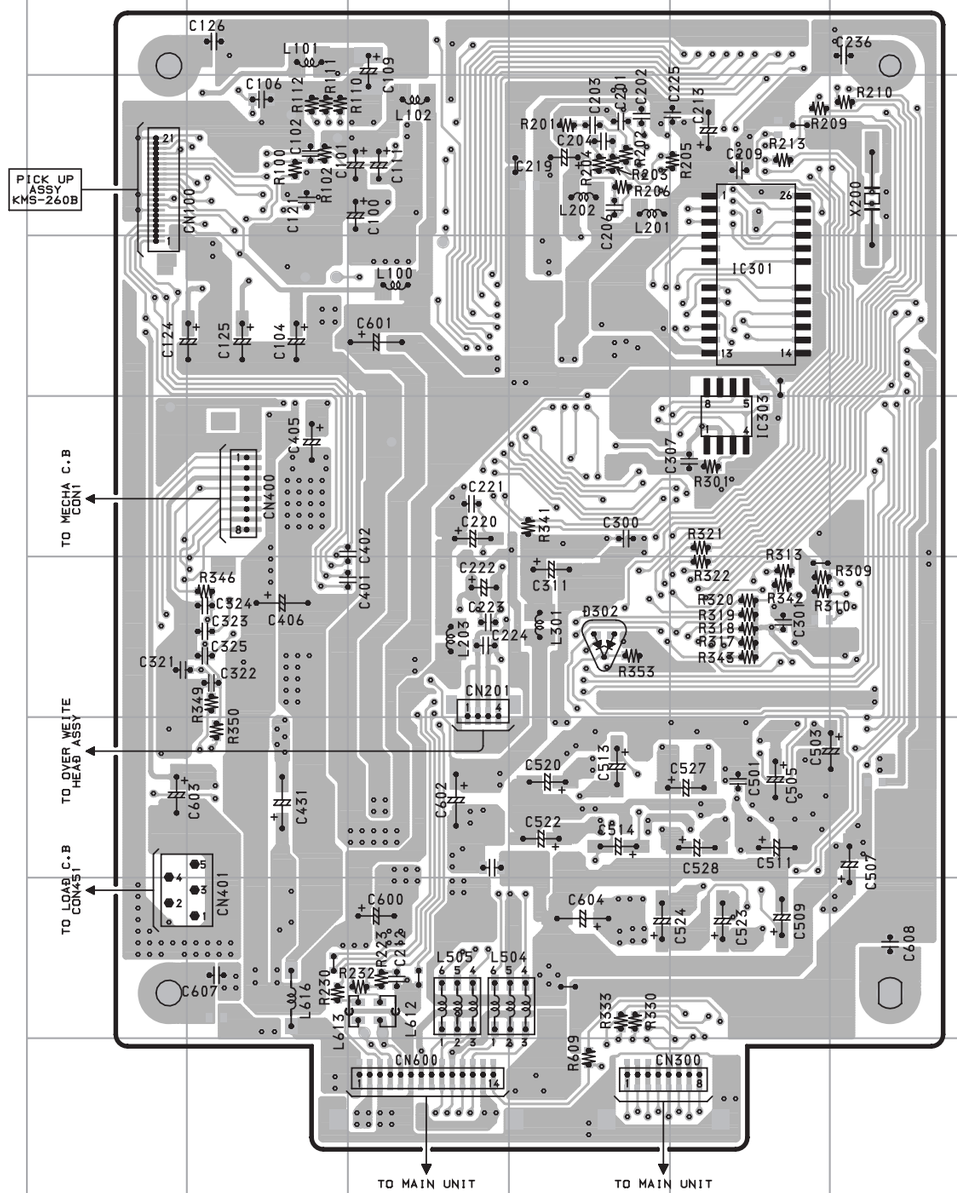

MD C.B (CONDUCTOR SIDE)

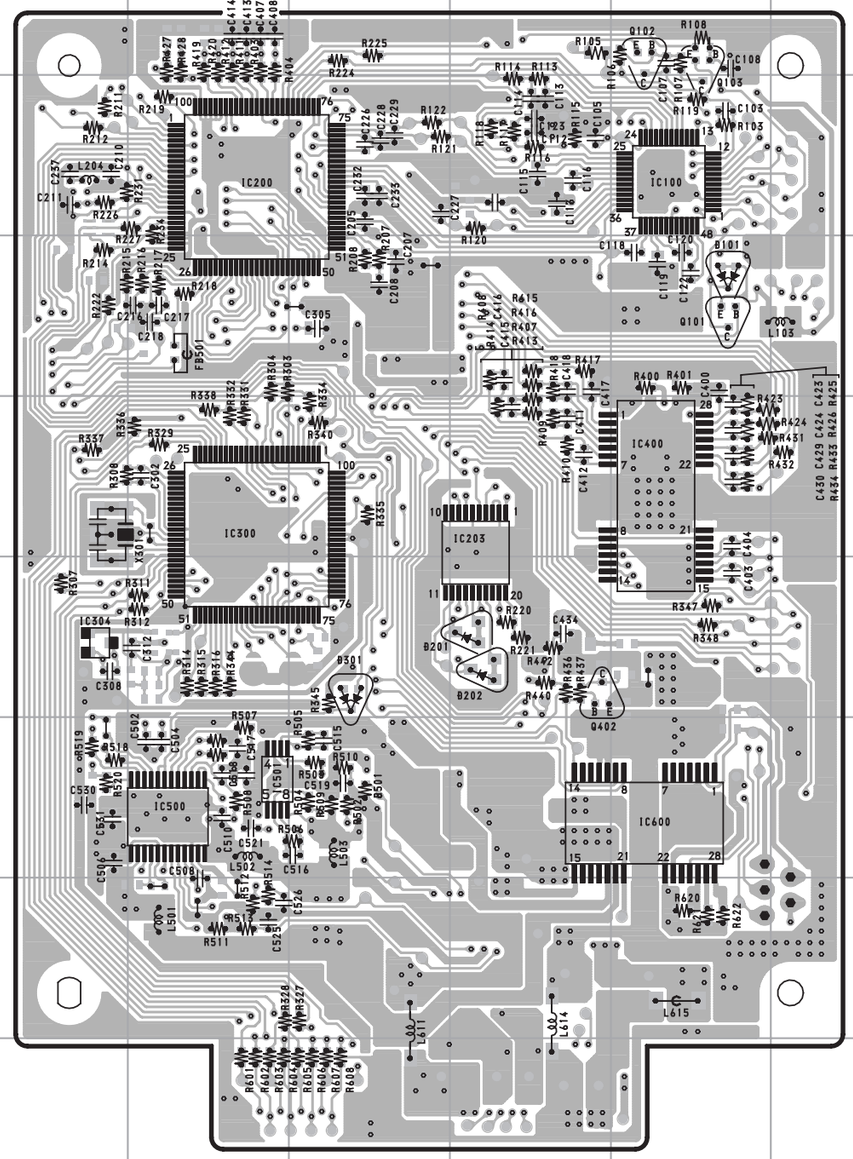

SCHEMATIC DIAGRAM-1 (MD)

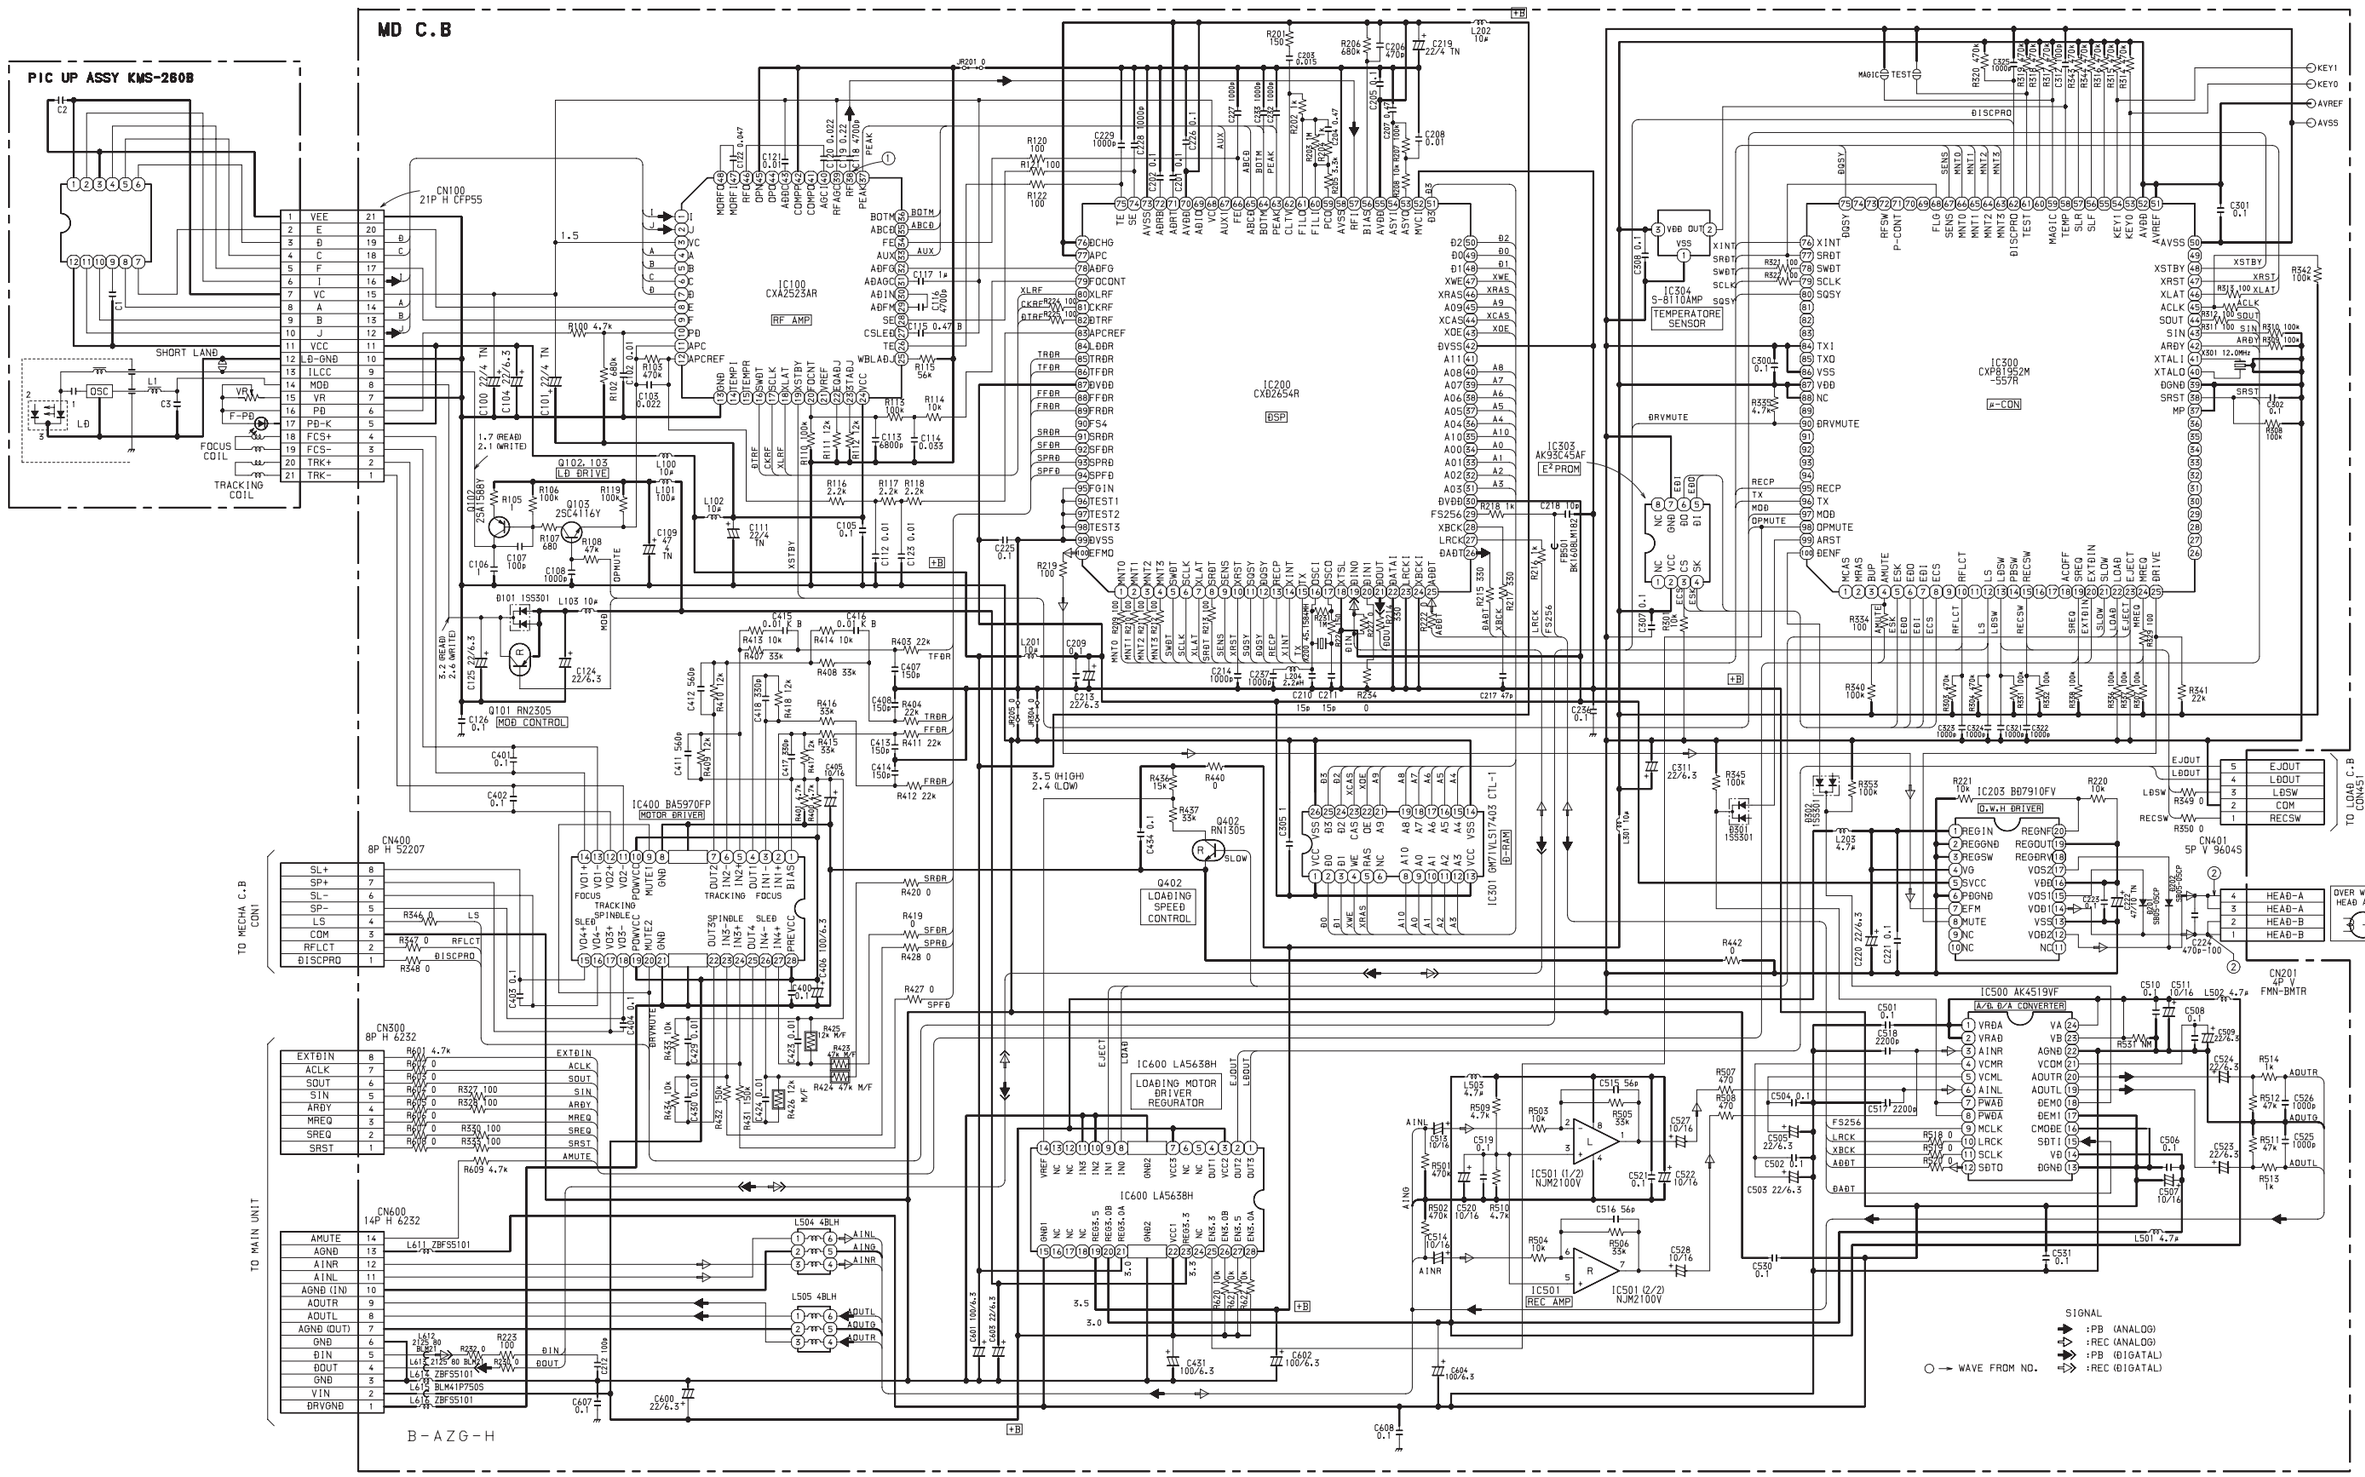

WIRING-2 (MECHA/LOAD)

MECHA C.B

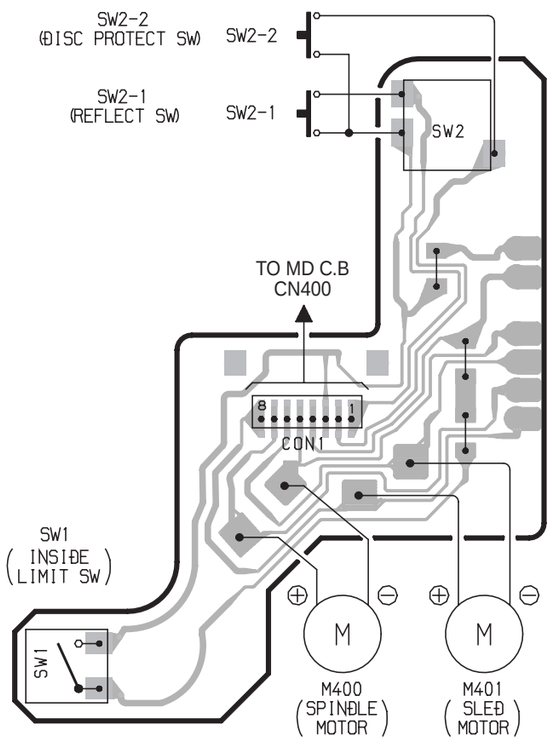

LOAĐ C.B

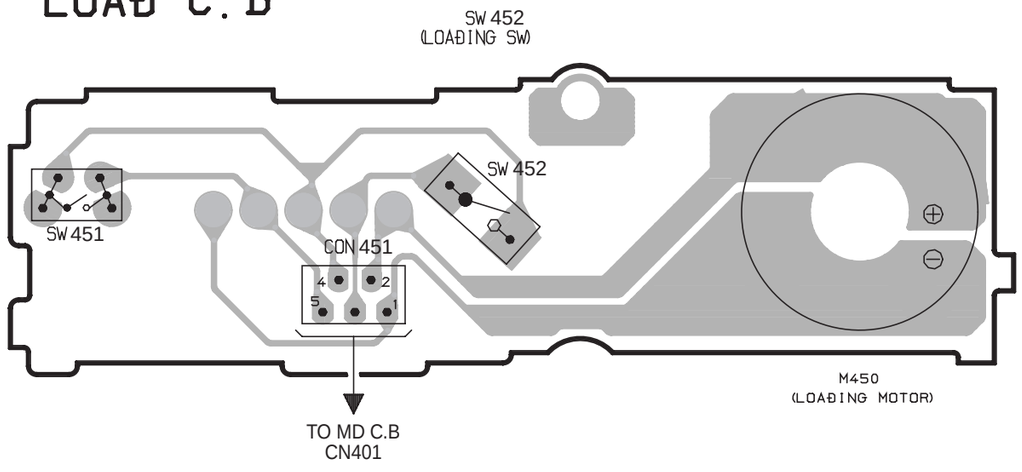

SCHEMATIC DIAGRAM-2 (MECHA/LOAD)

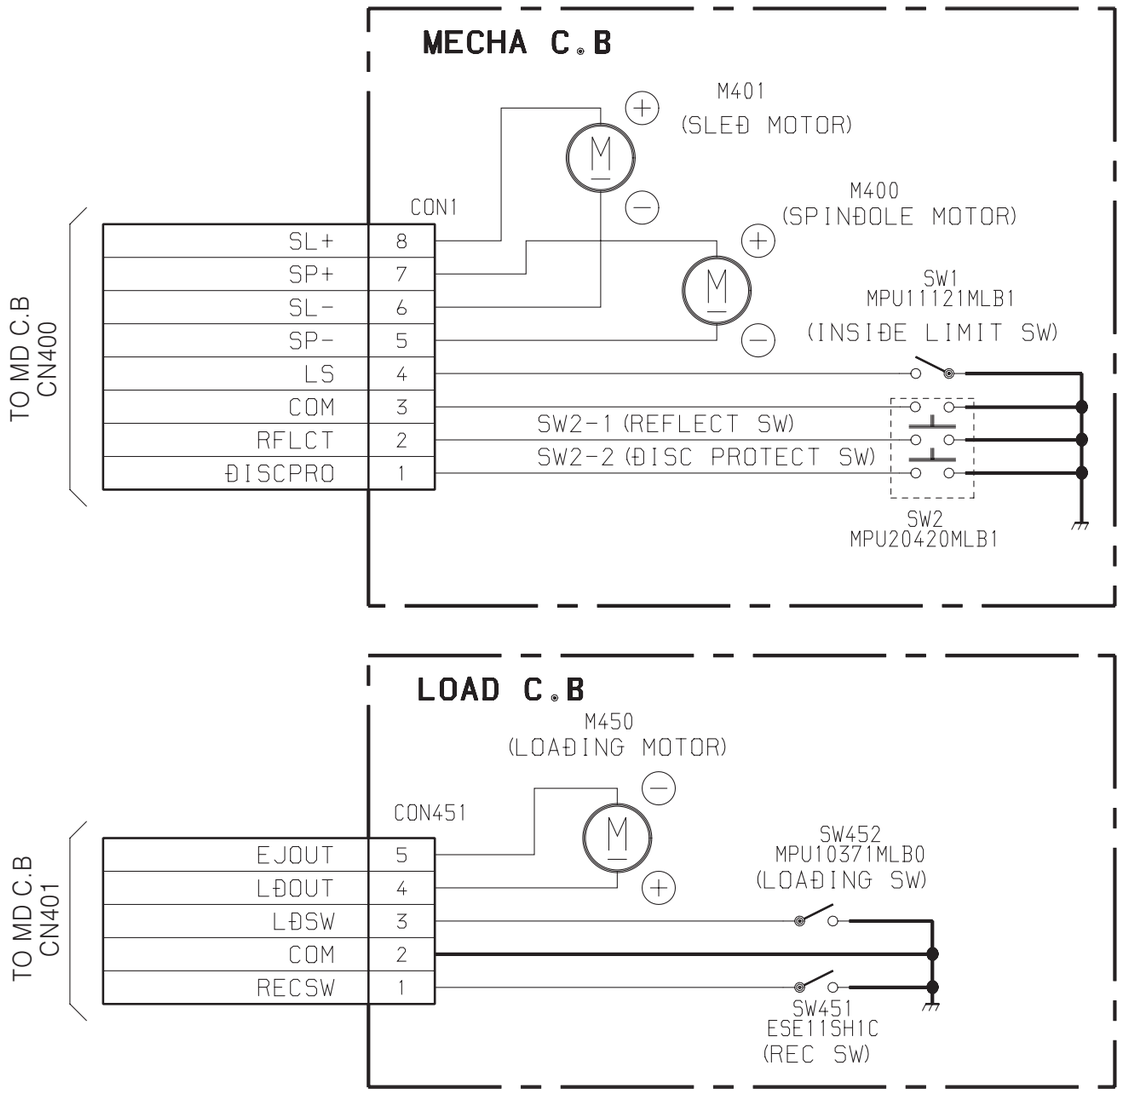

WAVE FORM

① IC100 Pin ㊳ (RF)

VOLT/DIV: 0.5V
TIME/DIV: 1mS

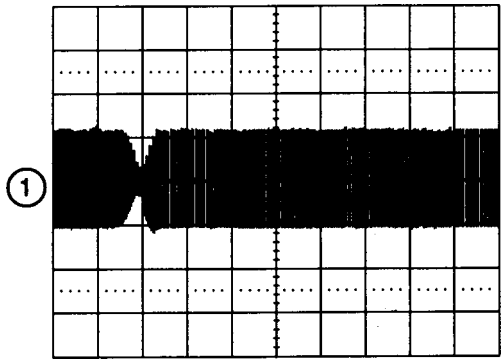

② CN201 Pin ① (HEAD-B)
CN201 Pin ④ (HEAD-A)

VOLT/DIV: 10V
TIME/DIV: 0.2µS

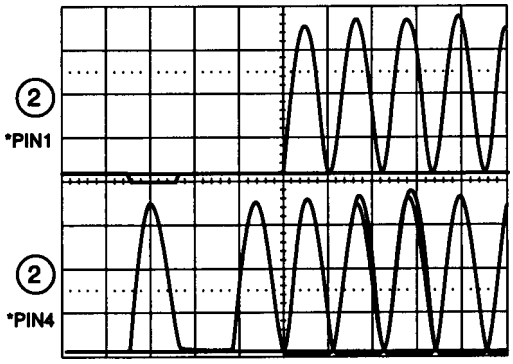

IC DESCRIPTION

IC, CXA2523AR

Pin No.	Pin Name	I/O	Description
1	I	I	Input “I” RF signal converted to I-V.
2	J	I	Input “J” RF signal converted to I-V.
3	VC	O	Output voltage for VCC/2.
4	A	I	Input current for main beam servo signal A.
5	B	I	Input current for main beam servo signal B.
6	C	I	Input currentt for main beam servo signal C.
7	D	I	Input current for main beam servo signal D.
8	E	I	Input current for side beam servo signal E.
9	F	I	Input current for side beam servo signal F.
10	PD	I	Input beam spectrum monitor signal.
11	APC	O	Output laser APC.
12	APCREF	I	Input reference voltage for laser power setting.
13	GND	—	GND.
14	TEMPI	I	Not used.
15	TEMPR	I	
16	SWDT	I	Input micro-processor serial interface data.
17	SCLK	I	Input micro-processor serial interface shift clock.
18	XLAT	I	Input micro-processor serial interface latch. “L”: Latch.
19	XSTBY	I	Standby setting pin. “H”: Normal mode, “L”: Standby.
20	FOCNT	I	Internal current setting pin.
21	VREF	O	Not used.
22	EQADJ	I/O	EQ central frequency setting pin.
23	3TADJ	I/O	BPF3T central frequency setting pin.
24	VCC	—	Power supply pin.
25	WBLADJ	I/O	BPF22 central frequency setting pin.
26	TE	O	Output tracking error signal.
27	CSLED	—	LPF capacitor connection pin for SLED error signal.
28	SE	O	Output SLED error signal.
29	ADFM	O	Output ADIP FM signal.
30	ADIN	I	Input ADIP signal comparator.
31	ADAGC	—	ADIPAGC capacitor connection pin.
32	ADFG	O	Output ADIP2 binary data signal.
33	AUX	O	I3 output temperature signal. Switched by serial command.
34	FE	O	Output focus error signal.
35	ABCD	O	Output beam spectrum signal for main beam servo detector.
36	BOTM	O	Output bottom hold signal for RF/ABCD.
37	PEAK	O	Output peak hold signal for RF/ABCD.
38	RF	O	RF equalizer output pin.
39	RFAGC	—	RFAGC capacitor connection pin.
40	AGCI	I	RFAGC input pin.
41	COMPO	O	Not used.

Pin No.	Pin Name	I/O	Description
42	COMPP	I	User comparator non-inverted input pin.
43	ADDC	I/O	Capacitor connection pin for ADIP amplifier on return circuit.
44	OPO	O	Not used.
45	OPN	I	Non-inverted input pin for user operational amplifier.
46	RFO	O	RF amplifier output pin. Check point for eye pattern.
47	MORFI	I	Input pin where Groove RF signal is AC coupled.
48	MORFO	O	Output pin for Groove RF signal.

IC, CXD2654R

Pin No.	Pin Name	I/O	Description
1	MNT0	O	Monitor output terminal.
2	MNT1	O	
3	MNT2	O	
4	MNT3	O	
5	SWDT	I	Microprocessor serial interface data input.
6	SCLK	I	Microprocessor serial interface shift clock input.
7	XLAT	I	Microprocessor serial interface latch input. Latched at falling down edge.
8	SRDT	O	Microprocessor serial interface data output.
9	SENS	O	The terminal which outputs internal status in accordance with the address of the microprocessor serial interface.
10	XRST	I	Reset input. L: reset.
11	SQSY	O	Disc sub code Q sync/ADIP sync output.
12	DQSY	O	Subcode Q sync output of U-bit CD or MD format when the DIGITAL IN source is CD or MD.
13	RECP	I	Laser power selection input. H: Recording power, L: Playback power.
14	XINT	O	Interrupt request output terminal. L is output when interrupt status is generated.
15	TX	I	Record data output enable signal input terminal. H: enable.
16	OSCI	I	Crystal oscillator circuit input terminal.
17	OSCO	O	Crystal oscillator circuit output terminal. (Inverted output of OSCI).
18	XTSL	I	OSCI terminal input frequency selection. H: 512 Fs (22.5792 MHz), L: 1024 Fs (45.1584 MHz).
19	DIN0	I	Digital audio interface signal input 1.
20	DIN1	I	Digital audio interface signal input 2.
21	DOUT	O	Digital audio interface signal output.
22	DATAI	I	Test pin. Connect to GND.
23	LRCKI	I	Test pin. Connect to GND.
24	XBCKI	I	Test pin. Connect to GND.
25	ADDT	I	Data input from A/D converter.
26	DADT	O	REC monitor output/decoded audio data output.
27	LRCK	O	LR clock (44.1kHz) output to the external audio block.
28	XBCK	O	Bit clock (2.8224MHz) output to the external audio block.
29	FS256	O	256Fs output.
30	DVDD	—	Digital power supply.
31	A03	O	Eternal DRAM address output.
32	A02	O	
33	A01	O	
34	A00	O	
35	A10	O	
36	A04	O	
37	A05	O	
38	A06	O	

Pin No.	Pin Name	I/O	Description
39	A07	O	Eternal DRAM address output.
40	A08	O	
41	A11	O	Eternal DRAM address output. (Not connected)
42	DVSS	—	Digital ground.
43	XOE	O	External DRAM output enable.
44	XCAS	O	External DRAM $\overline{\text{CAS}}$ output.
45	A09	O	External DRAM address output.
46	XRAS	O	External DRAM $\overline{\text{RAS}}$ output.
47	XWE	O	External DRAM write enable.
48	D1	I/O	External DRAM data bus.
49	D0	I/O	
50	D2	I/O	
51	D3	I/O	
52	MVCI	I	External VCO (784Fs) clock input.
53	ASYO	O	Playback EFM full- swing output. (Low: VSS; high: VDD)
54	ASYI	I	Playback EFM comparator slice voltage input.
55	AVDD	—	Analog power supply.
56	BIAS	I	Playback EFM comparator bias current input.
57	RFI	I	Playback EFM RF signal input.
58	AVSS	—	Analog ground.
59	PCO	O	Phase comparison output for master PLL of playback digital PLL and recording EFM PLL.
60	FILI	I	Filter input for master PLL of playback digital PLL and recording EFM PLL.
61	FILO	O	Filter output for master PLL of playback digital PLL and recording EFM PLL.
62	CLTV	I	Internal VCO control voltage input for master PLL of playback digital PLL and recording EFM PLL.
63	PEAK	I	Peak hold signal input for quantity of light.
64	BOTM	I	Bottom hold signal input for quantity of light.
65	ABCD	I	Signal input for quantity of light.
66	FE	I	Focus error signal input.
67	AUX1	I	Auxiliary input 1.
68	VC	I	Center voltage input.
69	ADIO	O	Monitor output for A/D converter input signal. (Not connected)
70	AVDD	—	Analog power supply.
71	ADRT	I	Voltage input for the upper limit of the A/D converter operating range.
72	ADRB	I	Voltage input for the lower limit of the A/D converter operating range.
73	AVSS	—	Analog ground.
74	SE	I	Sled error signal input.
75	TE	I	Tracking error signal input.
76	DCHG	I	Connected to the low impedance power supply.
77	APC	I	Error signal input to the laser digital APC.

Pin No.	Pin Name	I/O	Description
78	ADFG	I	ADIP2 binary-converted FM signal (22.05±1 kHz) input.
79	F0CNT	O	Current source setting output terminal to CXA2523.
80	XLRF	O	Latch output for CXA2523 control. Latched at rise-up.
81	CKRF	O	Shift clock output for CXA2523 control.
82	DTRF	O	Data output for CXA2523 control.
83	APCREF	O	Reference PWM output to laser APC.
84	LDDR	O	Not used.
85	TRDR	O	Tracking servo drive PWM output. (-).
86	TFDR	O	Tracking servo drive PWM output. (+).
87	DVDD	—	Digital power supply.
88	FFDR	O	Focus servo drive PWM output. (+).
89	FRDR	O	Focus servo drive PWM output. (-).
90	FS4	O	Not used.
91	SRDR	O	Sled servo drive PWM output. (-).
92	SFDR	O	Sled servo drive PWM output. (+).
93	SPRD	O	Spindle servo drive PWM output. (PWM (-) or negative polarity).
94	SPFD	O	Spindle servo drive PWM output. (PWM (+) or PWM absolute value).
95	FGIN	I	FG input to spindle CAV servo.
96	TEST1	I	Test pin. Connected to GND.
97	TEST2	I	
98	TEST3	I	
99	DVSS	—	Digital GND.
100	EFMO	O	Low signal during playback. EFM (encode data) output: during recording.

IC, CXP81952M-557R

Pin No.	Pin Name	I/O	Description
1	MCAS	—	Not used.
2	MRAS	—	
3	BUP	—	
4	AMUTE	O	Audio mute signal output.
5	ESK	O	Serial clock output for EEPROM interface.
6	EDO	O	Serial data output for EEPROM interface.
7	EDI	I	Serial data input for EEPROM interface.
8	ECS	O	EEPROM chip select signal output.
9	NC	—	Not used.
10	RFLCT	I	Input from disc reflectance detection switch.
11	NC	—	Not used.
12	LS	I	Input signal from pickup inner circumference detect switch.
13	LDSW	I	Input signal from loading mechanism EJECT position detect switch.
14	PBSW	—	Not used.
15	RECSW	I	Input signal from loading mechanism REC position detect switch.
16	NC	—	Not used.
17	NC	—	
18	ACOFF	—	
19	SREQ	I	System control send request input signal for system control interface.
20	EXTDIN	O	External DIGITAL-IN permission output signal.
21	SLOW	O	Speed control signal output to loading mechanism.
22	LOAD	O	Movement direction control signal output-1 to loading mechanism.
23	EJECT	O	Movement direction control signal output-2 to loading mechanism.
24	MREQ	O	MD controller send request output signal for system control interface.
25	DRIVE	O	EFM driver ON/OFF output signal.
26	NC	—	Not used.
27	NC	—	
28	NC	—	
29	NC	—	
30	NC	—	
31	NC	—	
32	NC	—	
33	NC	—	
34	NC	—	
35	NC	—	
36	NC	—	
37	MP	—	Connected to VSS.
38	SRST	I	MD controller reset signal input.
39	DGND	—	Connected to VSS.
40	XTALO	O	External crystal connection terminal-1 for system clock oscillation.
41	XTALI	I	External crystal connection terminal-2 for system clock oscillation.

Pin No.	Pin Name	I/O	Description
42	ARDY	I	READY input signal for system control interface.
43	SIN	I	Serial data input for system control interface.
44	SOUT	O	Serial data output for system control interface.
45	ACLK	O	Serial clock output for system control interface.
46	XLAT	O	Latch signal output for CXD2654 interface.
47	XRST	O	CXD2654 reset signal output.
48	XSTBY	O	CXA2523 standby signal output.
49	NC	O	Not used.
50	AVSS	—	Connected to VSS.
51	AVREF	—	Connected to VDD.
52	AVDD	—	
53	KEY0	I	
54	KEY1	I	
55	NC	I	
56	SLF	I	
57	SLR	I	
58	TEMP	I	Connected to VSS.
59	MAGIC	I	Connected to VDD.
60	NC	I	
61	TEST	I	
62	DISCPRO	I	Disc write protection switch input.
63	MNT3	I	CXD2654 monitor signal input-1.
64	MNT2	I	CXD2654 monitor signal input-2.
65	MNT1	I	CXD2654 monitor signal input-3.
66	MNT0	I	CXD2654 monitor signal input-4.
67	SENS	I	CXD2654 SENS signal input.
68	FLG	O	Monitoring signal of flag contained in SRDT of CXD2652 interface.
69	NC	O	Not used.
70	NC	O	
71	P-CONT	O	
72	RFSW	O	
73	NC	O	
74	NC	O	
75	DQSY	I	DIGITAL-IN SUB-Q sync input.
76	XINT	I	CXD2654 status sync input.
77	SRDT	I	Serial data input for CXD2654 interface.
78	SWDT	O	Serial data output for CXD2654 interface.
79	SCLK	O	Serial clock output for CXD2654 interface.
80	SQSY	I	SUB-Q, ADIP sync input.
81	NC	—	Not used.
82	NC	—	

Pin No.	Pin Name	I/O	Description
83	NC	—	Not used.
84	TXI	I	Connected to VSS.
85	TXO	O	Open.
86	VSS	—	Connected to VSS.
87	VDD	—	Connected to VDD.
88	NC	—	
89	NC	—	Not used.
90	DRVMUTE	O	BA5970FP mute signal output.
91	NC	—	Not used.
92	NC	—	
93	NC	—	
94	NC	—	
95	RECP	O	Laser power select signal output.
96	TX	O	Record data output enable signal output.
97	MOD	O	High frequency superimpose circuit ON/OFF signal output.
98	OPMUTE	O	Laser mute signal output.
99	ARST	O	AK4512 reset signal output.
100	DENF	O	De-emphasis ON/OFF signal output.

MECHANISM EXPLODED VIEW 1/1

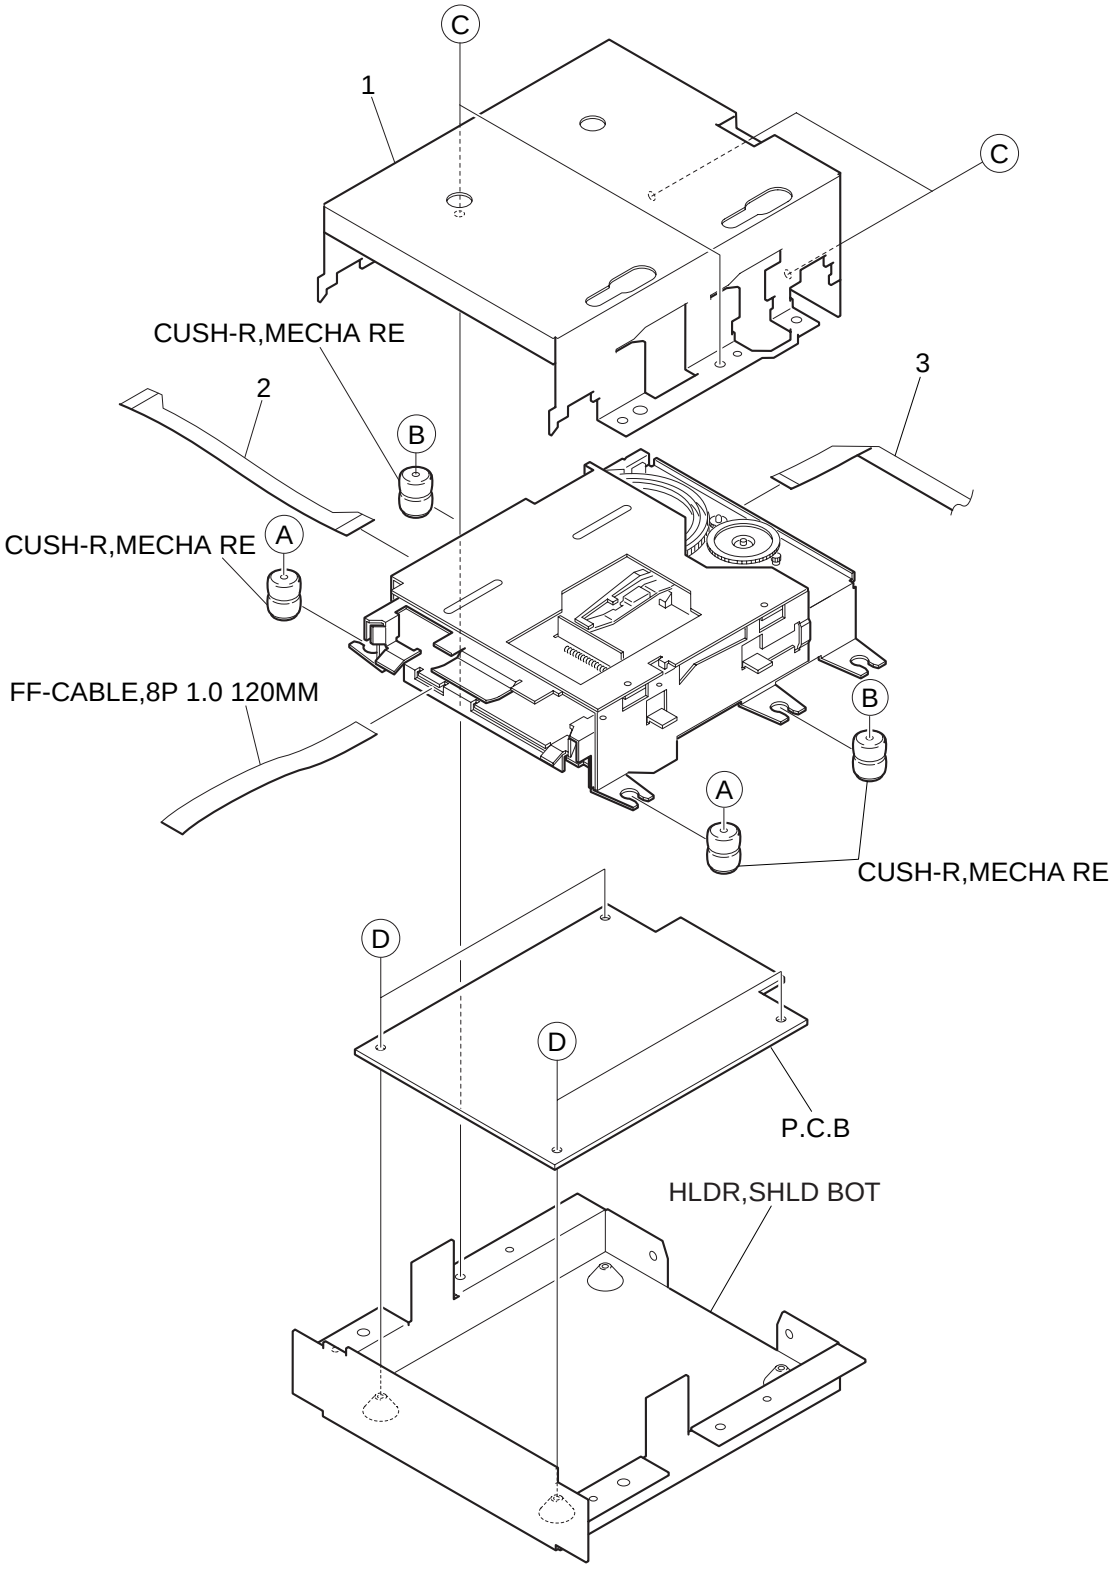

MECHANISM PARTS LIST 1/1

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
1	87-ZG9-202-210		HLDR,SHLD TOP
2	8A-ZG4-611-110		PWB,FLEX 21P AZG-4
3	87-ZG9-604-010		FF-CABLE, 5P 1.25 100MM
A	87-ZG9-209-010		S-SCREW,MD TF
B	87-ZG9-208-010		S-SCREW,MD T
C	87-067-020-010		SCREW, VTT+3-4
D	87-067-421-010		VTT+2-4

MECHANISM EXPLODED VIEW 1/1 (7ZG8 B2)

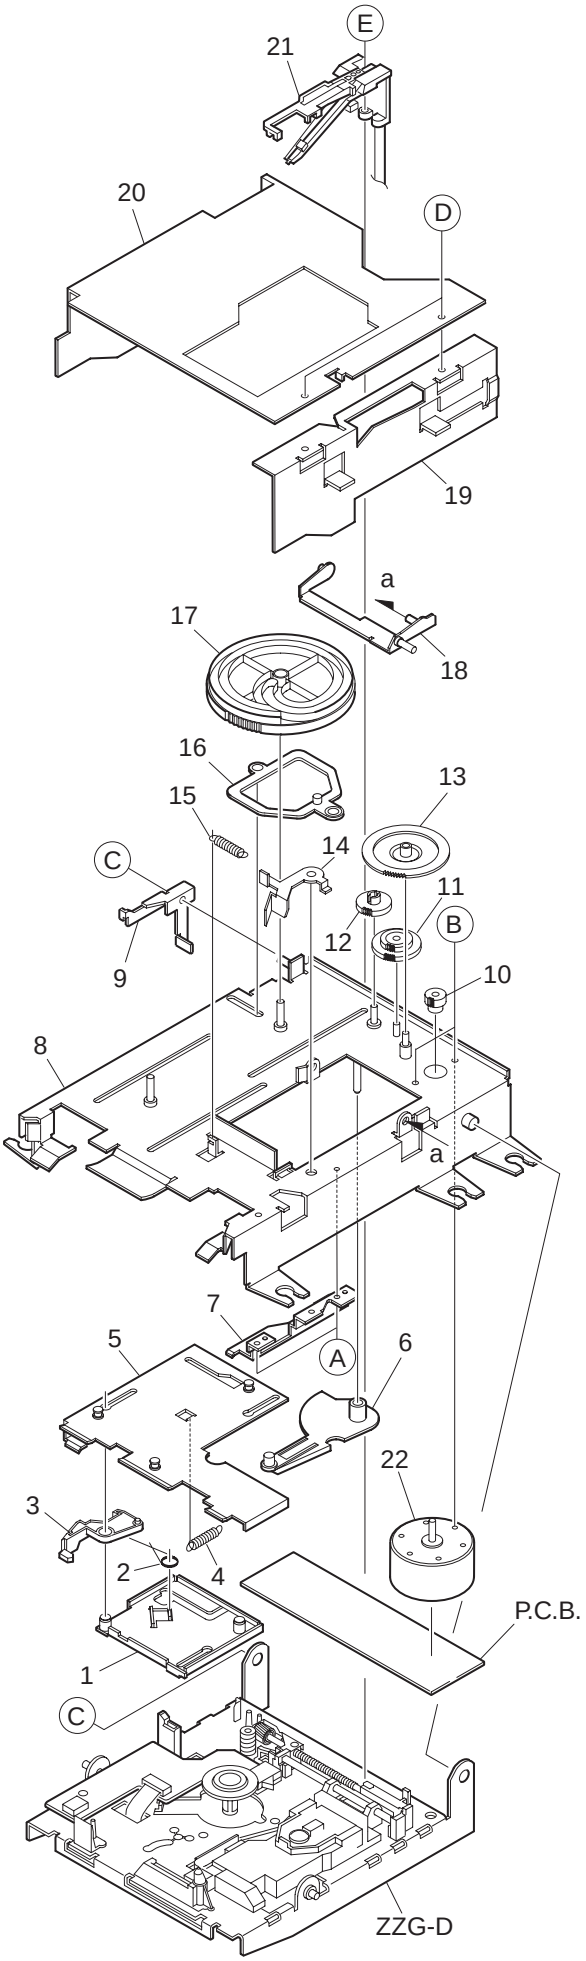

MECHANISM PARTS LIST 1/1 (7ZG8 B2)

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
1	87-ZG8-220-210		PLATE ASSY,LATCH
2	87-ZG8-259-110		SPR-T,LATCH
3	87-ZG8-230-210		LEVER,LATCH(*)
4	87-ZG8-224-110		SPR-E,LATCH
5	87-ZG8-214-210		HLDR ASSY,CARTRIGE
6	87-ZG8-233-310		LEVER,SW H(*)
7	87-ZG8-255-210		PLATE,CARTRIGE
8	87-ZG8-277-010		CHAS ASSY,MAIN B
9	87-ZG8-256-110		LEVER,SW S2
10	87-ZG8-242-010		GEAR,MOT
11	87-ZG8-253-010		GEAR,REDUCTION S3
12	87-ZG8-246-010		GEAR,IDLER 2
13	87-ZG8-252-010		GEAR,REDUCTION L3
14	87-ZG8-231-110		LEVER,SHUTTER
15	87-ZG8-232-110		SPR-E,SHUTTER
16	87-ZG8-225-310		LEVER ASSY,CAM
17	87-ZG8-239-110		CAM,LOAD(*)
18	87-ZG8-257-210		LEVER ASSY,REC
19	87-ZG8-213-310		PLATE,SLIDE R
20	87-ZG8-209-310		PLATE ASSY,SLIDE L
21	87-A90-605-210		HEAD,OWH RF325-74A
22	87-A90-672-010		MOT,M25E-4
A	87-B10-129-010		VTT+1.7-3.5 W/O MFZN2-C
B	87-B10-128-010		V+1.7-2 W/O MFZN2-C
C	87-B10-130-010		W-P,1.23-3.1-0.25 SLIT
D	87-B10-185-010		VTT+2-3
E	87-B10-286-010		VW+1.7-5 W/O MFZN2C
F	87-067-315-010		PW 3.1-7-0.5

MECHANISM EXPLODED VIEW 1/1 (ZZG-D)

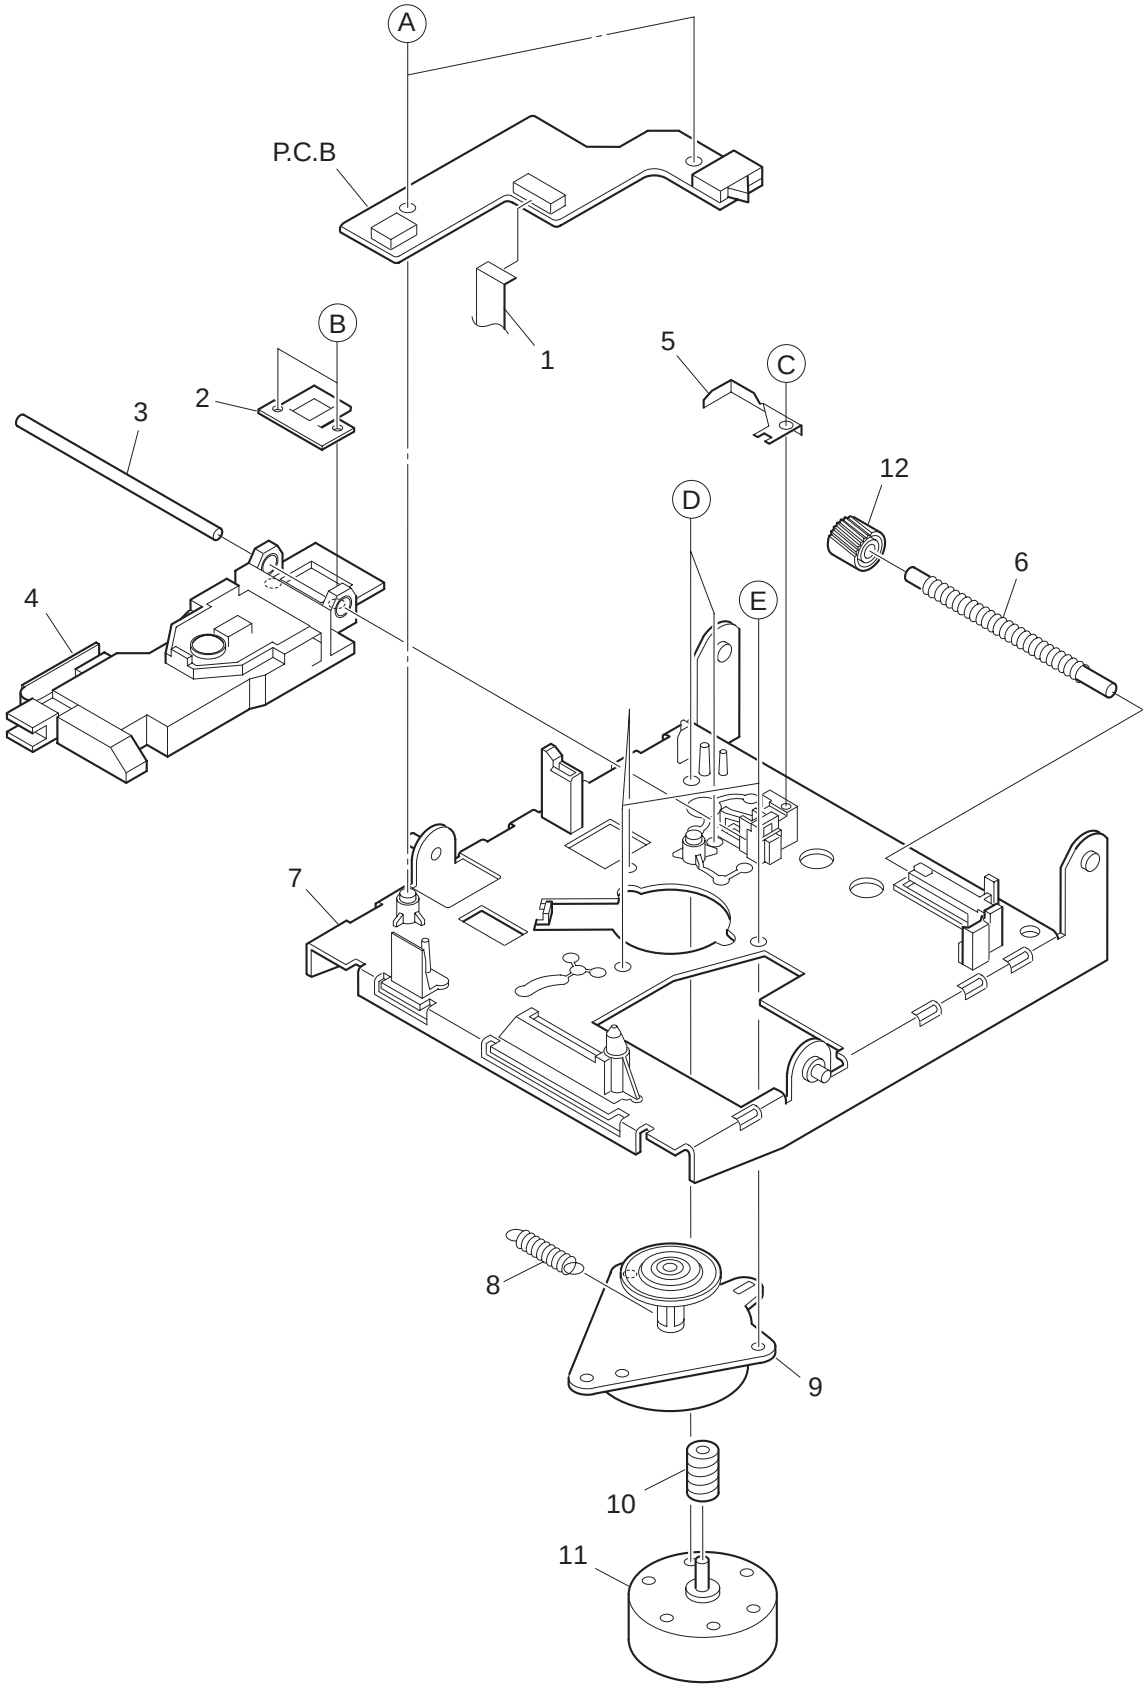

MECHANISM PARTS LIST 1/1 (ZZG-D)

DESCRIPTIONで判断できない物は "REFERENCE NAME LIST" を参照してください。
If can't understand for Description please kindly refer to "REFERENCE NAME LIST".

REF. NO	PART NO.	KANRI NO.	DESCRIPTION
1	87-ZG9-603-010		FF-CABLE, 8P 1.0 120MM
2	87-ZG3-216-010		SPR-P,RACK
3	87-ZG3-211-010		SHAFT,GUIDE
4	87-A91-444-010		PICKUP,KMS-260B
5	8Z-ZGD-207-010		SPR-P,LEAD
6	8Z-ZGD-208-010		SHAFT,LEAD
7	8Z-ZGD-201-010		CHAS ASSY,MECHA
8	8Z-ZGD-209-010		SPR-E,SPINDLE
9	87-A91-489-010		MOT,BCD3B93
10	8Z-ZGD-205-010		GEAR,MOT
11	87-A91-490-010		MOT,BCD3B04
12	8Z-ZGD-206-010		GEAR,LEAD
A	87-341-035-210		SCREW,UT1+2-6
B	87-067-393-010		SCREW +1.4-1.4
C	8Z-ZGD-211-010		S-SCREW,VBT+1.7-5
D	87-263-523-310		SCREW, V+1.7-2
E	8Z-ZGD-210-010		S-SCREW,+2-2.5

アイワ株式会社 〒110-8710 東京都台東区池之端1-2-11 ☎03(3827)3111 (代表)
AIWA CO.,LTD. 2–11, IKENOHATA 1–CHOME, TAITO-KU, TOKYO 110-8710, JAPAN TEL:03 (3827) 3111

0251431
Printed in Singapore